

# TRANSMITTER BATTERY LOOKUP

Use these charts to determine which type of battery is required for each model of Omega transmitters. All available replacement transmitters are covered in this guide.

Transmitter	Voltage	Qty. Required	Battery Type	Omega P/N
102-01	12V	1	23A	BAT23A
102-02	12V	1	23A	BAT23A
102-08	12V	1	23A	BAT23A
103-01	12V	1	23A	BAT23A
103-03	12V	1	23A	BAT23A
103-05	12V	1	23A	BAT23A
104-07	12V	1	23A	BAT23A
105-05	12V	1	23A	BAT23A
105-05G	12V	1	23A	BAT23A
105-06	12V	1	23A	BAT23A
106-07	12V	1	23A	BAT23A
106-14	12V	1	23A	BAT23A
107-06	12V	1	23A	BAT23A
107-07	12V	1	23A	BAT23A
109-01	12V	1	23A	BAT23A
109-02	12V	1	23A	BAT23A
109-03	12V	1	23A	BAT23A
110-09	12V	1	23A	BAT23A
111-03	12V	1	27A	BAT27A
112-09	12V	1	23A	BAT23A
114-07	12V	1	23A	BAT23A
114-09	12V	1	23A	BAT23A
116-01	12V	1	23A	BAT23A
116-02	12V	1	23A	BAT23A
116-08	12V	1	23A	BAT23A
119-05B	12V	1	23A	BAT23A
119-05R	12V	1	23A	BAT23A
121-01	12V	1	23A	BAT23A
121-02	12V	1	23A	BAT23A
121-05	12V	1	23A	BAT23A
121-08	12V	1	23A	BAT23A
122-03	12V	1	23A	BAT23A
124-13	12V	1	23A	BAT23A
124-33	12V	1	23A	BAT23A
128-09	12V	1	23A	BAT23A
1410-03	3V	1	CR2032	BAT-CR-2032
142-13	12V	1	23A	BAT23A
142-23	12V	1	23A	BAT23A
143-01	12V	1	23A	BAT23A
143-03	12V	1	23A	BAT23A
143-07	12V	1	23A	BAT23A
144-05	3V	1	CR2032	BAT-CR-2032
144-05G	3V	1	CR2032	BAT-CR-2032
145-07	12V	1	23A	BAT23A
146-01B	3V	1	CR2032	BAT-CR-2032

Transmitter	Voltage	Qty. Required	Battery Type	Omega P/N
146-01G	3V	1	CR2032	BAT-CR-2032
146-03B	3V	1	CR2032	BAT-CR-2032
146-03G	3V	1	CR2032	BAT-CR-2032
146-07B	3V	1	CR2032	BAT-CR-2032
146-07G	3V	1	CR2032	BAT-CR-2032
146-07S	3V	1	CR2032	BAT-CR-2032
146-17	3V	1	CR2032	BAT-CR-2032
146-17B	3V	1	CR2032	BAT-CR-2032
146-17G	3V	1	CR2032	BAT-CR-2032
147-03	3V	2	CR2016	BAT-CR-2016
147-03A	3V	2	CR2016	BAT-CR-2016
148-01	3V	2	CR2016	BAT-CR-2016
148-01B	3V	2	CR2016	BAT-CR-2016
148-03	3V	2	CR2016	BAT-CR-2016
148-03B	3V	2	CR2016	BAT-CR-2016
148-07	3V	2	CR2016	BAT-CR-2016
148-08	3V	2	CR2016	BAT CR 2016
149-05	3V	2	CR2016	BAT CR 2016
151-07	1.5V	1	AAA	BAT-AAA
152-03G	1.5V	1	AAA	BAT-AAA
152-07	1.5V	1	AAA	BAT-AAA
153-03	N/A	N/A	Rechargeable	N/A
153-07	N/A	N/A	Rechargeable	N/A
341-02C	1.5V	1	AAA	BAT-AAA
342-02B	12V	1	23A	BAT23A
342-02C	12V	1	23A	BAT23A
343-02	3V	1	CR2032	BAT-CR-2032
343-03	3V	1	CR2032	BAT-CR-2032
352-07B	12V	1	23A	BAT23A
352-07C	12V	1	23A	BAT23A
401-01	12V	1	23A	BAT23A
401-07	12V	1	23A	BAT23A
431-07	12V	1	23A	BAT23A
431-09	12V	1	23A	BAT23A
432-01	12V	1	23A	BAT23A
432-09	12V	1	23A	BAT23A
433-01B	12V	1	23A	BAT23A
433-01C	12V	1	23A	BAT23A
4410-05	3V	2	CR2016	BAT-CR-2016
4410-07	3V	2	CR2016	BAT-CR-2016
4410-07B	3V	2	CR2016	BAT-CR-2016
441-07	12V	1	23A	BAT23A
441-07B	12V	1	23A	BAT23A
4411-07	12V	1	23A	BAT23A
4412-01	3V	2	CR2016	BAT-CR-2016

See page 28 for more info on Omega batteries. For the most up-to-date information, visit [www.caralarm.com](http://www.caralarm.com).

Transmitter	Voltage	Qty. Required	Battery Type	Omega P/N
4412-05	3V	2	CR2016	BAT-CR-2016
4412-05B	3V	2	CR2016	BAT-CR-2016
4412-05BC	3V	2	CR2016	BAT-CR-2016
4412-09	3V	2	CR2016	BAT-CR-2016
4412-09B	3V	2	CR2016	BAT-CR-2016
4412-09BC	3V	2	CR2016	BAT-CR-2016
4413-01	3V	2	CR2016	BAT-CR-2016
4413-01F	3V	2	CR2016	BAT-CR-2016
4413-07	3V	2	CR2016	BAT-CR-2016
4413-07F	3V	2	CR2016	BAT-CR-2016
4415-01	3V	2	CR2016	BAT-CR-2016
4415-07	3V	2	CR2016	BAT-CR-2016
442-09B	12V	1	23A	BAT23A
442-09S	12V	1	23A	BAT23A
443-07	12V	1	23A	BAT23A
444-07	12V	1	23A	BAT23A
446-01B	12V	1	27A	BAT27A
447-01B	12V	1	27A	BAT27A
448-03	12V	1	27A	BAT27A
448-03CF	12V	1	27A	BAT27A
448-07	12V	1	27A	BAT27A
448-09	12V	1	27A	BAT27A
448-09CF	12V	1	27A	BAT27A
449-01	12V	1	27A	BAT27A
449-09CF	12V	1	27A	BAT27A
651-01	1.5V	1	AAA	BAT-AAA
651-05	1.5V	1	AAA	BAT-AAA
651-09	1.5V	1	AAA	BAT-AAA
731-03	N/A	N/A	Rechargeable	N/A
731-07	N/A	N/A	Rechargeable	N/A
AU-3T	12V	1	23A	BAT23A
AU-3TAL	12V	1	23A	BAT23A
AU-3TAL3	12V	1	23A	BAT23A
AU-3TBL	12V	1	23A	BAT23A
AU-3TCGL	12V	1	23A	BAT23A
AU-3TML	12V	1	23A	BAT23A



BAT-AAA



BAT-23A



BAT-27A



BAT-CR-2016



BAT-CR-2032