



2 Button / 1 Way Powersports Security System

QUICK START OPERATION GUIDE

Visit www.CarAlarm.com today

To Download other **product guides** and learn more about:

Additional Features

- Anti-Hijacking Mode
- Secure Code Override
- Customizing System Options
- Passive Security Functions
- Emergency Override

Problems? Questions? Contact Customer Service:

800-554-4053 (toll free) | +1-770-942-9876 (outside USA)



/omegard



/c/omegard



Scan to register & download the full operation guide at [CarAlarm.com!](http://CarAlarm.com)

Your System Model:

(Installer, write system model above)



2 Button / 1 Way Powersports Security System

QUICK START OPERATION GUIDE







REPLACING YOUR REMOTE BATTERY

STEPS	REMOTE PART#	BATTERY (QTY)
1) Find the part # on the back of the remote to identify the battery. 2) Remove the screw from the back of the remote. 3) Gently pry the case in halves apart to access & replace the battery.	521	CR2032 (1)

PRIMARY REMOTE FUNCTIONS

FUNCTION	BUTTON	NOTE
Arm		Security enabled systems will flash the status LED.
Disarm		Security system disabled. Status LED will be off.
Panic	for 3 Sec.	The siren will sound.
Disable Tilt Sensor While Armed	within 5 Sec.	Sensors are disabled until you Lock/Arm again.
Disable Tilt & Shock Sensors While Armed	within 5 Sec.	Sensors are disabled until you Lock/Arm again.
Aux Output	+	Aux output will activate any attached accessory

Register today at www.CarAlarm.com
to learn about your warranty & download product guides.

OTHER FUNCTIONS		
FUNCTION	ACTION	NOTE
Valet Mode ON/OFF	Ignition ON, OFF, ON,  ,  , 	Short chirp with each button press. The LED will turn on while in valet mode. The LED will turn off while Ignition is on and will automatically turn off after 96 hrs of no activity to save the vehicle battery.
Remote activated Anti-Hijacking	 for 3 seconds with Ignition ON	This will start the anti-hijacking routine. See programmable features in installation guide about configuring this feature on/off. The LED will flash quickly. The siren will chirp once every 3 seconds (5 times). Then the siren will chirp once every 1.5 seconds (8 times). After this the siren will sound, the parking lights will flash and the vehicle disable relay will activate. Emergency override must be performed to cancel anti-hijacking.

EMERGENCY OVERRIDE

- With the system triggered, turn the ignition key "ON" 5 times within 15 seconds (remain in the "ON" position).
 - The LED will flash once quickly then turn on for 2 seconds.
 - NOTE: If you have a custom pincode programmed, you must wait until the LED flashes equal to your pincode before performing step 2.
- Within 5 seconds of step 1, turn the ignition key "OFF" then "ON" again
 - The siren will chirp and the lights will flash 4 times indicating the system is disarmed.

POWER SAVING MODE

- DISARMED/VALET: After 96 hours in the disarmed state or valet mode, the system will enter a sleep mode to preserve vehicle battery life.
- ARMED: After 24 hrs in the armed state, the LED will flash once every 4 seconds. After 48 hrs, it will flash once every 8 seconds. After 96 hours, the LED will turn off and the system is in full power save mode.
- If any input circuit is activated while in sleep mode, the system will chirp the siren 10 times.

PROGRAMMING REMOTES

PROGRAMMING REMOTES TO THE SYSTEM (UP TO 4)

- BEFORE YOU BEGIN: Have all remotes for the system at hand.
- Disarm the system
 - Turn the ignition key "ON" 5 times in 15 seconds (leave the key "ON").
 - After 3 seconds, the horn will briefly sound
 - Press & release any button on each remote one after the other.
 - The siren will chirp for each remote learned (MAX: 4).
 - NOTE: When a 5th remote is learned the first remotes is erased and so on.
 - NOTE: All other button functions will automatically be assigned.
 - Turn the ignition key "OFF" to exit programming.
 - NOTE: The system will exit at any time after 30 seconds of no activity.

ALARM TRIGGER ZONE DIAGNOSTICS

LED FLASHES	VIOLATED ZONE
4	Tilt or shock sensor triggered
5	Instant trigger wire activated
6	Loop wire triggered
7	Ignition turned on while armed

If the system is disarmed after a trigger event, the status LED will flash to indicate which zone(s) was triggered.

Register today at www.CarAlarm.com
to learn about your warranty & download product guides.