

Table Of Contents

Owner's Guide

Arming the System	3
System Armed & Activated	4
Disarming the System	5
Hands Free Disarming	6
Immobilizer Mode	7
Emergency Override	7
Panic	8
Sensor By-Pass	8
Auxiliary Channel	9
3rd Channel	9
Remote Anti-Carjack	10
Vehicle Finder	10

Controller Features:

Power Save	11
Low Battery	11
Keypad Lock	12
Backlight	12
Mute/Vibrator	12
Vehicle Image Selection	12
Time Clock	12
Range	12

Misc. Operation:

Anti-Carjacking	14
LED Status Indicator	15
Valet Mode	16
Auxiliary Sensor & Prewarn	17

Installation Instructions

How To Program Remote Control	17
How To Program Features	18
Programmable Features	18 - 23
Wiring Diagram	24
Door Lock/Unlocking Systems	25

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions, (1) This device may not cause harmful interference and, (2) This device must accept any interference received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Remote Control Quick Reference Guide

 
Arming: Press & Release the "Arm/Lock" button



ARM



THE SIREN WILL
CHIRP ONCE




THE PARKING LIGHTS
WILL FLASH ONCE

THE DOORS WILL LOCK
(IF CONNECTED)

Silent Arming:

Press & Release the "Arm/Lock" button Twice within 1/2 a second

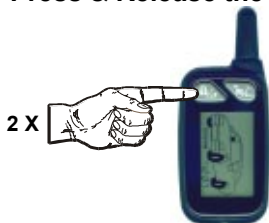

ARM



THE PARKING LIGHTS
WILL FLASH ONCE



THE DOORS WILL LOCK
(IF CONNECTED)

Disarming: Press & Release the “Disarm/Unlock” button.



DISARM

THE SIREN WILL
CHIRP TWICE

THE PARKING LIGHTS
WILL FLASH TWICE



THE DOORS WILL UNLOCK
(IF CONNECTED)



Silent Disarming:

Press & Release the “Disarm/Unlock” button Twice within 1/2 a sec.



2 X

DISARM




THE PARKING LIGHTS
WILL FLASH TWICE

THE DOORS WILL UNLOCK
(IF CONNECTED)




Panic: Press & Hold the “Arm/Lock” Button, for 2 seconds, with the ignition “Off”.

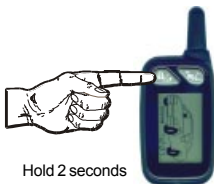

Hold 2 seconds

 THE SIREN WILL SOUND



THE PARKING LIGHTS
WILL FLASH

Auxiliary Channel: Press & Hold “Button-3” for Two seconds.



Hold 2 seconds



 
Operate Remote Start Unit

Operate Window
Roll-Up Unit

Open Electric Trunk



Emergency Override:



THEN WITHIN
10 SECONDS

Arming the Alarm

The alarm may be "Armed" by any of 3 methods:


1) Remote Control Arming: Press & Release the "Arm/Lock" button



Upon Arming with the Controller:

- The controller will chirp once (3-5 "chirps" if a zone is bypassed)
- The "ARM" icon will appear on the LCD screen.
- The "Lock" icon appears, confirming that doors have locked.

2) SILENT Remote Control Arming: Press & Release the "Arm/Lock" button Twice within 1/2 a second

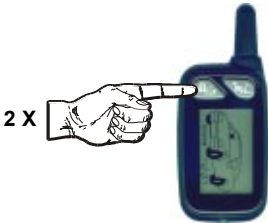

- Upon Arming:**
- The siren will chirp one time. (3-5 times if there is open zone)
 - The parking lights will flash once.
 - The doors will lock. (If an optional interface is connected)
 - The starter interrupt will engage.
 - The LED Status Indicator will begin to flash slowly.

OPEN ZONE BYPASS: If a zone is open, (for example a car door), when arming, the alarm will still arm, but will bypass the open zone until the zone is secured. The unit will confirm which zone is open with chirps.

- 3 Siren chirps is a door zone is open,
- 4 Siren chirps if the vehicle's "Hood" zone is open,
- 5 siren chirps if the vehicle's "Trunk" zone is open.

3) To Passively Arm: Turn ignition “Off”, Then close all doors.

Automatic “Last Door Arming” is a programmable feature which allows the alarm to arm itself and, if desired, lock the doors upon arming.

If on, anytime the ignition is turned off, and then a door is opened and closed:

- The Siren will chirp once to confirm arming countdown has begun.
- The LED Status Indicator will begin to flash rapidly.

Thirty seconds later:

- The siren will chirp & the lights will flash once.
- The LED Status Indicator will begin to flash slowly.
- The starter interrupt will engage.

- The alarm is now fully armed. The doors will lock at this time, if programmed to do so, and if the vehicle is equipped.

- The alarm can not Last Door Arm if a protected zone is open. Should a vehicle door be opened during the arming countdown, the countdown will stop and start over again when the door is closed.

AUTO REARM (programmable): Allows the Alarm to Rearm itself, 90 seconds after it is Disarmed and a vehicle door is not opened.

System Armed & Activated

Regardless of method used to Arm the alarm, once Armed, the alarm will monitor all protected zones, and if an intrusion attempt is detected it will activate, or “trigger”.

A trigger consists of the following:

- The electronic siren, or optionally the vehicle’s horn, will start sounding.
- The exterior parking lights will flash on and off repeatedly.


An activation has a 30/60 second duration unless the alarm is disarmed using the controller or the Valet/Override switch. If all protected zones are secure at the end of the trigger, the system will stop and rearm itself to detect further entry attempts. If a protected zone is still open at the end of the trigger cycle, the alarm will continue to re-trigger itself for up to six activated cycles before it resets itself and ignores the violated zone.

Disarming the Alarm

The alarm may be "Disarmed" by any of 3 methods:

1) Remote Control Disarming:

Press & Release the "Disarm/Unlock" button.

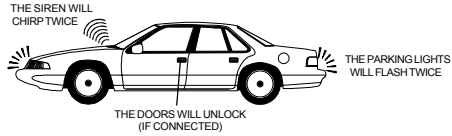

Upon Disarming with the Controller:

- The controller will chirp twice (4 chirps if the system was activated).
- The "DISARM" icon will appear on the LCD screen.
- The "Unlocked" icon appears, confirming that doors have unlocked.

2) SILENT Remote Control Disarming:

Press & Release the "Disarm/Unlock" button Twice within 1/2 a sec.



- Upon Disarm:**
- The siren will chirp twice. (4 chirps if alarm has activated & reset)
 - The parking lights will flash twice. (4X if alarm has activated)
 - The doors will unlock. (If an optional interface is connected)
 - The starter interrupt will disengage.
 - The LED Status Indicator begins flashing rapidly for Automatic Rearming, until alarm Rearms or a vehicle door is opened.

2-STAGE DISARM: If Disarming the alarm while it is triggered (siren sounding), the first press of any remote control button will only silence the siren/horn. A second press of the "Unlock" button will Disarm the alarm.

3) **“Hands-Free” Disarming:** This programmable feature allows the controller to automatically “Disarm” the unit whenever the controller comes into close proximity to the vehicle.

To Operate “Hands-Free” disarm:

- This feature **must be programmed “On”** at the alarm unit.
- The “Auto Transmit” feature must be enabled at the controller.

The “AUTO” icon means that the “Hands-Free” feature is turned “On” at the controller.

Enabling the “Hands Free”:

Press the “Arm/Lock” button & “Button-5” at the same time.



- The Controller will emit one beep
- The “AUTO” icon will begin to flash, then stays on, once the alarm replies to the controller.
- The “ON” icon will appear until the alarm replies to the controller.

Disabling the “Hands Free”:

Press the “Disarm/Unlock” button & “Button-5” at the same time.



- The Controller will emit 3 beeps
- The “AUTO” icon will begin to flash, then turns off, once the alarm replies to the controller.
- The “OFF” icon will appear until the alarm replies to the controller.

Controller Activation Alert: If the alarm is disarmed, after it was triggered, using the controller, the controller will display the zone that last triggered it.

The controller displays the “Trigger Zone” til the vehicle’s ignition is turned “On”.



Prewarn



Sensor

 


Immobilizer Mode

If this mode is programmed "On", the starter interrupt will remain engaged after the alarm is Disarmed, until the ignition is turned "On" and you enter your "Pin-Code" (1-12) using the Valet button. (Refer to programmable features)

To Start Vehicle:

1. Disarm the alarm,
2. Turn "On" the vehicle's ignition
3. Enter your "Pin-Code" by Pressing & Releasing the Valet Button a number of time equal to your "Pin-Code". (Pin-Code can be 1-12)
4. The siren will chirp twice to confirm that you may now start the vehicle.



Emergency Override

- Step 1: With the alarm in the armed condition, enter the vehicle via the driver's door (be aware that the alarm will trigger when the door is opened).
- Step 2: Using your key, turn the vehicle's ignition to the "On" position.
- Step 3: Within 20 seconds, enter your PIN code (1-12) by Pressing the Valet/Override Switch.



For Example: If your "Pin-Code" is 8, press valet switch 8 times. The triggered alarm will disarm one second after code is entered.

IMPORTANT NOTE: If wrong code is entered, you must turn ignition "Off", then "ON" again, to enter the Pin-Code again.

Remote Panic Operation

Should it be needed in a threatening situation, or you feel the need to attract attention, the alarm can be triggered using the remote control. Your alarm features "Panic Mode", which allows you to activate "Panic" from the "Arm/Lock" button.


To Activate Remote Panic: Press & Hold the "Arm/Lock" Button, for 2 seconds, with the ignition "Off".



Sensor By-pass

The shock sensor & Prewarn zone can be bypassed using the remote control. This may be useful in stormy weather.

- 1) Arm the alarm by, Pressing & Releasing the "Arm/Lock" button.
- 2) Press & Release "Button-3" twice within a 1/2 second.

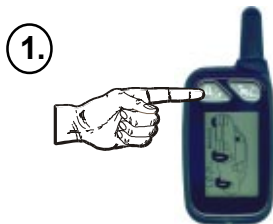

Then




- The siren will chirp once to confirm sensor has been by-passed.
- Upon Disarming the alarm, the sensor zone will reset.

The Auxiliary Channel

The Auxiliary Channel may be used to operate an optional function. Possibilities include remote trunk release, remote car starting, or an on-demand remote window roll-up interface. Please see your Omega dealer for details on available options.

To Activate the Auxiliary Channel:

Press & Hold "Button-3" for Two seconds.

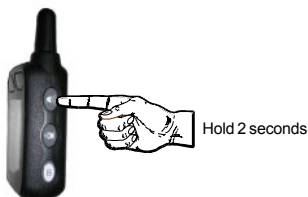

NOTE: Depending on programing, activating the Auxiliary output will:



- Disarm the alarm upon activating the Auxiliary channel.
- Keep the alarm "Armed", but bypass the trunk & sensor zones, until the vehicle's trunk is closed again.
- The Auxiliary Channel cannot be activated if the vehicle's ignition is "On".

The 3rd Channel Auxiliary Output

The programmable 3rd Channel may be used to operate an optional function, such as a remote start unit or an on-demand remote window roll-up interface. Please see your Omega dealer for details on available options.

To Activate the 3rd Channel:

Press & Hold "Button-4" for Two seconds.

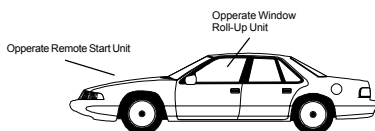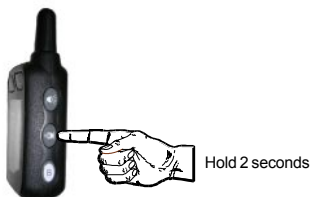

- The 3rd Channel can be programmed for "Remote Start" mode. This mode is for use in conjunction with an optional "Starter" unit. It allows the vehicle to be "remote started" without triggering the unit, while still protecting the perimeter.
- The 3rd Channel can also be programmed to Supply a (-) output when the unit is Armed to operate a Window Roll-Up module.
- The Auxiliary Channel cannot be activated if the vehicle's ignition is "On".

 
Remote Anti-Carjack

The Anti-Carjacking mode can be activated using the controller.

- Refer to “Anti-Carjacking” section of this manual for details.

To Activate Remote Anti-Carjack:

Press & Hold “Button-4”, For Two seconds, With the ignition “On”.



Hold 2 seconds

Vehicle Finder

The “Vehicle Finder” feature allows the user to try to locate a “lost” vehicle in a parking lot.

To Activate Remote Vehicle Finder:

Press & Release “Button-4”, With the ignition “Off”.



Hold 2 seconds

- The siren will emit a long chirp.
- The vehicle’s parking lights will flash 8 times.

NOTE: If the alarm was “Silently Armed”, the Vehicle Finder feature will only flash the parking lights, there will be no siren chirp.

Controller Power Save:

Turning “On” Power Save:

Press & Release “Button-5” & “Button-3” at the same time.

- The controller will “beep” once.
- The “On” icon will flash.



NOTE: In the Power Save mode, the controller will “Go to Sleep” 2 minutes after it is used to disarm the alarm, to conserve battery life.

- The controller will emit 3 low beeps.
- All icons will turn Off, only the “Off” icon will remain.
- Once the controller “Goes to Sleep”, it can’t monitor the alarm’s functions, unless you press a button on the controller to temporarily “wake it up”.
- The power Save mode can not operate if the alarm is set for “Hands-Free” operation.

Turning “Off” Power Save:

Press & Release “Button-5” & “Button-4” at the same time.

- The controller will “beep” once.
- The “Off” icon will flash.



Controller Low Battery Indicator:

When the battery level is low, the controller will emit 3 low chirps and the “BATT LOW” icon will appear. Please install a new battery at this time.

To change the battery:

- 1) Slide off the battery cover.
- 2) Replace Battery. (“AAA” Alkaline battery is recommended)
- 3) Replace batter cover.



- The controller will beep once when the new battery is inserted.
- If there is no “beep”, remove the new battery, wait 5 seconds, then reinstall it.

Keypad Lock:

To avoid accidental pressing of the Controller's buttons, the buttons can be "Locked".

Enable Keypad Lock:

Press "Button-3" & the "Arm/Lock" button at the same time.

- The controller will emit one beep, and the KEY LOCK icon will appear.



Disable Keypad Lock:

Press "Button-3" & the "Disarm/Unlock" button at the same time.

- The controller will emit one long beep & the KEY LOCK icon will disappear.



Controller Backlight:

To Turn on the Controller Backlight:

Press "Button-5"

- The backlight will turn on for 3 seconds.

Controller Mute (Vibrator):

To Enable the Mute function:

Press "Button-4" & the "Arm/Lock" button at the same time.

- The Controller will vibrate 3 times & the MUTE icon will appear.



To Disable the Mute function

Press "Button-4" & the "Disarm/Unlock" button at the same time.

- The Controller will emit 1 beep & the MUTE icon will disappear.

Vehicle Image Selection:

The controller allows you to select which type of vehicle is displayed on the LCD screen. This can be done either when powering up the controller or using the selection routine.



To Enter Selection mode:

- 1) Power up the controller by replacing the battery, or
- 2) Press & Hold "Button-5" on the controller until the controller emits a long beep followed by a short beep.

3) Once in selection mode:

- Press the "Arm/lock" button to select a "Car", the controller beeps once.
- Press the "Disarm/Unlock" button to select an "SUV", the controller beeps twice.
- Press "Button-3" to select a "Pick-Up", the controller beeps three times.

To Exit the selection mode:

 
Press "Button-5" again, or wait for 5 seconds for the controller to exit selection mode.

Time Clock:

How to set the clock:

Press & Hold "Button-5" on the controller until the controller emits a long beep, followed by a short beep, followed by two short beeps.

- The "Time" icon will start blinking.
- Use "Button-3" to select hour or minute.
- Use "Button-1" to increase the hours or minutes.
- Use "Button-2" to decrease the hours or minutes.



To exit time clock mode, press "Button-5" or wait 8 seconds.

Range:

The "Transmitting Tower" icon will be present if the alarm responded to the last command from the controller. If there is no reply from the alarm, the icon will turn off.



Programmable Anti-Carjacking Protection

The Anti-Carjacking sequence may be activated by any of 4 methods:

- 1) Using the controller, by holding down “Button-4” for 2 seconds while the ignition is “On”. (*Programmable feature*)
- 2) When a door is Opened while the ignition is “On” (*programmable feature*)
- 3) Every time the ignition is turned “On”. (*Programmable feature*)

1) Anti-Carjacking activated using the controller: (*Programmable feature*)

The Anti Car-Jacking operation may be activated by pressing and holding “Button-4” on the controller for 2 seconds while the ignition is “On”.

2) Anti-Carjacking activated by an Open door: (*Programmable feature*)

If this programmable feature is “On”, the system will initiate the Anti-Carjacking sequence every time a vehicle door is opened while the ignition is “On”.

3) Anti-Carjacking activated by the Ignition: (*Programmable feature*)

If this programmable feature is “On”, the system will initiate the Anti-Carjacking sequence every time the vehicle’s ignition is turned “On”.

IMMOBILIZER MODE: If the “Immobilizer mode” is programmed “On”, the ignition activated anti-carjacking sequence will be cancelled and the “Immobilizer mode” disarmed by: *first turning “On” the vehicle’s ignition, then enter your “Pin-Code” (1-12) using the valet button.* (*Refer to programmable features*)

4) “Hands-Free” Anti-Carjacking: (*Programmable feature*)

This feature adds a “Layer” of additional security and convenience to both the “Open door” and “Ignition” activated Anti-Carjacking sequences.

If this programmable feature is “On”, the alarm will start to search for the controller every time the system’s “Open door” or “Ignition” activated Anti-Carjacking sequences are initiated. The alarm is looking for a confirmation from your controller that you are still in or near the vehicle.

- If the alarm does not receive a “confirmation” from your controller within 20 seconds, the alarm will initiate the Anti-Carjacking sequence.
- If the controller’s signal is found before full Anti-Carjacking Trigger, the countdown is stopped. The alarm will continue to search for 5 minutes.

IMPORTANT NOTE (Please Read):

For this Anti-Carjacking system to be effective, the driver **MUST** keep the controller hidden on their body, **NOT** hanging with the keys at the ignition. This way, in the unfortunate event that you are carjacked, simply follow these steps:

- Surrender the vehicle to the attacker while keeping your controller.
- When the attacker drives away with your vehicle, the communication link between the controller, which you still have, is broken with the vehicle. Once this link is broken, the Anti-Carjacking sequence will initiate.

Once the Anti-Carjacking sequence has begun, the user has 59 seconds to press the Valet/Override Switch in order to cancel the sequence.

ORDER OF ANTI-CARJACKING SEQUENCE:

- For first 20 seconds after the sequence has begun there are no signs.
- From 21-30 seconds, the LED will blink slowly.
- From 31-45 seconds, the LED will blink fast and the siren/horn will chirp once every 2 seconds.
- From 46-60 seconds, the LED will blink fast and the siren/horn will chirp once per second.
- If not cancelled yet, at 61 seconds the alarm will trigger.



In the triggered condition:

- The siren/horn will sound & The parking lights will flash.
- The starter interrupt will engage.

NOTE: Once the Anti-Carjack mode is triggered, the controller will NOT stop the operation, nor will the system reset automatically. **Once it is triggered, the Anti-Carjacking operation can only be deactivated by:**

- 1) Turning the vehicle's ignition "Off".
- 2) Turning the vehicle's ignition back "On".
- 3) Within 20 seconds, enter your "Pin-Code" (1-12) using the Valet button.

The LED Status Indicator

The Red LED Status Indicator visually shows the status of the alarm and also provides a high level of visual deterrence. The Red LED Status Indicator Light is normally mounted where it can be seen by the driver, as well as from outside.

Security System Status: The primary function of the Red LED Status Indicator Light is to indicate the normal operating status of the security system:

Off = The system is disarmed and not performing any automatic functions.

On Constant = The system is in the Valet Mode.

Flashing Slow = The system is fully Armed.

Flashing Fast (while Disarmed) = Last Door Arming or Automatic Rearming.

Zone Violation: Once alarm is Disarmed, LED will show which zone triggered alarm until the ignition is turned "On" (this clears unit's memory).

1 flash & pause = Hood-Switch zone triggered alarm.

2 flashes & pause = Pin-Switch zone triggered alarm.

3 flashes & pause = Door zone triggered alarm.

4 flashes & pause = Sensor zone triggered alarm.

5 flashes & pause = Vehicle's Ignition zone triggered alarm.

Automatic Transmitter Verification: For the first 10 seconds after the vehicle's ignition is turned "On", the LED Status Indicator will flash a number of times equal to the number of controllers which are programmed to operate the alarm.

Valet Mode

Valet Mode can only be entered into while the alarm is Disarmed.

Valet Mode turns off all of the alarm's security features, (including Anti-Carjack). Valet Mode is designed for situations in which it is not convenient for the security portion of the alarm to be operational; for example during extended stopovers for vehicle servicing, loaning others your vehicle, maintenance, valet parking, washing, etc. The convenience features such as keyless entry will still operate.

To Enter Valet Mode (Alarm MUST be Disarmed):

Press & Hold the Valet Switch for 3 Seconds.

- The LED Status Indicator will light solid Red and the siren will emit a long chirp to confirm entry into "Valet" Mode. Now the alarm cannot become Armed.
- The vehicle's ignition may be "On" or "Off" when entering Valet Mode.
- *To remind you its in Valet Mode , The siren will chirp every time the vehicle's ignition is turned "Off"*

Controller Valet Entry Confirmation:

- The Controller will lay a tone to confirm entry into "Valet" Mode.
- The status icons on the LCD display will be replaced with

The image shows a rectangular box with the word "VALET" in a stylized, outlined font.

To Exit Valet Mode: Simply Press & Release the Valet Switch.

- The LED will turn off and the siren will emit a long chirp to confirm that the alarm has exited Valet Mode. Normal arming operations may be resumed.
- The vehicle's ignition may be "On" or "Off" when exiting Valet Mode.

Controller Valet Exit Confirmation:

- The Controller will lay a tone to confirm exit from "Valet" Mode.
- The "VALET" status icon on the LCD display will be replaced with

The image shows a rectangular box with the word "DISARM" in a bold, outlined font.

Auxiliary Sensor & Prewarning

Auxiliary Sensor: This security system is equipped with a plug-in port for an optional sensor to increase the effectiveness of the system. The comprehensive line of optional sensors offered is comprised of impact sensors, glass tampering sensors, and microwave/radar sensors which can detect motion inside and outside the vehicle.

Prewarning Detection: This circuit requires connection to a dual zone sensor or detection device. When the sensor's prewarn zone is triggered the siren will emit a series of chirps.

How to Program Controllers to the Alarm

To program remote controls to operate the alarm:

Step 1: With the alarm "Disarmed", Turn "On" the vehicle's ignition.

Step 2: Within 7 seconds press the Valet/Override Switch 5 times. The alarm will wail the siren once to confirm entry into Remote Control Programming Mode.

Step 3: Within 10 seconds, press any Button on each remote to be programmed. The siren will chirp to confirm each time a remote has been programmed.

If 10 seconds expire without any programming activity, or if the vehicle's ignition is turned "Off", the alarm will automatically exit Remote Control Programming Mode. The siren will emit 2 long chirps to confirm exit.

NOTE: Up to 4 controllers can be programmed to operate the alarm. Whenever a remote control, new or existing, is programmed to the alarm, all existing codes are erased for security. So all remote controls which are to operate the alarm, must be programmed in at the same time.

Immobilizer Mode: The Immobilizer mode must be disarmed before entering "controller programming" mode. *(Refer to programmable features)*

1. Turn "On" the vehicle's ignition
2. Enter your "Pin-Code" (1-12) using the Valet/Override button.
 - The siren will chirp twice to confirm Immobilizer mode is disarmed.
3. Press Valet/override button 5 times to enter remote control programming mode.

ATV: The LED Status Indicator will show the number of controllers programmed to operate the alarm, for 10 seconds after the vehicle's ignition is turned On.

As the instructions above show, programming extra controllers to any vehicle security system is easy; the exclusive patented ATV feature protects against someone programming their own controller to operate your system.

How to Program Features

To access Features Programming Mode:

Step 1: Turn the vehicle's ignition "On" then "Off".

Step 2: Within 7 seconds of turning the ignition "Off", press the Valet Switch 5 times. The siren will wail once confirming entry to Features Programming Mode.

Step 3: Within 10 seconds of entering Features Programming Mode, press the Valet Switch the number of times equal to the number of the feature to be programmed. The siren will repeat the feature number with chirps to confirm.

Step 4: After the system acknowledges the feature to be programmed:

- press the "Lock" button on the remote to turn the feature "ON" (the siren will chirp once), or,
- press the "Unlock" Button to turn feature "OFF" (siren will chirp twice).

Note: Once the feature to be programmed is selected, you can toggle the feature between its settings by pressing the "Lock" & "Unlock" buttons on the remote control.

- To program more features, simply repeat Steps 3 and 4.
- If 10 seconds expire without any programming activity, or if the vehicle's ignition is turned "On", the alarm will automatically exit Features Programming Mode. The siren will confirm exit.

Programmable Features

The alarm has 23 programmable features which allow it to be customized to suite many individual needs. The following pages provide a brief explanation for each feature, and notes its factory default setting.

• = Default Factory Setting

1. Pin-Code: (1-12, • Default code is 1)

- This feature allows the user to program a "Pin-code" between 1-12 presses of the Valet/override button for use in Emergency override situations.

A. Enter the Features programming mode and select feature #1.

B. Within 10 seconds, slowly press and release the controller's "Arm/Lock" button a number of times equal to the desired "Pin-code", up to 12.

- The siren will chirp every time the controller's "Arm/Lock" is pressed to confirm that its entry was registered, wait for the chirp before pressing the "Arm/Lock" button again.

C. 4 seconds after the last press of the controller's "Arm/Lock", the siren will chirp the new "Pin-code" to confirm the number that has been entered.

- The user can program another feature by pressing the Valet button to select next feature to be programmed (step 3).

2. Last Door Arming: (On = 1 siren chirp / •Off =2 chirps)

- Configures the alarm to automatically arm itself 30 seconds after the last door is closed with the ignition "Off".

Arm/Lock Button (1 Siren Chirp) = Last Door Arming "On"

• Disarm/Unlock Button (2 Siren Chirps) = Last Door Arming "Off"

3. Doors Lock w/ Last Door Arming: (•On = 1 siren chirp /Off = 2 chirps)

- Adds the automatic locking of the vehicle's doors to the previous feature.

• Arm/Lock Button (1 Siren Chirp) = Doors Lock "On"

Disarm/Unlock Button (2 Siren Chirps) = Doors Lock "Off"

4. Auto-Rearm: (On = 1 siren chirp / •Off = 2 chirps)

- Allows the Alarm to Rearm itself, if it is Disarmed and a vehicle door is not opened.

Arm/Lock Button (1 Siren Chirp) = Auto-Rearm "On"

• Disarm/Unlock Button (2 Siren Chirps) = Auto-Rearm "Off"

5. Doors Lock w/ Auto-Rearm: (•On = 1 siren chirp /Off = 2 chirps)

- Adds the automatic locking of the vehicle's doors to the previous feature.

• Arm/Lock Button (1 Siren Chirp) = Doors Lock "On"

Disarm/Unlock Button (2 Siren Chirps) = Doors Lock "Off"

6. Siren & Horn or Horn: (•Siren & Horn = 1 siren chirp / Horn = 2 chirps)

- This feature configures the alarm's Brown/White Horn-Honk output wire. This wire can be configured to honk the horn in addition to the Brown wire operating the siren, **or take over all of the Siren's functions SO THAT NO SIREN IS NECESSARY.**

- **If Siren & Horn are selected:** The horn will honk in addition to siren sounding only when the door, pin-switch, or ignition zones are violated. (The horn will not honk if alarm is triggered by the sensor zone, or during confirmation "chirps")

- **If Only Horn is selected:** The car horn will replace the siren and perform all of its functions. **NOTE:** Brown Siren wire will still be fully active & operational.

• Arm/Lock Button (1 Siren Chirp) = Siren & Horn

Disarm/Unlock Button (2 Siren Chirps) = Horn Only

7. Ignition Door Lock: (•On = 1 siren chirp / Off = 2 chirps)

- Configures the alarm to Lock the doors when the ignition is turned "On"

• Arm/Lock Button (1 Siren Chirp) = Ignition Door Lock "On"

Disarm/Unlock Button (2 Siren Chirps) = Ignition Door Lock "Off"

8. Ignition Door Unlock: (•On = 1 siren chirp / Off = 2 chirps)

- Configures the alarm to Unlock the doors when the ignition is turned "Off".

• Arm/Lock Button (1 Siren Chirp) = Ignition Door Unlock "On"

Disarm/Unlock Button (2 Siren Chirps) = Ignition Door Unlock "Off"

9. System Trigger Cycle: (•30s = 1 siren chirp / 60s = 2 chirps)

- Configures the alarm trigger duration to be 30 or 60 seconds.

• Arm/Lock Button (1 Siren Chirp) = 30 Seconds

Disarm/Unlock Button (2 Siren Chirps) = 60 Seconds

10. Double Pulse Unlock: (2 pulses = 1 siren chirp / • 1 pulse = 2 chirps)

- Sets alarm to give 2 unlock pulses upon Disarm for cars that require it.

Arm/Lock Button (1 Siren Chirp) = 2 Unlock Pulses

• Disarm/Unlock Button (2 Siren Chirps) = 1 Unlock Pulse

11. Immobilizer Mode: (On = 1 siren chirp / •Off = 2 chirps)

- If this mode is programmed "On", the starter interrupt will remain engaged after the alarm is Disarmed, until the vehicle's ignition is turned "On" and you enter your "Pin-Code" using the Valet button.

- If an incorrect "Pin-Code" is entered, the vehicle's ignition must be turned "Off", and then back "On" again, in order to re-input the "Pin-Code".

- **Anti-Carjack:** Upon disarming the "Immobilizer mode", *ignition activated anti-carjacking* will be automatically cancelled, (if programmed "On").

- **Remote Control Programming Mode:** Immobilizer mode must be disarmed before entering remote control programming mode.

Arm/Lock Button (1 Siren Chirp) = Immobilizer Mode "On"

• Disarm/Unlock Button (2 Siren Chirps) = Immobilizer Mode "Off"

12. Shock Sensor False-Alarm Bypass: (On = 1 siren chirp / •Off = 2 chirps)

- This feature will temporarily turn "Off" the shock sensor & pre-warn zone if:

- a. The pre-warn is triggered 10 times while the alarm is Armed.
- b. The instant trigger zone is triggered 5 times while the alarm is Armed.

- The by-passed zones will be reinstated the next time the alarm is Armed.

Arm/Lock Button (1 Siren Chirp) = Sensor Bypass "On"

• Disarm/Unlock Button (2 Siren Chirps) = Sensor Bypass "Off"

13. Dome-Light Delay Bypass: (On = 1 siren chirp / •Off = 2 chirps)

- This feature will turn "Off" the 3-chirp open zone warning when Arming the alarm with the remote control. This is for use in vehicles that keep the dome-light illuminated after the doors have been closed.

Arm/Lock Button (1 Siren Chirp) = Dome-Light Bypass "On"

• Disarm/Unlock Button (2 Siren Chirps) = Dome-Light Bypass "Off"

14. Auxiliary Channel Output: (• 1.5 Sec = 1 siren chirp / 30 Sec = 2 chirps)

- Configures the alarm's "Grey" wire to operate the:

a. Trunk Release: Supply a 1.5 second (-) output when the "Button-3" on the controller is held for 2 seconds, with the vehicle's ignition "Off".

b. Window Roll-Up or accessory: Supply a (-) output for 30 seconds when "Button-3" on the controller is held for 2 seconds, to operate a Window Roll-Up module or other accessory.

• Arm/Lock Button (1 Siren Chirp) = Trunk Release 1.5 Second Pulse

Disarm/Unlock Button (2 Siren Chirps) = 30 Second Output

15. Auxiliary Function: (• Disarm = 1 siren chirp / Maintain Status = 2 chirps)

- This feature adds an addition option to feature #14, it configures the alarm to either Disarm when the Auxiliary channel is activated, or maintain its current status.

NOTE: Feature #14 must be programmed to "Trunk Release 1.5 Second Pulse" for this feature to work.

• Arm/Lock Button (1 Siren Chirp) = Aux Disarms Alarm

Disarm/Unlock Button (2 Siren Chirps) = Alarm Maintains Status

16. 3rd Channel Output: (this feature has 3 possible settings)

1) Up to a 30 second latched output when ignition is “Off” = 1 siren chirp

Supply a latched (-) output, for up to 30 seconds, when “Button-4” on the controller is pressed & held for 2 seconds, while the vehicle’s ignition is “Off”.

-A second press of “Button-4” will turn “Off” the output.

2) 30 second output when alarm is Armed = 2 siren chirps

Supply a (-) output for 30 seconds when the alarm is Armed to operate a Window Roll-Up module or other accessory.

•3) “Remote Start” mode = 3 siren chirps

- The 3rd Channel can be programmed for “Remote Start” mode. This mode is for use in conjunction with an optional “Starter” unit. It allows the vehicle to be “remote started” without triggering the unit, while still protecting the perimeter. When activated, the alarm will bypass the sensor & ignition zones, monitoring the door zone.

Arm/Lock Button (1 Siren Chirp) = 30 Second Latched output

Disarm/Unlock Button (2 Siren Chirps) = 30 Second Output When Armed

• “Button-3” (3 Siren Chirps) = Remote Start Mode

17. Controller Activated Anti-Carjacking: (On = 1 chirp / •Off = 2 chirps)

- This feature turns the alarm’s Controller activated Anti-Carjacking feature “On” or “Off”.

Arm/Lock Button (1 Siren Chirp) = Controller Anti-Carjacking “On”

• Disarm/Unlock Button (2 Siren Chirps) = Controller Anti-Carjacking “Off”

18. Open Door Activated Anti-Carjacking: (On = 1 chirp / •Off = 2 chirps)

- This feature turns the alarm’s Open Door activated Anti-Carjacking feature “On” or “Off”.

Arm/Lock Button (1 Siren Chirp) = Door Anti-Carjacking “On”

• Disarm/Unlock Button (2 Siren Chirps) = Door Anti-Carjacking “Off”

19. Ignition Activated Anti-Carjacking: (On = 1 siren chirp / •Off = 2 chirps)

- This feature turns the alarm’s Ignition Anti-Carjacking feature “On” or “Off”.

Arm/Lock Button (1 Siren Chirp) = Ignition Anti-Carjacking “On”

• Disarm/Unlock Button (2 Siren Chirps) = Ignition Anti-Carjacking “Off”

20. "Hands-Free" Activated Anti-Carjacking: (On = 1 siren chirp / •Off = 2 chirps)

- This feature turns the alarm's "Hands-Free" Anti-Carjacking feature "On" or "Off".
- This feature adds a "Layer" of additional security and convenience to both the "Open door" and "Ignition" activated Anti-Carjacking sequences.

Arm/Lock Button (1 Siren Chirp) = "Hands-Free" Anti-Carjacking "On"
• Disarm/Unlock Button (2 Siren Chirps) = "Hands-Free" Carjacking "Off"

21. "Hands-Free" Activated Disarming: (On = 1 siren chirp / •Off = 2 chirps)

This feature allows the controller to automatically "Disarm" the unit whenever the controller comes into close proximity to the vehicle.

Arm/Lock Button (1 Siren Chirp) = "Hands-Free" Disarming "On"
• Disarm/Unlock Button (2 Siren Chirps) = "Hands-Free" Disarming "Off"

22. Lock Pulse Time: (4 seconds = 1 siren chirp / • 0.8 seconds = 2 chirps)


- Determines the length of the alarm's door lock/unlock pulse output.

Arm/Lock Button (1 Siren Chirp) = 4 Second Lock Pulse
• Disarm/Unlock Button (2 Siren Chirps) = 0.8 Second Lock Pulse

23. Factory Settings Reset


- Returns all of the alarm's Programmable features to factory default settings.

Arm/Lock Button (1 Siren Chirp) = Resets Alarm To Factory Settings

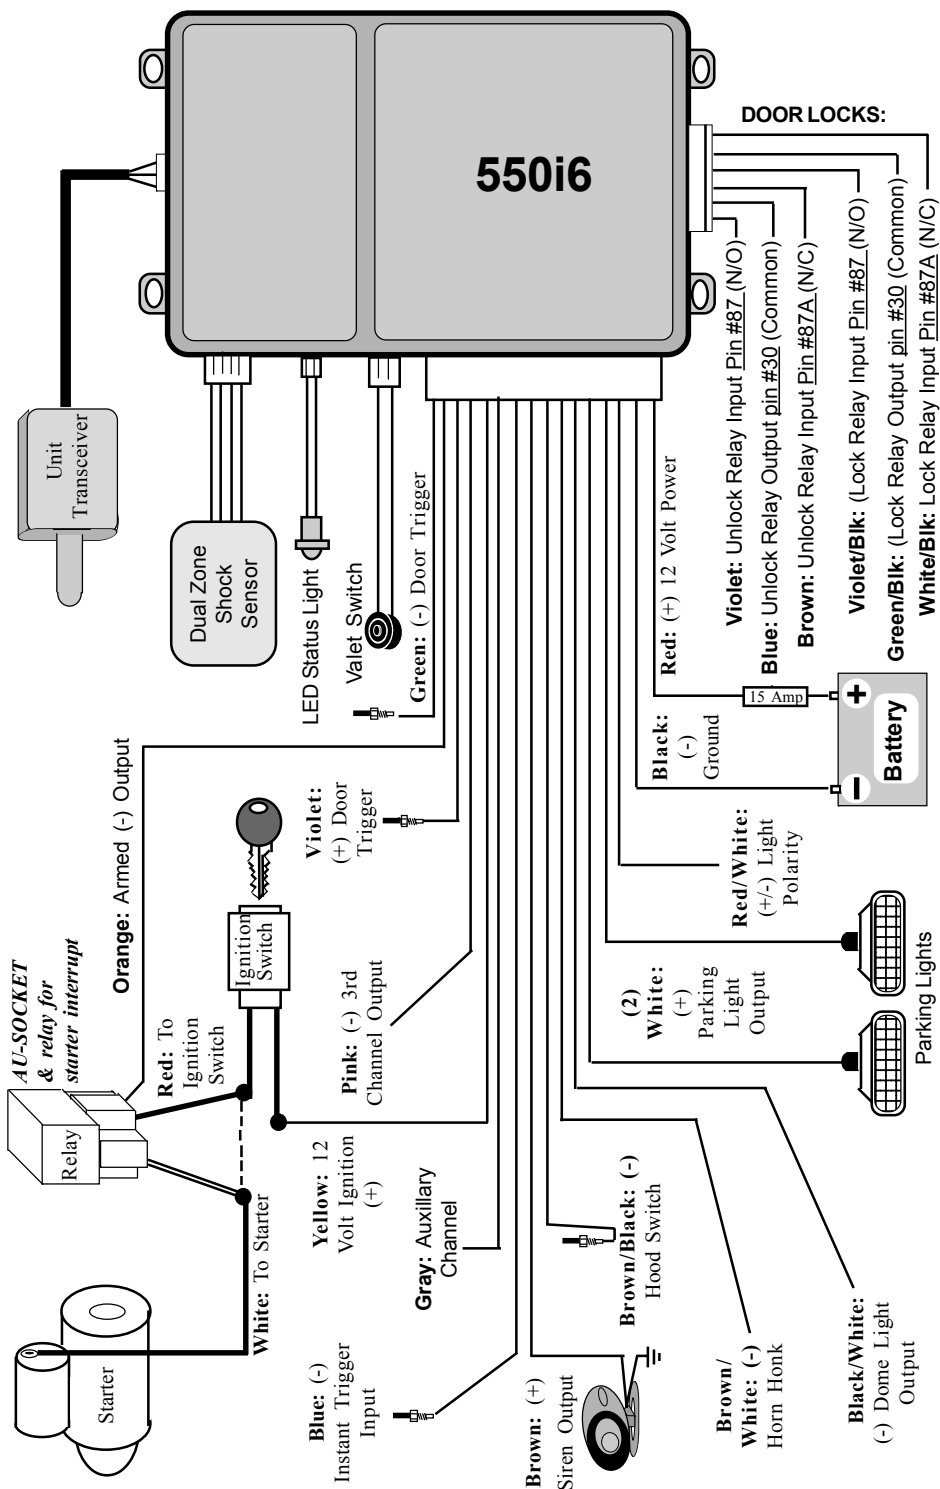


Door Locking Systems / Sistemas De Cierre


Negative Trigger System / Sistema Negativo:

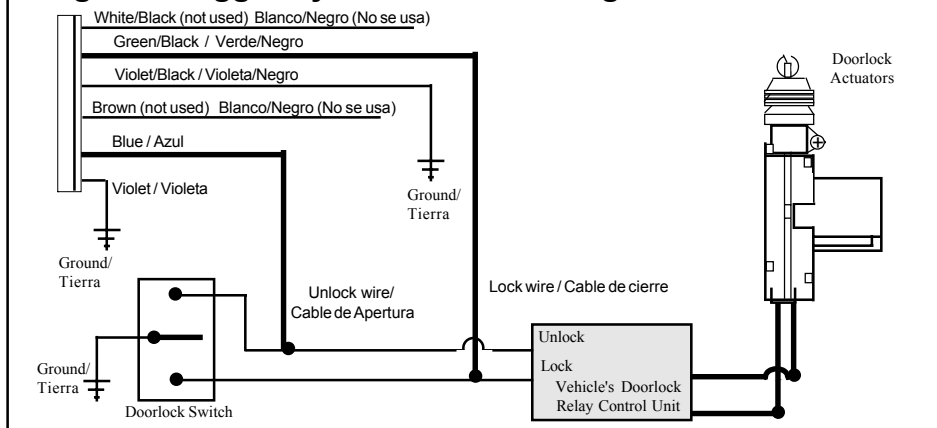


Positive Trigger System / Sistema Positivo:

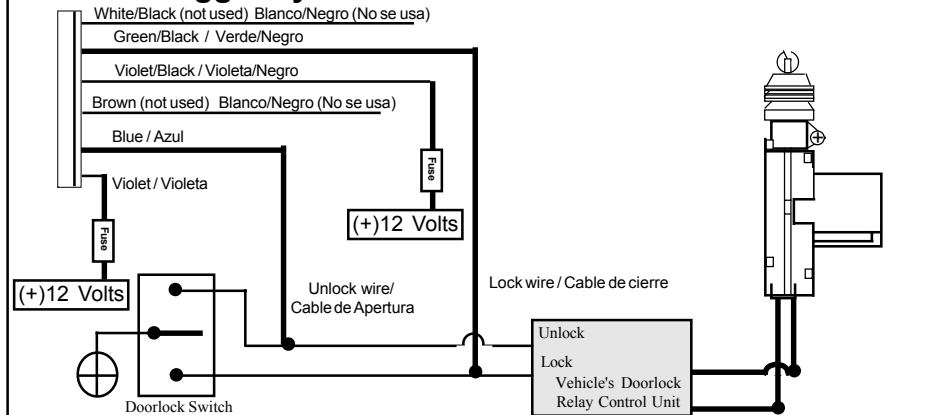

5 Wire Reversal (Rest at ground): Cambio de Polaridad:

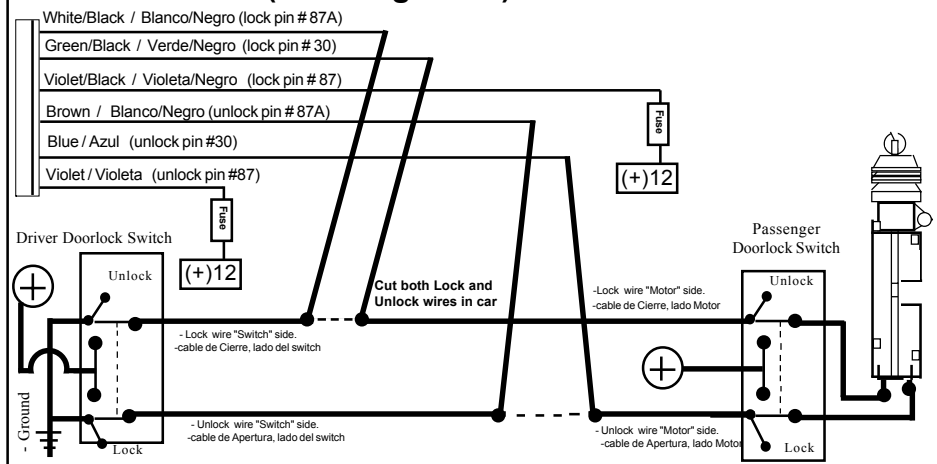

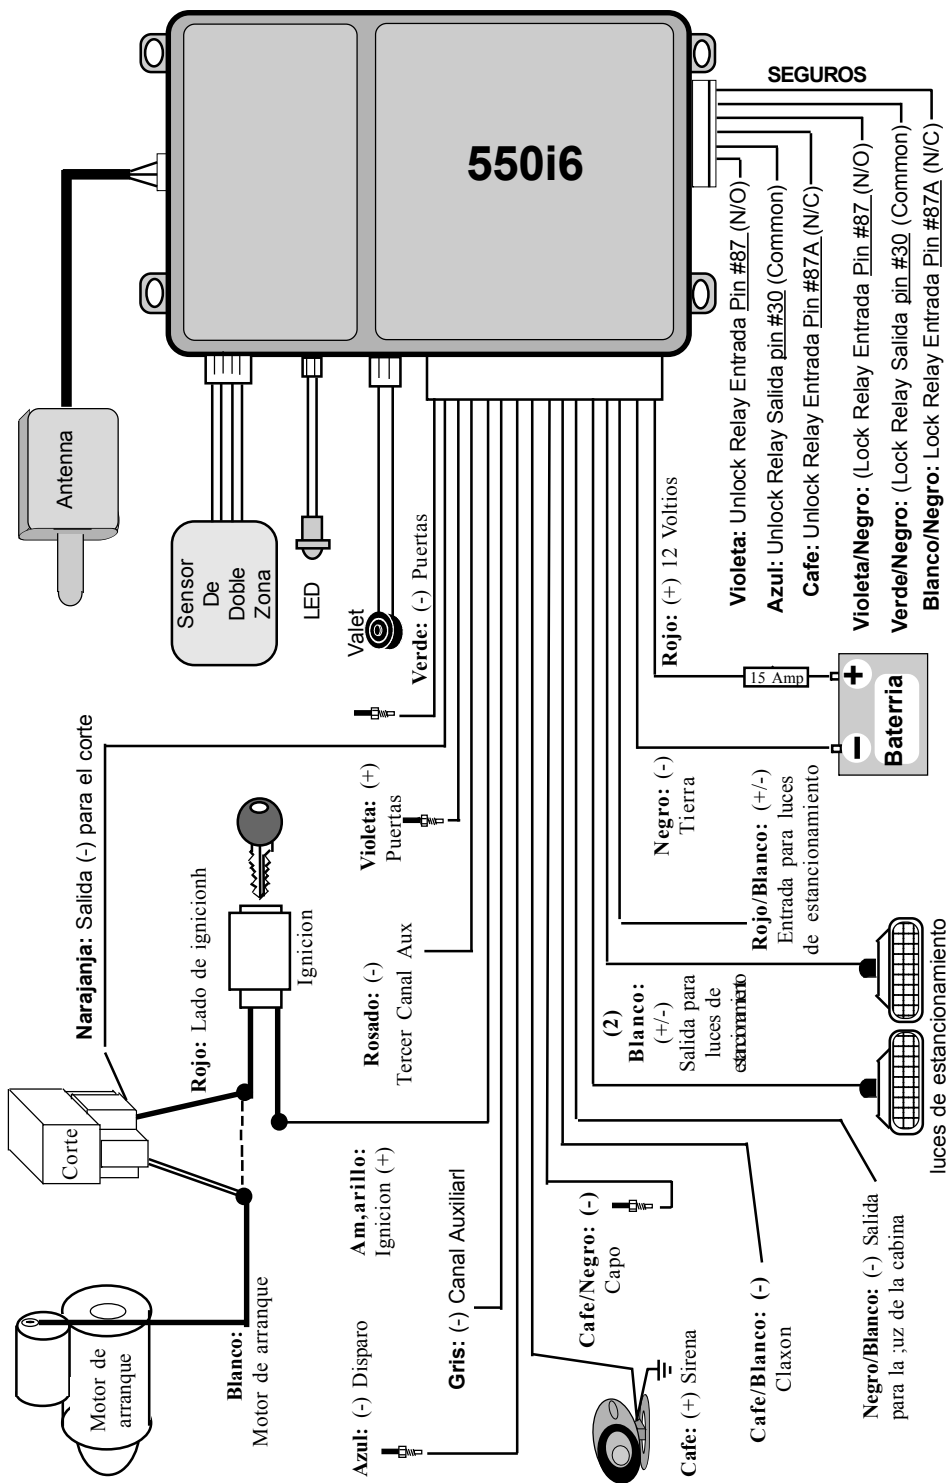

9. Anti-Atraco A Través De La Ignición: (•D)

Si esta función programable esta encendida, el Anti-Atraco se activa cada vez que se enciende la ignición del vehículo.

NOTA: MODO DE INMOVILIZADOR: Si la función programable (# 5) esta encendida, al desactivar el modo de inmovilizador, presionando el botón Valet con la ignición encendida, también se desactiva el Anti-Atraco por ignición.

Activado = Presione el botón del «Cierre»: (1 tono de Sirena/Claixon)

Desactivado = Presione el botón de «Apertura»: (2 tonos de Sirena/Claixon)

10. Anti-Atraco A Través Del «Control Remoto» o «Puerta ABIERTA» (•D)

Si esta función esta encendida, el Anti-Atraco se activa usando el control remoto, o cada vez que se Abre una puerta cuando la ignición esta encendida.

Activado = Presione el botón del «Cierre»: (1 tono de Sirena/Claixon)

Desactivado = Presione el botón de «Apertura»: (2 tonos de Sirena/Claixon)

11. Salida Para Luz De Cabina O Accesoría: (•Luz De Cabina)

Esta función permite escoger cuando se activa la salida del cable «Negro/Bianco - ILUMINA LUZ DE LA CABINA (al Desarmar la alarma): Esta función activa la salida (-) del cable «Negro/ con lista Blanca» cuando de Desarma la alarma para iluminar la luz de la cabina del vehículo por 30 segundos.

- SUBIR VENTANAS (al Armar la alarma): Esta función activa la salida (-) del cable «Negro/ con lista Blanca» por 30 segundos después de Armar la alarma, para operar una accesoría como un modulo de subir las ventanas

Luz De La Cabina = Presione el botón del «Cierre»: (1 tono de Sirena/Claixon)
Accesoría = Presione el botón de «Apertura»: (2 tonos de Sirena/Claixon)

12. Salida Del Tercer Canal (cable Rosado): (•Con Control Remoto)

Esta función permite escoger como se activa la salida (-) del cable «Rosado».

- USANDO EL CONTROL REMOTO: Esta función activa la salida (-) del cable «Rosado» cuando se presiona el botón pequeño "...» del control remoto por 3 segundos. (salda máxima 30 segundos).

- AL ARMAR LA ALARMA: Esta función activa la salida (-) del cable «Rosado» por 30 segundos después de Armar la alarma, para operar una accesoría como un modulo de subir las ventanas

Con Control Remoto = Presione el botón del «Cierre»: (1 tono de Sirena/Claixon)
Al Armar Alarma = Presione el botón de «Apertura»: (2 tonos de Sirena/Claixon)

13. Cierre/Apertura De Los Seguros Al Encender/Apagar La Ignición: (•A)

Activado = Presione el botón del «Cierre»: (1 tono de Sirena/Claixon)

Desactivado = Presione el botón de «Apertura»: (2 tonos de Sirena/Claixon)

JUMPER EN EL COSTADO DEL CEREBRO DE LA ALARMA:

Pulso Para Abrir y Cerrar Los Seguros: (•.8 segundo / 4 segundos)

.8 segundo = Jumper Puesto

4 segundos = Sin Jumper

2. Armado Automático: (•A)
Activado = Presione el botón del «Cierre»: (1 tono de Sirena/Claxon)
Desactivado = Presione el botón de «Apertura»: (2 tonos de Sirena/Claxon)

3. Cierre De Los Seguros Eléctricos Al Armarse La Alarma: (•A)
Cierre Activado = Presione el botón del «Cierre»: (1 tono de Sirena/Claxon)
Cierre Desactivado = Presione el botón de «Apertura»: (2 tonos de Sirena/Clax).

4. Pulso Doble Para Abrir Los Seguros: (• 1 pulse / 2 pulsos)
2 pulsos = Presione el botón del «Cierre»: (1 tono de Sirena/Claxon)
1 pulso = Presione el botón de «Apertura»: (2 tonos de Sirena/Claxon)

5. Modo De Inmovilizador: (•D)
- Si esta función programable esta encendida, el corte de ignición se mantiene activado después del Desarme. Para poder encender el auto es necesario primero encender la ignición del auto, entonces presionar el botón Valet.
Para poder encender el auto: Desarme la alarma, y enciende la ignición del auto. Entonces presione el botón de Valet.
Modo Activado = Presione el botón del «Cierre»: (1 tono de Sirena/Claxon)
Modo Desactivado = Presione el botón de «Apertura»: (2 tonos de Sirena/Clax)

6. Sirena y Claxon o Solo Claxon: (•Sirena y Claxon)
Esta función permite programar el cable Café/Blanco a sonar el claxon en conjunto al cable Café operar la Sirena, **O TOMAR TODAS LA FUNCIONES DE LA SIRENA PARA QUE NO HAGA FALTA INSTALAR SIRENA.**
- SIRENA Y CLAXON: Esta función permite que el claxon suene en adición a la sirena cuando la alarma es disparada por la zona de las puertas, maletero, o ignición. El claxon no suena si la alarma es disparada por la zona del sensor, ni hace tonos de confirmación.
- SOLO CLAXON: Si la opción de «Solo Claxon» se escoge, el claxon hace todas las funciones de la sirena, en caso que no hay sirena instalada.
Sirena y Claxon = Presione el botón del «Cierre»: (1 tono de Sirena/Claxon)
Solo Claxon = Presione el botón de «Apertura»: (2 tonos de Sirena/Claxon)

7. Eliminación De la Zona Del Sensor Automática: (•D)
- Esta función automáticamente elimina la zona del sensor si el pre-aviso se ha disparado 10 veces, o si la zona del sensor se ha disparado 5 veces.
Eliminación encendida = Presione el botón del «Cierre»: (1 tono de Sirena/Clax)
Eliminación apagada = Presione el botón de «Apertura»: (2 tonos de Sirena/C)

8. Confirmación De Zona Abierta Al Armar Con Control Remoto: (•D)
- Esta función elimina los 3 tonos de la sirena/claxon al Armar la alarma con el control cuando hay una puerta abierta. Esto es para autos que mantienen la luz de la cabina iluminada por después de haber cerrado las puertas.
Elimina los 3 tonos = Presione el botón del «Cierre»: (1 tono de Sirena/Claxon)
3 tonos activo = Presione el botón de «Apertura»: (2 tonos de Sirena/Clax).

Programación De Funciones

La alarma tiene 14 funciones que son programables a través del modo de programación. Estas funciones están listada en las próximas paginas.

Para entrar al modo de programación de funciones:

1) Encienda y Apague la ignición del auto.

2) Antes que pasen 7 segundos desde el momento que se apaga la ignición, presione el botón de "Valet" 5 veces. La sirena emite un tono

3) Antes que pasen 10 segundos desde el momento de la entrada al modo de programación, presione el botón de "Valet" un numero de veces que corresponde al numero de la función por programar.

- La Sirena emite el mismo numero de tonos para confirmar cual función fue escogida. Por ejemplo: Para cambiar la función #3, presiona el botón de "Valet" 3 veces y la Sirena/Claxon emite 3 tonos.

4) Después de haber escogido la función por programar, presione el botón del «Cierre» para encender la función o presiona el botón de «Apertura» para apagar la función.

NOTA: Es posible "Encender" y "Apagar" y volver a "Encender" y "Apagar" la función usando los botones de Cierre y Apertura en el control remoto.

5) Para programar otra función, repitan las líneas #3-4.

- Para escoger otra función es necesario volver a presionar el botón "Valet" el numero de veces que corresponde al numero de la función por programar.
Ejemplo: Para programar la función #1, presiona el botón de "Valet" una vez y la Sirena/Claxon emite 1 tono.

6) Si pasan 10 segundos sin entrada de programación o si se enciende la ignición del vehículo, la alarma automáticamente sale del modo de programación. La Sirena/Claxon confirma la salida.

Funciones Programables

• = Significa programación de fabrica.

1.Rearme Automático: (•A)

Activado = Presione el botón del «Cierre»: (1 tono de Sirena/Claxon)

Desactivado = Presione el botón de «Apertura»: (2 tonos de Sirena/Claxon)

- Permite que la alarma se Rearme automáticamente en caso que es desarmada, pero no se habrá una puerta del auto.

Zona Del Sensor y Pre-Aviso

La Alarma viene preparada para un sensor de doble zona con pre-alarma. La zona del sensor vigila contra violaciones en general. Si el sensor detecta una violación se dispara la alarma inmediatamente.

Zona De Pre-Alarma: La zona de Pre-Alarma vigila contra violaciones pequeñas. Si la zona de Pre-alarma detecta una violación, la Sirena/Claxon emite una serie de tonos por 2-segundos.

Programación De Controles Remotos A La Alarma

Para programar los controles remotos:

1) Enciende la ignición del auto.

2) Antes que pasen 7 segundos, presione el botón de "Valet" 5 veces
- La Sirena/Claxon emite un tono confirmando la entrada al modo.

3) Antes que pasen 10 segundos, presione un botón de cada control remoto por programar:

- Se puede programar hasta 4 controles remotos.
- La Sirena/Claxon emite un tono cada vez que un control se ha programado.

4) La alarma sale del modo de programación al Apagar la ignición o si pasan 10 segundos sin entrada de programación.

- La Sirena/Claxon confirma la salida del modo con 2 tonos largos.

NOTA: Se pueden programar 4 controles para operar la alarma. Cada vez que un control se programa, todos los controles en la memoria se borran para su seguridad. Es necesario programar todos los controles de una vez.

MODO DE INMOVILIZADOR: Si esta función programable (# 5) esta encendida, es necesario desactivar el «modo de inmovilizador» antes de entrar al modo de programación de controles remotos.

1. Enciende la ignición del vehículo.

2. Antes que pasen 10 segundos, presione el botón de Valet para desactivar el modo de Inmovilizador, entonces
3. Presione el botón de "Valet" 5 veces para entrar al modo de programación.

PROTECCIÓN ATV: Por los primeros 90 segundos después de que se encienda la ignición del auto la luz LED hace una serie de intermitencias, separada por una pausa, que corresponden al numero de controles remotos que están programado en la memoria de la alarma.

1 intermitencia /pausa = 1 control remoto programado.

2 intermitencias /pausa = 2 controles remotos programado.

3 intermitencias /pausa = 3 controles remotos programado.

4 intermitencias /pausa = 4 controles remotos programado.

Modo de Valet

Solo se puede entrar al modo de Valet cuando la alarma esta Desarmada:

En el modo de "Valet" todas las funciones de seguridad quedan apagadas y solamente las funciones de conveniencia como la apertura y el cierre de los seguros eléctricos funcionan. El modo de Valet esta diseñado para ocasiones en el cual seria inconveniente que la alarma este operando, por ejemplo cuando el vehiculo este en el mecánico.

Para Entrar Al Modo De "Valet": Con la alarma Desarmada, presione el botón de Valet por 3 segundos con la ignición del vehiculo encendida o apagada.

- La luz LED se enciende fijamente y la sirena emite un tono para confirmar.
- Para recordarte que la alarma esta en Valet, la sirena emite un tono cada vez que se apaga la ignición del auto.

Para Salir Del Modo De "Valet": Presione el botón de Valet una vez con la ignición del vehiculo encendida o apagada.

- La luz LED se apaga y la sirena emite un tono largo para confirmar salida.

La luz LED tiene 3 funciones principales:

1) Muestra el "Estado" de la alarma:

- **Intermitencia lenta** = La alarma esta Armada.
- **Intermitencia rápida (alarma Desarmada)** = El proceso de Armado/Rearme automático ha comenzado.
- **LED Apagado** = Alarma Desarmada sin Armado/Rearme automático.
- **LED Fijo** = La alarma esta en el modo de "Valet".

2) Verifica cuantos controles están programado: (Protección "ATV")

Por los primeros 90 segundos después de que se encienda la ignición, la luz LED hace una serie de intermitencias que corresponden al numero de controles remotos que están programado en la memoria de la alarma.

- 1 intermitencia /pausa = 1 control remoto programado.
- 2 intermitencias /pausa = 2 controles remotos programado.
- 3 intermitencias /pausa = 3 controles remotos programado.
- 4 intermitencias /pausa = 4 controles remotos programado.

3) Advierte que hubo un disparo y confirma cual zona fue violada:

Si ha habido un disparo, al Desarmar la alarma, la luz LED indica exactamente cual zona fue violada hasta que se encienda la ignición.
2 intermitencias /pausa = La zona del *Capo o Maletero* fue violada.
3 intermitencias /pausa = La zona de las *Puertas* fue violada.
4 intermitencias /pausa = La zona del *Sensor* fue violada.

La alarma viene equipada con 3 tipos de protección Anti-Atraco:

1) Anti-Atraco Por Control Remoto: (Función Programable #10)

Presione el botón Pequeño "... " por 3 segundos, con la ignición encendida.



2) Anti-Atraco a través de la ignición y una puerta Abierta: (#10)

Si la función programable # 10 esta encendida, el Anti-Atraco se activa cada vez que se *Abre* una puerta cuando la ignición del vehículo esta encendida.

3) Anti-Atraco a través de la ignición: (Función Programable #9)

Si la función programable # 9 esta encendida, el Anti-Atraco se activa cada vez que se enciende la ignición del vehículo.

MODO DE INMOVILIZADOR: Si la función programable (# 5) esta encendida, al desactivar el modo de inmovilizador, presionando el botón Valet con la ignición encendida, también se desactiva el Anti-Atraco por Ignición.

Secuencia DEL Anti-Atraco:


Al comenzar la secuencia del Anti-Atraco, el usuario tiene 59 segundos para presionar el botón de Valet para cancelar el Anti-Atraco.

- Por los primeros 20 segundos no hay advertencias.
- Entre 21-30 segundos la luz LED hace intermitencias lentas.
- Entre 31-45 segundos la luz LED hace intermitencias rapidas y la sirena emite un tono cada 2 segundos.
- Entre 46-60 segundos la luz LED hace intermitencias rapidas y la sirena emite un tono cada 1 segundo.
- Si no se ha cancelado la secuencia, a los 61 segundos se dispara el Anti-Atraco.

Para desactivar el Anti-Atraco después de que fue disparado:

- Apaga la ignición del vehículo.
- Enciende la ignición del vehículo.
- Antes que pasen 5 segundos, presione el botón de "Valet".



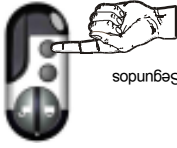


3 Segundos



El sistema de Anti-Atraco se puede activar usando el control remoto.
- El Anti-Atraco esta explicado por completo en la próxima pagina.
Anti-Atraco Por Control Remoto: Presione el botón Pequeño “...” por 3 segundos, con la ignición encendida. (función programable #10)

Anti-Atraco Por Control Remoto

- El tercer canal auxiliar se puede programar (#12) a suplir una salida (-) cuando esta armada la alarma para operar un modulo de subir ventanas.

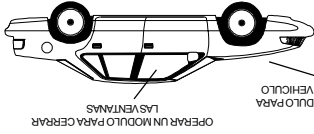

OPERAR UN MODULO PARA CERRAR LAS VENTANAS

ARRANCAR EL VEHICULO



3 Segundos

Tercer Canal Auxiliar: Presione el botón Pequeño “...” por 3 segundos.

El tercer canal auxiliar se puede usar para operar una función optional. Por ejemplo, un modulo para arrancar el vehículo, o para subir las ventanas.

Tercer Canal Auxiliar

- Se Desarma la alarma al activar el canal Auxiliar.
- El canal auxiliar no se puede usar si la ignición del vehículo esta encendida.



OPERAR UN MODULO PARA CERRAR LAS VENTANAS

ARRANCAR EL VEHICULO

ABRIR EL MALETERO BAL.



3 Segundos

Canal Auxiliar: Presione el botón Pequeño “...” por 3 segundos.

El canal auxiliar se puede usar para operar una función optional. Por ejemplo, abrir el maletero, operar un modulo para arrancar el vehículo, o para subir las ventanas.

Canal Auxiliar

Modo Armado De La Alarma

Al entrar la alarma en el modo Armado, la Sirena/Claxon emite un tono, las luces de estacionamiento hacen una intermitencia, los seguros eléctricos cierran (si están conectados), el corte de arranque se activa, y la luz LED comienza una intermitencia lenta. En este modo, si cualquiera zona detecta una violación la alarma se dispara.



Un disparo consiste de lo siguiente:

- La Sirena/Claxon comienza a sonar para atraer atención.
- Las luces de estacionamiento comienzan una intermitencia.

CICLO DE DISPARO: El ciclo de disparo dura 30-segundos a no ser que Desarmen la alarma usando un control remoto o el botón de Valet. Si todas las zonas protegidas están seguras al final del ciclo, la alarma se reactiva y continúa vigilando contra otra violación. Si existe una zona abierta al final del ciclo, la alarma inicia otro disparo. Después de 6 disparos consecutivos la alarma elimina la zona abierta hasta que esa zona cierre. El resto de las zonas se mantienen completamente protegidas. Al Desarmar la alarma después de un disparo, la Sirena/Claxon emite 4 tonos, las luces de estacionamiento hacen 4 intermitencias, y la luz LED indica cual zona fue violada.

Pánico

Pánico: Presione el botón de «Cierre» por 3 segundos.

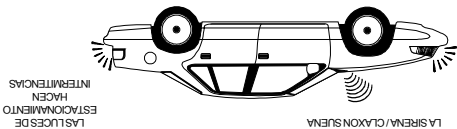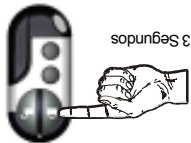


Eliminación Del Sensor

Es posible desactivar temporalmente la zona del sensor. Todas las otras zonas se mantienen completamente protegidas.

Eliminación Del Sensor:


- 1) Arma la alarma, Presione el botón de «Cierre» una vez.
- 2) Antes que pasen 2 segundos, Presione el botón “••”.

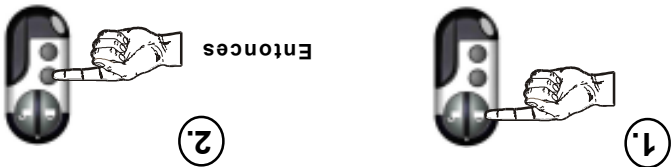

- La Sirena/Claxon emite un tono para confirmar la eliminación del sensor.

La alarma se puede Desarmar de 3 maneras:

1) Desarme usando control remoto: Presione el botón del «Apertura»

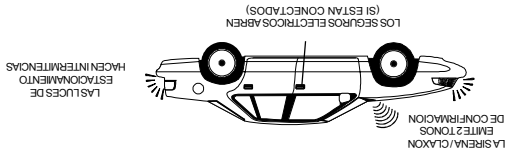

2) Desarme Silente: Presione el botón pequeño “...” 2 veces en 3 segundos.



Al Desarmar:



 
- La Sirena/Claxon emite dos tonos. / Cuatro tonos si ha sucedido un disparo.
- Las luces de estacionamiento hacen 2 intermitencias. / 4 con un Disparo.
- Los seguros eléctricos abren. (Si están conectados)
- El corte de arranque se desactiva.
- La luz LED comienza una intermitencia rápida para Rearme automático hasta que se Rearma la alarma, o se habrá una puerta del auto.
- DESARME SEGURO DE 2 ESCALAS:** Si la alarma esta disparada, presionando cualquier botón del control remoto solo silencio la sirena, es necesario presionar el botón de «Apertura» una segunda vez.

MODO DE INMOVILIZADOR: Si esta función programable (#5) esta encendida, el corte se mantiene activado después del Desarme. Para poder encender el auto, es necesario encender la ignición y presionar el botón de valet.
- Al desactivar el modo de Inmovilizador, se cancela el Anti-Atraco por ignición Para poder encender el auto: Desarme la alarma, y enciende la ignición del auto. Entonces presione el botón de valet.

Desarme De Emergencia: (Desarme sin el control remoto)

Esta función permite Desarmar la alarma sin el uso del control remoto. Esta función esta diseñada para ocasiones en el cual la alarma esta Armada o en pleno disparo y el control remoto esta sin batería, roto, o perdido.
a) Enciende la ignición del vehículo con la llave.
b) Antes que pasen 10 segundos, presione el botón Valet.

-La alarma se Desarma.



Antes De 10 segundos



La alarma se puede Armar de 3 maneras:

1) Armado usando control remoto: Presione el botón de «Cierre».



2) Armado Silente: Presione el botón pequeño “..” 2 veces en 3 segundos.



Al Armar:

- La Sirena/Claxon emite un tono. / Tres tonos si una puerta esta abierta.
 - Las luces de estacionamiento hacen una intermitencia.
 - Los seguros eléctricos cierran. (Si están conectados)
 - El corte de arranque se activa.
 - La luz LED comienza una intermitencia lenta.
- Nota:** Si existe una zona abierta, la alarma automáticamente excluye la zona hasta que la zona se “cierre”, el resto de las zonas se mantienen protegidas.
- La sirena emite 3 tonos para confirmar que una zona ha sido excluida.

3) Armado y Rearme Automático:

- Esta función programable permite que la alarma se Arme Automáticamente.
- Al cerrar la ultima puerta después de haber apagado la ignición, la sirena emite un tono y la luz LED comienza una intermitencia rápida por 30 seg.
 - Al fin de 30 segundos la alarma se Arma.

- La Sirena/Claxon emite un tono.

- Las luces de estacionamiento hacen una intermitencia.

- Los seguros eléctricos cierran (si están conectados y programados).

 
- El corte de arranque se activa.

- Y la luz LED comienza una intermitencia lenta para confirmar el Armado.

Nota: El Armado Automático no funciona si la ignición esta encendida o si

existe una zona abierta. Si se abre una puerta durante los 30-segundos antes del armado automático, el proceso para y comienza al cerrar la puerta.

REARME (Programmable): En caso de un Desarme accidental, la alarma se Rearme automáticamente si no se ha abierto una puerta del auto.




3 Segundos

Anti-Atraco Por Control Remoto: Presione el botón Pequeño “...” por 3 segundos, con la ignición encendida. (función programable #10)



 
3 Segundos




OPRAR UN MÓDULO PARA
ARRANCAR EL VEHICULO
OPRAR UN MÓDULO PARA CERRAR
LAS VENTANAS

3 segundos.

Tercer Canal Auxiliar: Presione el botón Pequeño “...” por

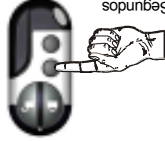

3 Segundos

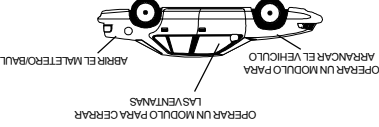


OPRAR UN MÓDULO PARA
ARRANCAR EL VEHICULO
OPRAR UN MÓDULO PARA CERRAR
LAS VENTANAS
ABRIR EL MALETERO/BAUL

Canal Auxiliar: Presione el botón Pequeño “...” por 3 segundos.



1.

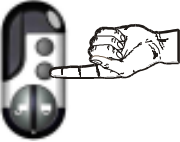

2.

 
Entonces

1) Arma la alarma, Presione el botón de «Cierre» una vez.
2) Antes que pasen 2 segundos, Presione el botón pequeño “...”.

Eliminación Del Sensor:




3 Segundos



LA SIRENA / CLAXON SUEÑA
LAS LUCES DE
ESTACIONAMIENTO
HACEN
INTERMITENCIAS

 Pánico: Presione el botón de «Cierre» por 3 segundos.



antes que pasen
10 segundos

Presione el botón
Valet

Desarme De Emergencia:

Guía Para El Usuario


Guía De Instalación:

Armado De La Alarma	3E
Desarme De La Alarma	4E
Desarme De Emergencia	4E
Modo Armado De La Alarma	5E
Pánico	5E
Eliminación Del Sensor	5E
Canal Auxiliar	6E
Tercer Canal	6E
Anti-Atraco por Control Remoto ..	6E
Anti-Atraco	7E
Modo De Valet	8E
Luz LED	8E
Zona Del Sensor y Pre-Aviso	9E


Programación De Controles Remotos ...	9E
Programación De Funciones	10E
Funciones Programables	10E - 12E
Diagrama	13
Sistemas De Cierre	14

GUIA DE REFERENCIA


Armado: Presione el botón de «Cierre» una vez.

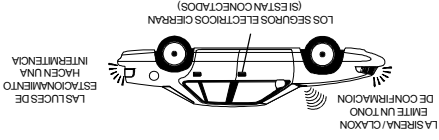

 Armado Silente: Presione el botón pequeño “••” 2 veces en 3 segundos.



Desarme: Presione el botón de «Apertura» una vez.

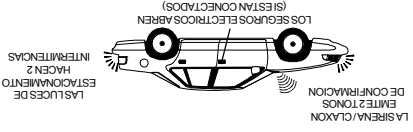

Desarme Silente: Presione el botón pequeño “••” 2 veces en 3 segundos.

