

AL-1000 SX

REMOTES: 3 Button/Green LED 433MHz Omega Part #103-03 Board # ET4E

REMOTE OPERATION:

Large Button- Press and release to arm/lock and disarm/unlock. Press and hold to activate panic.

Right Button- Hold for 3 seconds to activate 2nd channel output.

Left Button- Press and hold for 3 seconds to activate 3rd channel output. Press and release within 3 seconds before arming to Arm without confirmation chirps. Press and release before disarming to disarm without confirmation chirps. Press and release after arming to achieve sensor bypass. Press and release after disarming to achieve remote valet.

ZONE VIOLATION CODE: After remotely disarming the LED will flash one of the following codes if the alarm was activated while it was in an armed state.

Flash 1X- System was activated from the current sensing feature.

Flash 2X- System was activated from the hood or trunk circuit wire.

Flash 3X- System was activated from the door circuit wire.

Flash 4X- System was activated from the auxiliary input.

CODING REMOTES: Unit must be in a disarmed state.

Step 1- Turn “on” the ignition.

Step 2- Press valet button 5 times and wait for a siren chirp.

Step 3 –Press the large button, unit will respond with 1 siren chirp. Press the right button, unit will respond with 2 siren chirps. Press left button, unit will respond with 3 siren chirps. (Repeat as needed.)

NOTES

- 1) Unit has 12-pin harness.
- 2) Unit has 2nd and 3rd channel outputs in the main harness.
- 3) Unit has 4-pin auxiliary port.
- 4) Unit has 4 pin door lock plug.
- 5) Unit has back up battery port for use with a 9 volt battery.
- 6) Unit has 4 dip switches for features. (See feature section)
- 7) Unit has plug in valet button.
- 8) Unit includes starter interrupt socket and relay.
- 9) AU-84TA shock sensor included.

Programmable Features

Turn ignition “on” then “off”- Press valet button 5 times and wait for response chirp- Press valet button equal to the feature # you wish to change— Pressing Large button turns feature “on”— Pressing small button turns feature “off”.

FEATURE#	DEFAULT	LARGE BUTTON	SMALL BUTTON
Feature#1 Ignition Activated Door Locks	ON	ON	OFF
Feature#2 Open Door By-Pass To Feature 1	ON	ON	OFF
Feature#3 Parking Light Duration	60 sec.	60 sec.	30 sec.
Feature#4 90 Second Rearming	ON	ON	OFF
Feature#5 Disarm Alarm Upon Trunk Release	ON	ON	OFF
Feature#6 Door Lock Pulse Duration	.8 sec.	.8 sec.	3 sec.
Feature#7 Arming Delay	3 sec.	3 sec.	45 sec.
Feature#8 Chirp Confirmation	ON	ON	OFF
DIP SWITCHES	DEFAULT	UP	DOWN
Switch #1- Hijack	OFF	ON	OFF
Switch #2- Last Door Arming	ON	ON	OFF
Switch #3- Doors Lock With Last Door Arming	ON	ON	OFF
Switch #4- Current Sensing	ON	ON	OFF

Total System Reset

Must be reset at the factory.

WIRING DIAGRAM FOR AL-700J, AL-900JX &AL-1000SX

