


AU-85Tn Dual Zone Magnetic Impact & Glass Breakage Sensor

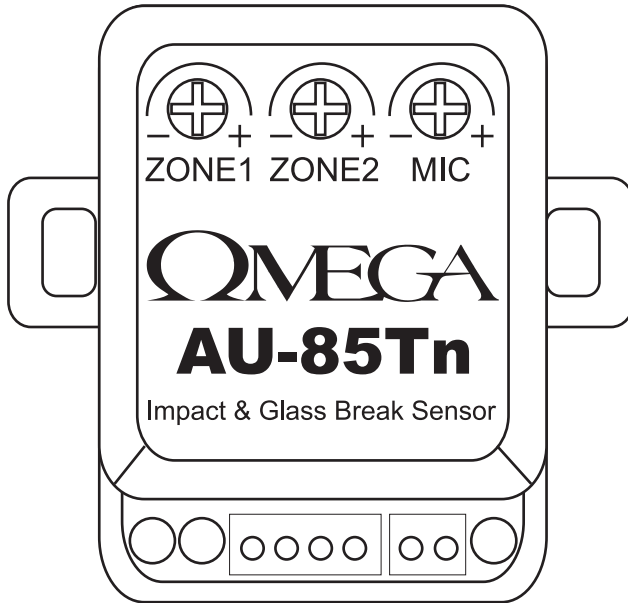

Omega Wiring Harness Coloring Convention
RED = Constant +12v **BLACK = Ground When Armed**
BLUE = Alarm (Hard) Trigger **GREEN = Prewarn Trigger**
©2019 Omega Research & Development Technologies, Inc.

AU-85Tn Dual Zone Magnetic Impact & Glass Breakage Sensor

Mounting -

The AU-85Tn must be mounted securely to the chassis or steering column of the vehicle. Mounting the sensor to areas that are not a solid part of the vehicle can result in inconsistent operation.

Connection -

Connect one end of the included pre-wired harness to the four pin connector on the sensor. Connect the other end of the harness to the sensor port on the alarm brain.

Adjustment -

The AU-85Tn has three independently adjustable trigger zones.

The ZONE1 adjustment screw and green LED indicator are used to control the PRE-WARN portion of the sensor. The ZONE2 adjustment screw and red LED indicator are used to control the ALARM TRIGGER portion of the sensor.

The MIC adjustment screw is used to adjust the sensitivity of the condenser microphone.

To increase sensitivity for any zone, turn the appropriate adjustment screw **CLOCKWISE**. To decrease sensitivity, turn the adjustment screw **COUNTER-CLOCKWISE**. The LED indicators for each zone will illuminate when that particular zone is triggered.

CS-SENSOR-LINK (optional) -

This adaptor cable is required to connect this sensor to CrimeStopper SP-X02 alarm systems.

(NOT compatible with the SP-102)

IS_AU85Tn_20191114