
AU-NCT Installation Instructions

Normally Closed Trigger Module

RED Wire - Constant (+)12 Volts BLACK Wire - Chassis Ground GREEN Wire - Negative Alarm Trigger Output (-) GREEN/BLACK Wires - Connect to normally closed trigger circuit in vehicle. These wires rest at ground with the doors closed and switch to nothing with the doors open. Note: Unused Green/Black wires must be connected to ground.

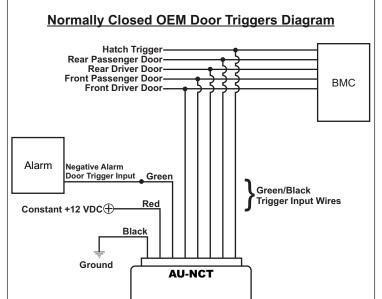

© 2013 Omega Research and Development

