



OEM Remote / Add-On Remote Start Systems

QUICK START OPERATION GUIDE

Visit www.CarAlarm.com today

To Download your **complete operation guide** and learn more about:

Additional Features

 
 
- Anti-Carjacking Mode
- Secure Code Override
- Turbo Timer Support & Operation
- Customizing System Options
- Passive Security Functions
- Emergency Override

System Upgrades

- Linkr Smartphone Control
- 2-Way Controllers w/ Extended Range
- Upgrading To Full Security With Sensors & Siren

Problems? Questions? Contact Customer Service:

800-554-4053 (toll free) | +1-770-942-9876 (outside USA)



Scan to register & download the full operation guide at [CarAlarm.com!](http://CarAlarm.com)

Your System Model:

(Installer, write system model above)

This device complies with FCC Rules part 15. Operation is subject to the following two conditions: 1) This device may not cause harmful interference &, 2) This device must accept any interference that may be received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.



OEM Remote / Add-On Remote Start Systems

QUICK START OPERATION GUIDE




SECURITY*, KEYLESS ENTRY, & REMOTE START OPERATION

FUNCTION	OEM REMOTE	NOTE
Lock & Arm*	Lock w/ OEM Remote	Vehicle must be compatible. Consult your installer about this function.
Unlock & Disarm*	Unlock w/ OEM Remote	Vehicle must be compatible. Consult your installer about this function.
Engine Start/Stop	Press Lock 3x Quickly**	Repeat to stop engine during remote start

*Security related functions only available on some models. Consult your installer to upgrade.

**There may be other sequence options available. Consult your installer to learn more.

Register today at www.CarAlarm.com to activate/learn about your warranty & download a complete operation guide.

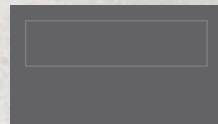

OTHER REMOTE START FUNCTIONS


FUNCTION	VALET BUTTON	NOTE
Pit Stop Mode	Press 2x w/ Engine On For More Than 10 Seconds.	This will leave the engine running for the programmed run time so you can take your keys with you to run errands.
XL Pit Stop Mode	Press 6x w/ Engine On For More Than 10 Seconds.	This will leave the engine running for 12 hours so you can safely leave the engine running for extended periods. Ideal for commercial vehicles using strobes, refrigerators boxes, etc.
Low Battery & Low/Hi Temp Auto-Start	Ignition Key ON, OFF, Press 2x	Auto-start will activate a max of once per 2 hours and is canceled everytime the ignition key is turned on. See your installer or the full manual for threshold settings.
Valet Mode	Unlock First, Hold For 3 Sec.	This disables remote start and the security system. The status LED will turn on. Press valet button once to exit valet mode.

MANUAL TRANSMISSION RESERVATION MODE

This must be performed before you can remote start a manual transmission vehicle to ensure the car is in neutral & maximum safety. Consult your installer for more information.

- 1) With the engine running by key for more than 10 seconds, hold the brake pedal & place the transmission in neutral.
- 2) Apply the parking brake and release the brake pedal.
- 3) Send the remote start command via your remote. The remote start should engage (not crank) and the status LED will begin flashing.
- 4) Take the ignition key out of the switch (the engine should stay running).
- 5) Exit the vehicle and lock your doors. The engine will turn off.

PUSH-BUTTON STATUS LED

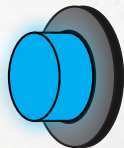

PERFORMING REMOTE START TAKE OVER

This process describes how to take over your vehicle and keep the engine running before and during driving.

- 1) Unlock and enter your vehicle.
- 2) Turn the ignition key 'ON'
- 3) Press the brake pedal.

- The remote start will turn off and your vehicle will remain running under the control of your ignition key. It is now safe for driving.

NOTE: Some vehicles are designed in a way that take over is not possible. In these cases, remote start shuts down and you must start again using your key.

REMOTE START ERRORS

CHIRPS/FLASHES	VIOLATED ZONE
LED ON	System in Valet mode
1	Hood opened
2	Brake pedal pressed
3	Bad tach signal or engine over-rev.
4	BLACK/WHITE wire lost ground
5	3D motion detected while cranking
6	Received engine stop command
7	Alarm was triggered
8	Run time expired
9	Low vehicle battery voltage detected

If the system fails to remote start or remote start stops unexpectedly, it will give a long horn/siren chirp followed by a series of short horn/siren chirps & light flashes. The short chirps/light flashes indicate the cause of the failure.

TIP: If remote start won't activate, the system may be in valet mode (Status LED ON). Press the valet button once to exit.