



OEM Remote / Add-On Remote Start Systems

QUICK START OPERATION GUIDE

Visit [www.CarAlarm.com](http://www.CarAlarm.com) today

To Download your **complete operation guide** and learn more about:

Additional Features

 
- Anti-Carjacking Mode
- Secure Code Override
- Turbo Timer Support & Operation
- Customizing System Options
- Passive Security Functions
- Emergency Override

System Upgrades

- Linkr Smartphone Control
- 2-Way Controllers w/ Extended Range
- Upgrading To Full Security With Sensors & Siren

Problems? Questions? Contact Customer Service:

800-554-4053 (toll free) | +1-770-942-9876 (outside USA)



Scan to register & download the full operation guide at CarAlarm.com!

Your System Model:

(Installer, write system model above)



OEM Remote / Add-On Remote Start Systems

QUICK START OPERATION GUIDE



SECURITY\*, KEYLESS ENTRY, & REMOTE START OPERATION

FUNCTION	OEM REMOTE	NOTE
Lock & Arm*	Lock w/ OEM Remote	Vehicle must be compatible. Consult your installer about this function.
Unlock & Disarm*	Unlock w/ OEM Remote	Vehicle must be compatible. Consult your installer about this function.
Engine Start/Stop	Press Lock 3x Quickly	Repeat to stop engine during remote start

\*Security related functions only available on some models. Consult your installer to upgrade.

Register today at [www.CarAlarm.com](http://www.CarAlarm.com) to activate/learn about your warranty & download a complete operation guide.


OTHER REMOTE START FUNCTIONS		
FUNCTION	VALET BUTTON	NOTE
Pit Stop Mode	Press 2x w/ Engine Running	This will leave the engine running for the programmed run time so you can take your keys with you to run errands.
XL Pit Stop Mode	Press 6x w/ Engine Running	This will leave the engine running for 12 hours so you can safely leave the engine running for extended periods. Ideal for commercial vehicles using strobes, refrigerators boxes, etc.
Low Battery & Low/Hi Temp Auto-Start	Ignition Key ON, OFF, Press 2x	Auto-start will activate a max of once per 2 hours and is canceled everytime the ignition key is turned on. See your installer or the full manual for threshold settings.
Valet Mode	Unlock First, Hold For 3 Sec.	This disables remote start and the security system. The status LED will turn on. Press valet button once to exit valet mode.

**MANUAL TRANSMISSION RESERVATION MODE**

This must be performed before you can remote start a manual transmission vehicle to ensure the car is in neutral & maximum safety. Consult your installer for more information.

- 1) With the engine running by key, hold the brake pedal & place the transmission in neutral.
- 2) Apply the parking brake and release the brake pedal.
- 3) Send the remote start command via your remote. The remote start should engage (not crank) and the status LED will begin flashing.
- 4) Take the ignition key out of the switch (the engine should stay running).
- 5) Exit the vehicle and lock your doors. The engine will turn off.

**PUSH-BUTTON STATUS LED**

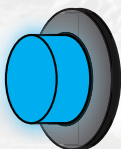

**PERFORMING TAKE OVER**

This process describes how to take over your vehicle and keep the engine running before and during driving.

- 1) Unlock and enter your vehicle.
- 2) Turn the ignition key 'ON'
- 3) Press the brake pedal.

- The remote start will turn off and your vehicle will remain running under the control of your ignition key. It is now safe for driving.

REMOTE START ERRORS	
CHIRPS/FLASHES	VIOLATED ZONE
LED ON	System in Valet mode
1	Hood opened
2	Brake pedal pressed
3	Bad tach signal or engine over-rev.
4	BLACK/WHITE wire lost ground
5	3D motion detected while cranking
6	Received engine stop command
7	Alarm was triggered
8	Run time expired
9	Low vehicle battery voltage detected

If the system fails to remote start or remote start stops unexpectedly, it will give a long horn/siren chirp followed by a series of short horn/siren chirps & light flashes. The short chirps/light flashes indicate the cause of the failure.

TIP: If remote start won't activate, the system may be in valet mode (Status LED ON). Press the valet button once to exit.