



Omega CarLink GPS Wiring Overview - SERIAL Connection

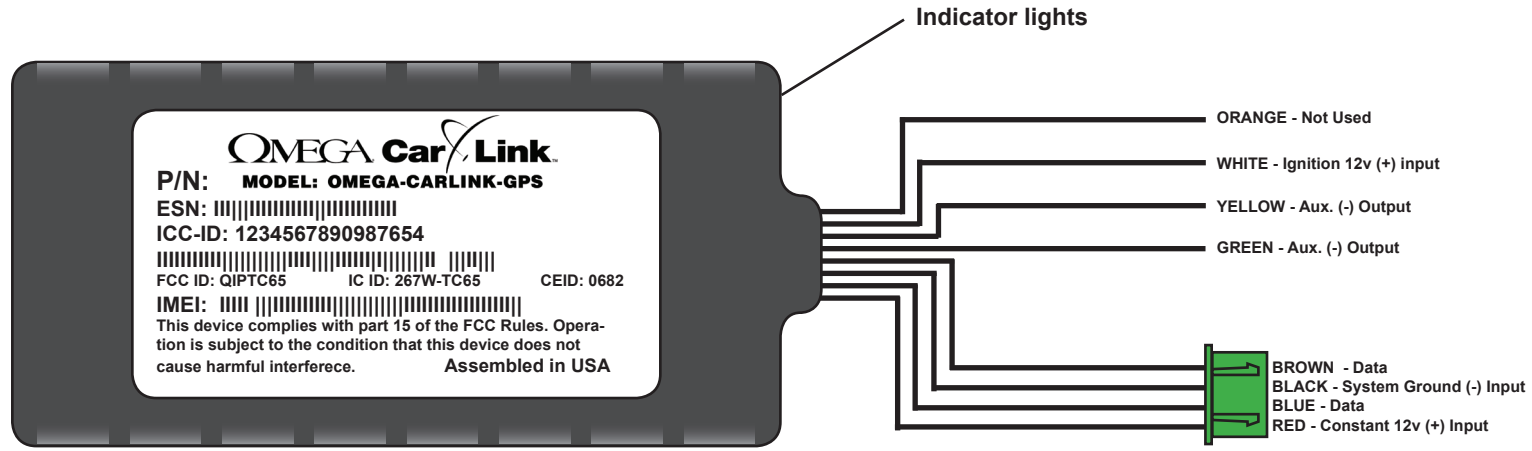


Omega CarLink GPS Wiring Overview - ANALOG Connection

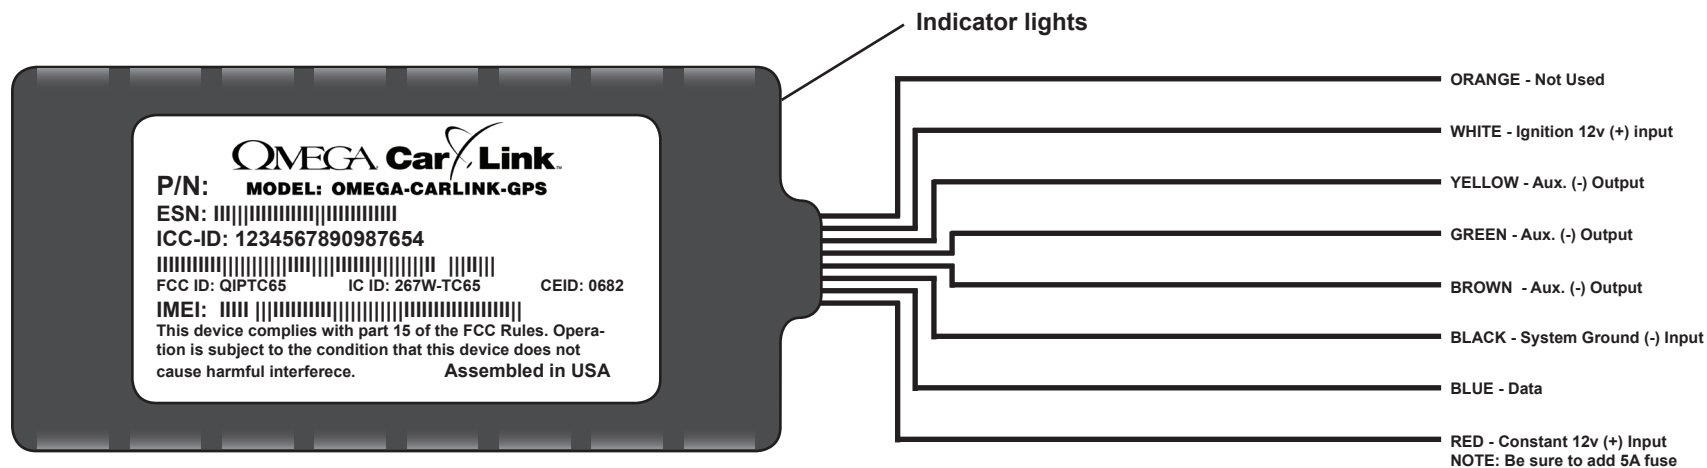

Connecting Directly To Omegalink Module w/ RS Firmware

Connect the Carlink AUX outputs to these inputs and program the outputs for "1 second pulse" in the installation details during activation/configuration.

Remote Start Activation (-) Input - RED/WHITE
Lock (-) Input - BROWN
Unlock (-) Input - PURPLE/YELLOW

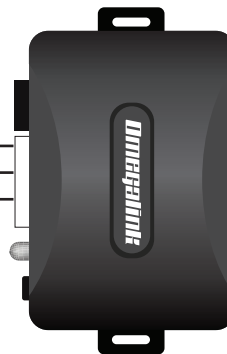

Visit www.omegawebblink.com/rsfirmware for more info and current vehicle applications.