


## 2003-04 JEEP LIBERTY DOORLOCK INTEGRATION & TRANSPONDER BYPASS MODULE

Provides Lock, Unlock, Rear Hatch, OEM Alarm Arm, OEM Alarm Disarm, Parking Lights, RAP Shutdown, & Transponder Bypass

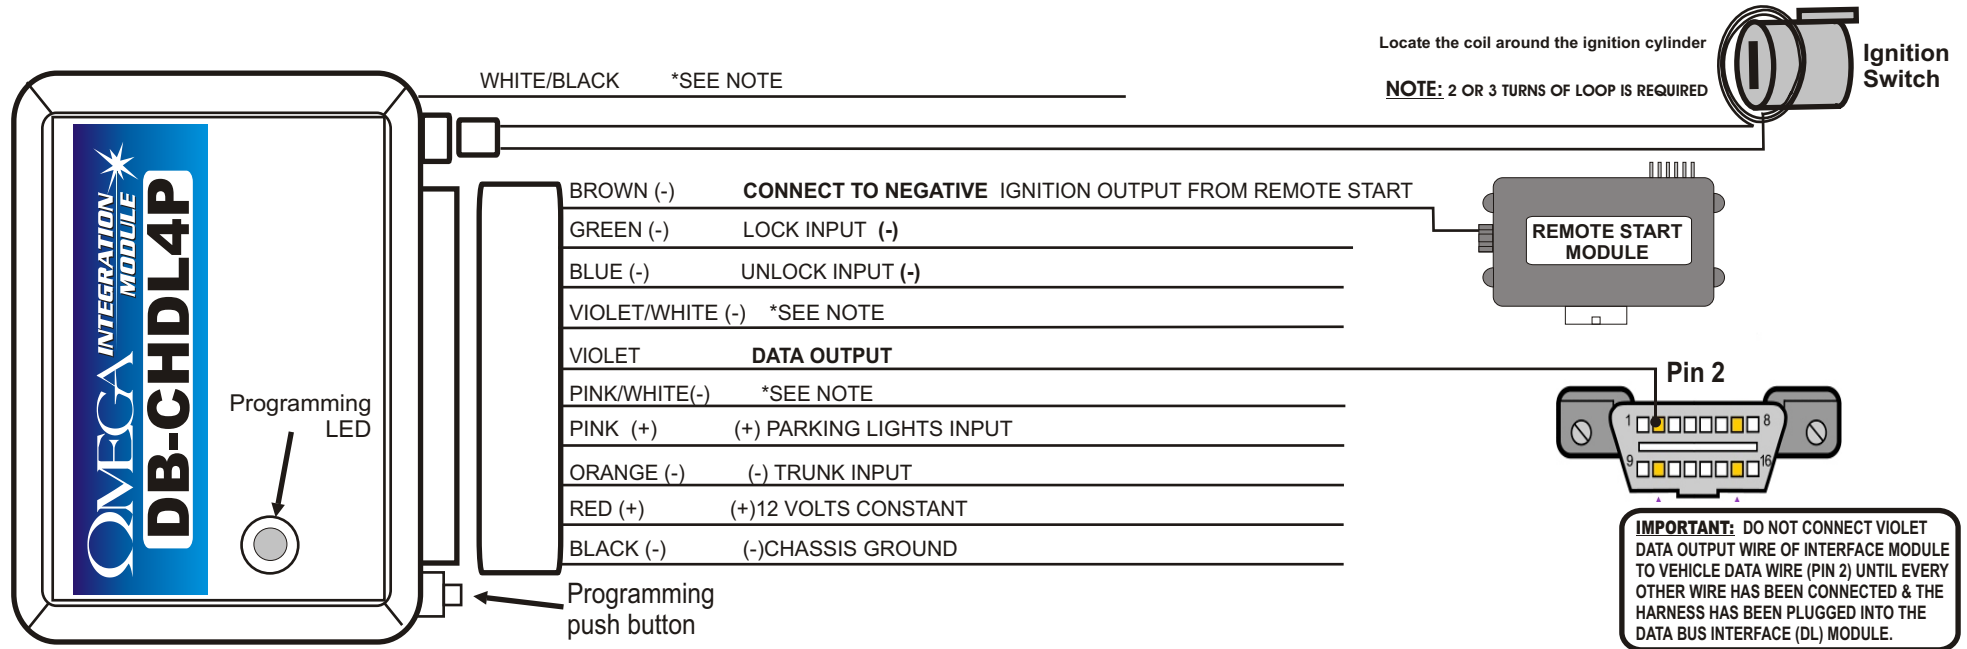

### TRANSPONDER PROGRAMMING MODE:

You will need 2 valid ignition keys. Proceed as follows:

- 1- Insert the first valid key into the ignition switch and turn the ignition switch "ON" for at least 3 seconds, but no longer than 15 seconds.
- 2- Turn the ignition switch "OFF" and remove the first key.
- 3- Insert the second valid key and turn the ignition switch "ON" within 15 seconds. After 10 seconds, a chime will sound and the "SECURITY" light will begin to flash. Turn the ignition switch "OFF" and remove the second key.

**YOU NOW HAVE 60 SECONDS TO PROCEED WITH THE NEXT STEP.**

- 4- Position the DB-CHDL3P module close and towards the ignition barrel for the next 2 steps.
- 5- With the help of a jumper wire, power up vehicle ignition.
- 6- After 10 seconds, a chime will sound. The "SECURITY" light will stop flashing, then turn "ON" for 3 seconds, then turn "OFF".

The transponder bypass portion of module is now programmed.

**IMPORTANT NOTE:** Once the DB-CHDL3P transponder has been programmed, it cannot be used on any other Chrysler vehicle. (This a Chrysler feature from factory.)

### DOORLOCK AND ALARM CONTROL PROGRAMMING:

Turn key to the ignition position, you will hear 3 chirps from horn. The doorlock module is now programmed.

### FEATURE PROGRAMMING:

- 1- Start with the key in "OFF" position. Press and hold the program button for 2 seconds. LED will flash for approximately 3 seconds. PAUSE, then flash once more to indicate entry into FEATURE1 (DOORLOCK SELECTION).
- 2- To advance to next feature, press the program button again. A flash of LED will confirm what feature you are in.  
**Ex:** 1 flash = FEATURE 1
- 3- You may then change your settings. Select the setting by pressing the LOCK or UNLOCK button from your aftermarket transmitter. LOCK is option 1, UNLOCK is option 2.
- 4- The vehicle horn will chirp once (1X) or twice (2X) to indicate option level.
- 5- To exit the FEATURE PROGRAMMING: Press and hold the program button until the LED flashes once (1X).

### PROGRAMMABLE FEATURES

FEATURE	LOCK	UNLOCK
1. Driver's Door Priority	ON	OFF

### \*NOTE: DO NOT ADD RESISTORS!

- **WHITE/BLACK WIRE:** Connect to the Pink/Violet wire at pin 10 of C2 at the Junction Block.
- **VIOLET/WHITE WIRE:** Connect to the Tan wire at pin 4 of C1 at the BCM.
- **PINK/WHITE WIRE:** Connect to the Light Green/Orange wire at pin 9 of C2 at the BCM.