



## '98-05 GM Doorlock, Alarm, & Immobilizer Integration Module

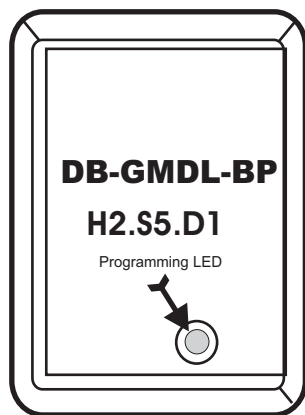

Programming button

BROWN (-)	*NEGATIVE GROUND OUTPUT WHEN RUNNING (-) (REMOTE START INSTALLATIONS ONLY)
GREEN (-)	LOCK INPUT
BLUE (-)	UNLOCK INPUT
VIOLET/WHITE	NOT USED
VIOLET	DATA OUTPUT CONNECT TO VIOLET DATA WIRE OF ODBII (PIN#2)
PINK/WHITE(-)	DOOR TRIGGER OUTPUT
PINK	DOME LIGHT INPUT FROM VEHICLE (MODE 6 DETERMINES INPUT POLARITY)
ORANGE(-)	**PANIC INPUT TYPE 1 & 4, TRUNK INPUT FOR TYPE 2 & 3
RED (+)	(+) 12 VOLTS CONSTANT
BLACK (-)	CHASSIS GROUND (-)

 **IMPORTANT:** DO NOT CONNECT VIOLET DATA OUTPUT WIRE OF INTERFACE MODULE TO VEHICLE DATA WIRE (PIN 2) UNTIL EVERY OTHER WIRE HAS BEEN CONNECTED & THE HARNESS HAS BEEN PLUGGED INTO THE DATA BUS INTERFACE (DL) MODULE.



**NOTE:**  
PINK and PINK/WHITE wires are **ONLY** used when installing a remote starter alarm combination system

### STEP #1

#### VEHICLE PLATFORM TYPE SELECTION MODE:

The DB-GMDL-BP is designed to operate on any one of 5 possible vehicle platform types. Once the DB-GMDL-BP has been successfully connected, the next step is to program the DB-GMDL-BP to operate on the appropriate Vehicle Platform Type. **See Vehicle Platform Chart below.**

- 1- Determine which Vehicle Platform Type matches your vehicle.  
**\*Default Vehicle Platform Setting is TYPE 1**
- 2- To change Vehicle Platform Type press and release the programming button until the required Platform Type is selected. LED confirms with matching number of flashes. (eg: Type 2 = 2 flashes, Type 3=3 flashes)
- 3- Once vehicle platform type has been selected, press & hold program button to save setting. LED blinks once to confirm setting is saved.
- 4- Release programming button the LED will come ON solid.
- 5- Start the vehicle with the ignition key: The LED will turn off confirming the DB-GMDL-BP is programmed for the selected vehicle platform.

**VEHICLE PLATFORM CHART**

VEHICLES	2005	2004	2003	2002	2001	2000	1999	1998
ALERO (FACTORY REMOTEONLY)		2	2	2	2	2		
AURORA			2	2	2			
AVALANCHE	4	4	4					
BONNEVILLE		2	2	2	2	2		
BRAVADA		1	1	1				
CADILLAC CTS		2	2					
CADILLAC SRX		2						
CADILLAC STS/SLS		3	3	3	3	3	3	3
DEVILLE		2	2	2	2	2	2	2
ENVOY		1	1	1				
ESCALADE	4	4	4					
GRAND AM (FACTORY REMOTEONLY)		2	2	2	2	2	2	
H2 HUMMER	4	4						
LE SABRE		2	2	2	2	2		
PARK AVENUE		3	3	3	3	3	3	3
PICKUP SIERRA	4	4	4					
PICKUP SILVERADO	4	4	4					
RAINIER		1						
SUBURBAN	4	4	4					
TAHOE	4	4	4					
TRAILBLAZER		1	1	1				
YUKON DENALI	4	4	4					

**TYPE 5: Passlock 2 and Passlock 3 Bypass Only  
(No Doorlock Function)**

#### TECH NOTES:

\*BROWN (-) For reliable conversion of analog to digital, all (-) input wires require a solid ground to activate each command function. Relays are not required except in cases in which the output(s) ground signal is insufficient. (Example: transistor +/- doorlock outputs)

\*\*ORANGE (-) In a Type 1 & 4 installation the orange wire can be used to activate the vehicles panic mode as long as the remote system has a dedicated panic output. A horn output is not suitable since it is also used to provide confirmation chirps, etc... which will result in triggering the panic function.

#### PROGRAMMING FEATURES:

Depending on the type of vehicle and/or aftermarket system being used in conjunction with the DB-GMDL-BP: Some options such as driver's door priority may have to be modified to correctly emulate the OEM features. **See Feature Programming Chart below.**

#### FEATURE PROGRAMMING:

- 1-Start with the key in "OFF" position.  
Press and hold the DB-GMDL-BP program button for 2 seconds. LED will flash for approximately 3 seconds. PAUSE, then flash once more to indicate entry into FEATURE1 (DOORLOCK SELECTION)
- 2-To advance to next feature, press DB-GMDL-BP program button again. A flash of LED will confirm what feature you are in.  
**Ex:** 1 flash = FEATURE 1, 2 flashes = FEATURE2, and so on...
- 3-Once you have entered the desired feature: you may then change your settings. Select the setting by pressing the LOCK or UNLOCK button from your aftermarket transmitter. LOCK is option 1, UNLOCK is option 2.
- 4-The vehicle horn will chirp once (1X) or twice (2X) to indicate option level.
- 5-To exit the FEATURE PROGRAMMING: Press and hold the DB-GMDL-BP program button until the LED flashes once (1X).
- 6-To return or change another feature, go to step 1.

#### PROGRAMMABLE FEATURES

FEATURE	LOCK	UNLOCK
1. Driver's Door Priority	ON	OFF
6. Dome Light Polarity	(+)	(-)
7. Reset All Features	Reset	N/A

**ONLY FEATURES 1, 6 AND 7 ARE AVAILABLE**