


HONDA & ACURA DOORLOCK INTERFACE

APPLICATIONS:

Pilot	2004-03	Odyssey	2004-00	Civic	2001-2004	Element	2003-2004
Accord	2002-1998	Accura TL	1998-2002	Accura 1.7 EL	2001-2003	CRV	2001-2004

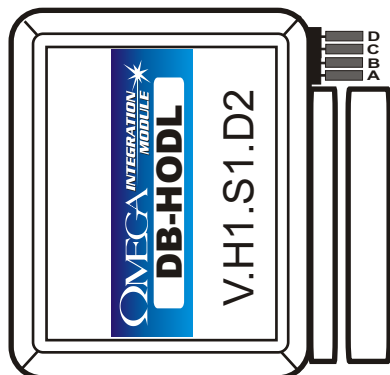

← Jumper selection

Brown	Negative Ground Output when running (-) (Remote Start Installations Only)
Green	Lock Input
Blue	Unlock all Input
Violet/White	Door switch out, Green/orange wire fuse box side (Pilot and Accord only)
Violet	Data out
Pink/white	Factory alarm ignition wire (yellow), alarm module side (Civic and Accura 1.7 only)
Pink	Factory alarm ignition wire (yellow), fuse box side (Civic and Accura 1.7 only)
Orange	Trunk in (Accord and Accura 1.7 Only)
Red	+12 Volts Constant
Black	- Chassis Ground

JUMPER POSITION

A: PILOT / ACCORD / ODYSSEY / ACCURA TL **C:** Not Used
B: CIVIC / ACURA EL / ELEMENT / CRV **D:** Not Used





MODULE SIDE VIEW


IMPORTANT: DO NOT CONNECT VIOLET DATA OUTPUT WIRE OF INTERFACE MODULE TO VEHICLE DATA WIRE UNTIL EVERY OTHER WIRE HAS BEEN CONNECTED & THE HARNESS HAS BEEN PLUGGED INTO THE DATA BUS INTERFACE (DL) MODULE.

PILOT, ACCORD, ODYSSEY & ACURA TL DIAGRAM

Female connector, wire side of fuse box

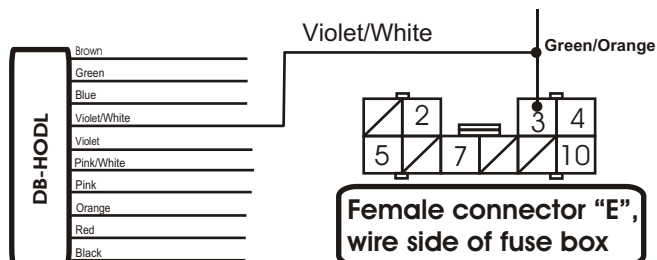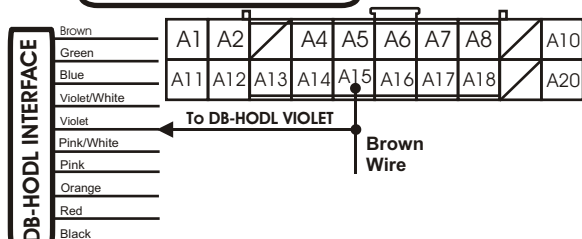

CIVIC, ACURA 1.7 EL, ELEMENT & CRV DIAGRAM

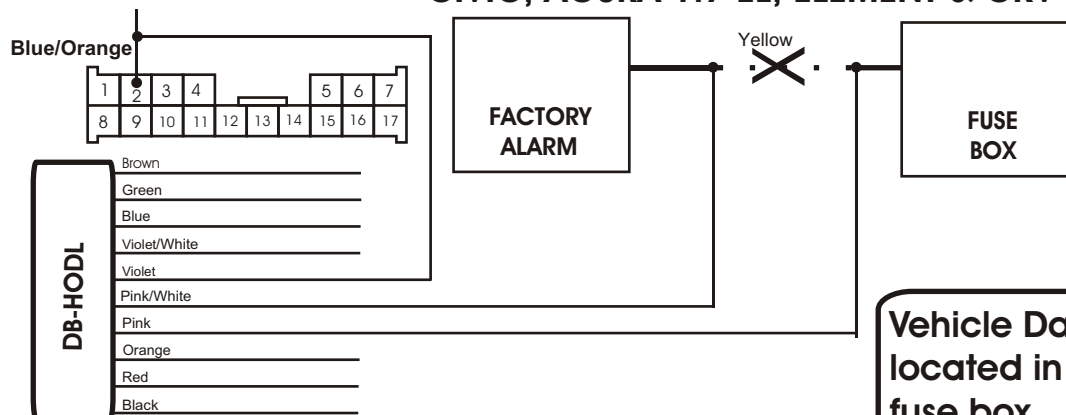

Vehicle Data wire is Blue/Orange located in connector "K" behind fuse box