

When the DB-PKG5 is correctly installed, turn the ignition key to the "ON" position for about 5 seconde, the DB-PKG5 is now programmed. Turn to the "OFF" position, then start engine with remote starter.

DISCLAIMER : Under no circumstances shall the manufacturer or the distributors of the DB-PKG5 parts be held liable for consequential damages sustained in connection with the DB-PKG5. The manufacturer and it's distributors will not, nor will they authorize any representative or any other individual to assume obligation or liability in relation to the DB-PKG5 other than its replacement. Omega Research & Development Inc. 2002