


IB-H1 Installation Instructions

HONDA/ACURA TRANSPONDER BYPASS KIT (NO KEY REQUIRED)

* See Select Vehicle List Below

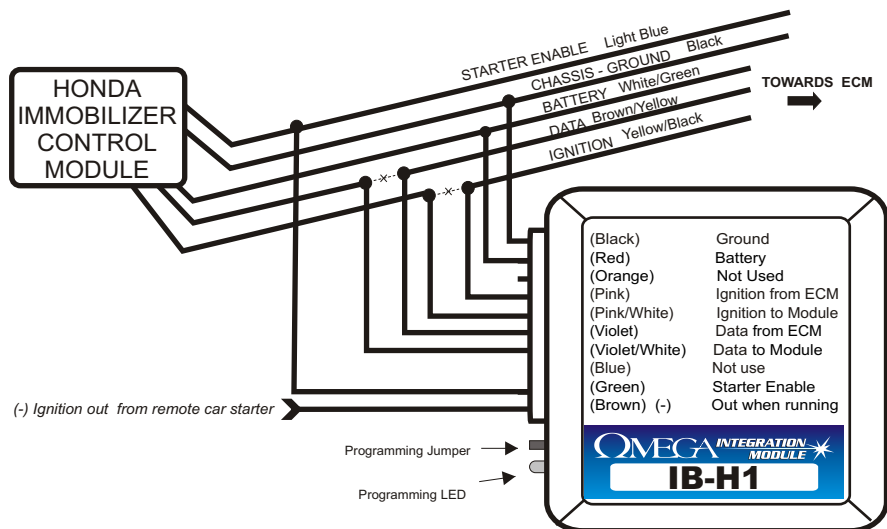

COMPATIBLE VEHICLES:

RL	1998-2004
PRELUDE	1997-2001

PROGRAMMING THE IB-H1

When the IB-H1 is correctly installed, Put the programming jumper to the "Programming" position (The LED must be "On") turn the ignition key to the "ON" position and start the vehicle,,when the IB-H1 is programmed the LED will blink. Turn to the Ignition "OFF" position and remove the programming jumper (the LED will stop blinking).

Under no circumstances shall the manufacturer and/or distributors of the (IB-H1) parts are liable for consequential damages sustained in connection with the (IB-H1). Neither assumes nor authorizes any representative or other person to assume for it any obligation or liability other than the replacement of the (IB-H1) parts it self.


Omega Research & Development Inc. 2004

IS_IB-H1 10/25/04

IB-H1 Installation Instructions

HONDA/ACURA TRANSPONDER BYPASS KIT (NO KEY REQUIRED)

* See Select Vehicle List Below

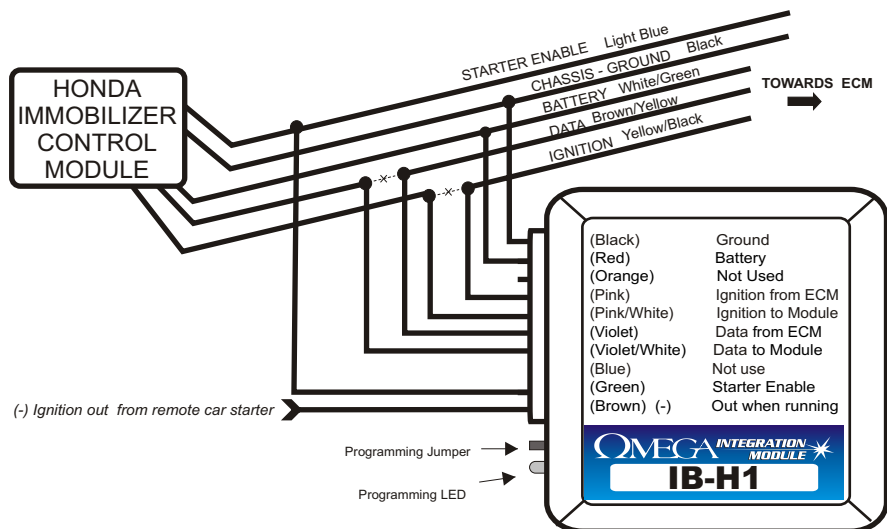

COMPATIBLE VEHICLES:

RL	1998-2004
PRELUDE	1997-2001

PROGRAMMING THE IB-H1

When the IB-H1 is correctly installed, Put the programming jumper to the "Programming" position (The LED must be "On") turn the ignition key to the "ON" position and start the vehicle,,when the IB-H1 is programmed the LED will blink. Turn to the Ignition "OFF" position and remove the programming jumper (the LED will stop blinking).

Under no circumstances shall the manufacturer and/or distributors of the (IB-H1) parts are liable for consequential damages sustained in connection with the (IB-H1). Neither assumes nor authorizes any representative or other person to assume for it any obligation or liability other than the replacement of the (IB-H1) parts it self.

Omega Research & Development Inc. 2004

IS_IB-H1 10/25/04