


HONDA/ACURA IMMOBILIZER BYPASS KIT


Honda Accord	2003-04	Acura 1.7 EL	2001-04
Honda Civic	2001-04	Acura MDX	2003-04
Honda CRV	2002-04	Acura RSX	2002-04
Honda Element	2003-04	Acura TSX	2004
		Acura TL	2004

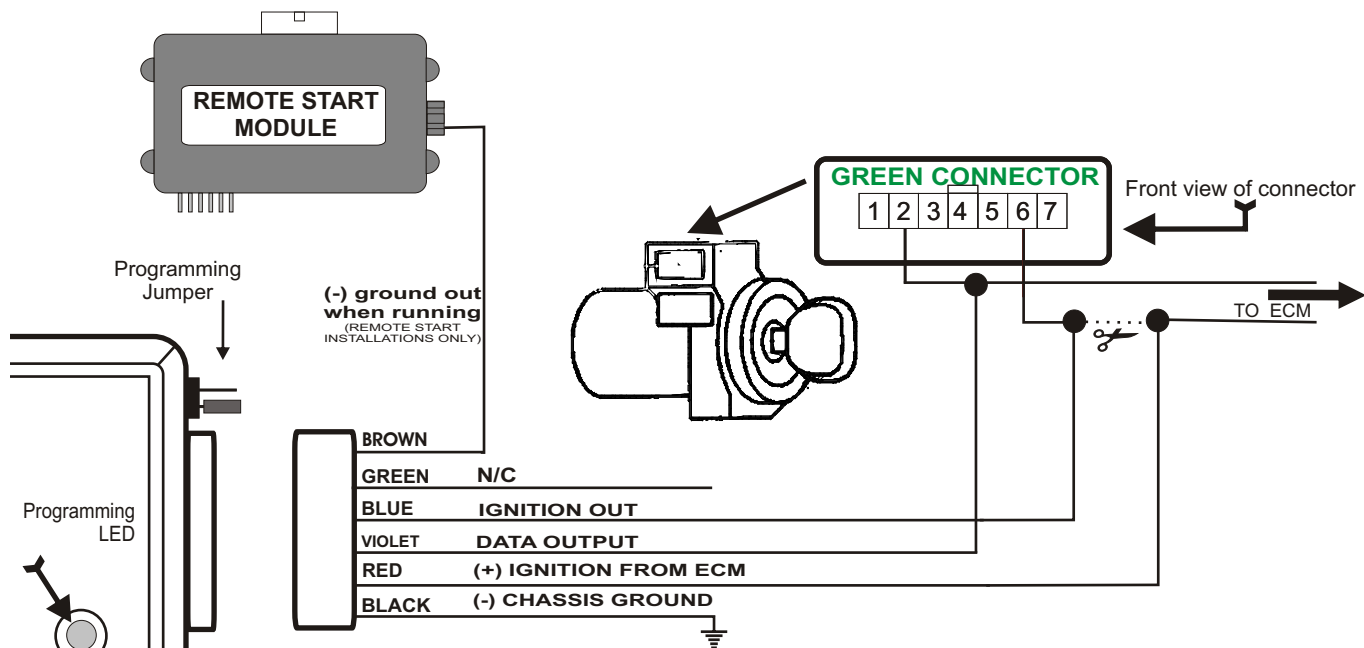


YOU MUST USE THE BLACK KEY TO PROGRAM THE BYPASSKIT MODULE. The valet (grey or red) cannot be used for programming.

PROGRAMMING THE BYPASSKIT


1. Place the programming jumper in "PROGRAMMING" position FIG.: A
2. Turn the ignition key to the "ON" position the LED will blink.
3. Remove the programming jumper and place in "OPERATING" position Fig.: C
4. Put it to the "OFF" position

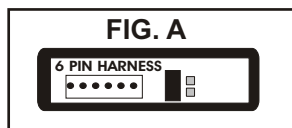


Programming Position

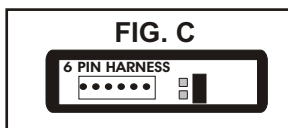

Operating Position

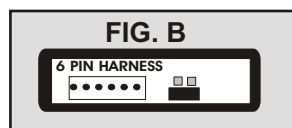

Not use

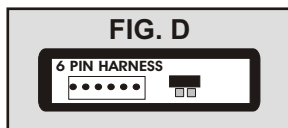

Not use

VEHICLE	Data (Code)	Ignition	Ground (Gnd)
Acura 1.7 EL 2001	Red/Blue Pos.:#2	Yellow/Black Pos.:#6	Brown/ Yellow Pos.:#1
Acura MDX 2003	Red Pos.:#2	Green/White Pos.:#6	Brown/ Yellow Pos.:#1
Acura RSX 2002	Red/Blue Pos.:#2	Yellow/Black Pos.:#6	Brown/ Yellow Pos.:#1
Acura TSX 2003	Red/Blue Pos.:#2	Black/Yellow Pos.:#6	Brown/ Yellow Pos.:#1
Acura TL 2004	Red/Blue Pos.:#2	Black/Blue Pos.:#6	Brown/ Yellow Pos.:#1
Honda Accord 2003	Blue/Red Pos.:#2	Black/Yellow Pos.:#6	Brown/ Yellow Pos.:#1
Honda Civic 2001-03	Red/Blue Pos.:#2	Yellow/Black Pos.:#6	Brown/ Yellow Pos.:#1
Honda CRV 2002-03	White Pos.:#2	Yellow/Black Pos.:#6	Brown/ Yellow Pos.:#1
Honda Element 2003	White Pos.:#2	Yellow/Black Pos.:#6	Brown/ Yellow Pos.:#1