


IB-M2 Installation Instructions

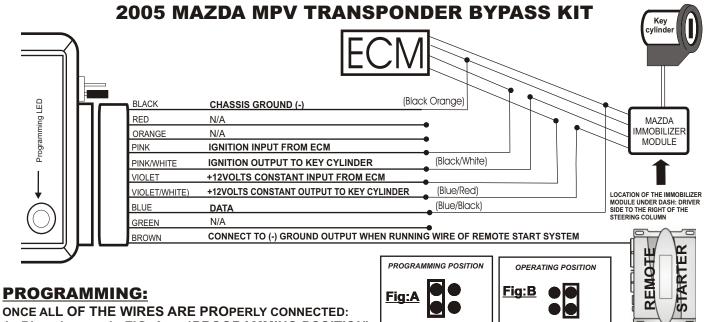


ONCE ALL OF THE WIRES ARE PROPERLY CONNECTED:

- 1. Place jumper in FIG. A (PROGRAMMING POSITION)
- 2. Turn the ignition key to the "ON" position (LED will illuminate) then start the vehicle.
- 3. When the module is programmed the LED will blink.
- 4. Turn the Ignition to the "OFF" position. Remove jumper and place in FIG. B - (OPERATING POSITION)

NKR TRANSPONDER BYPASS IS NOW PROGRAMMED

IS_IB-M2 9/9/05



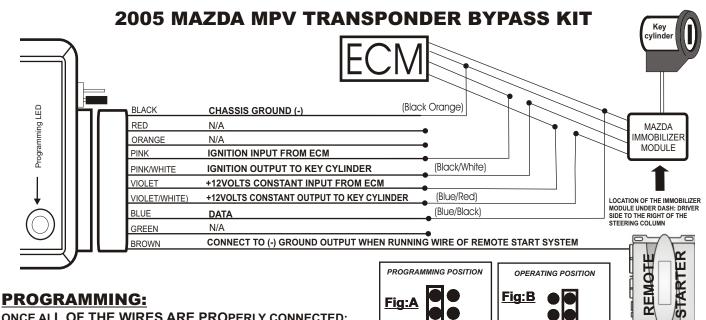

ONCE ALL OF THE WIRES ARE PROPERLY CONNECTED:

- 1. Place jumper in FIG. A (PROGRAMMING POSITION)
- 2. Turn the ignition key to the "ON" position (LED will illuminate) then start the vehicle.
- 3. When the module is programmed the LED will blink.
- 4. Turn the Ignition to the "OFF" position.

Remove jumper and place in FIG. B - (OPERATING POSITION)