


IB-UCH Installation Instructions

CHRYSLER SENTRY KEY IMMOBILIZER BYPASS

See application chart for compatible vehicles

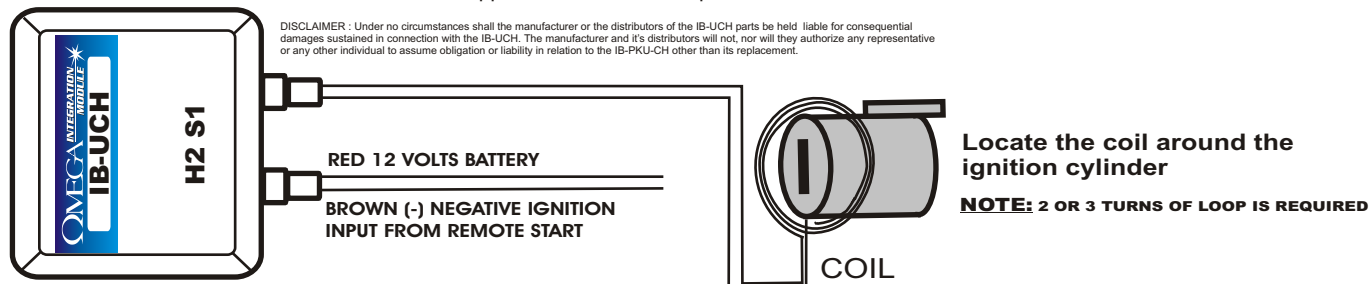

TRANSPONDER PROGRAMMING MODE:

After completing the remote start and IB-UCH installation, confirm that the vehicle will start by simply inserting one valid ignition key into the ignition switch and activating the remote start. Then, perform the following procedure to program the module.

NOTE: You will need 2 valid ignition keys to program the IB-UCH.


- 1- Insert the first valid key into the ignition switch and turn it "ON" for at least 3 seconds (no more than 15 seconds).
- 2- Turn the ignition switch "OFF" and remove the first key.
- 3- Insert the second valid key and turn the ignition switch "ON" within 15 seconds. After 10 seconds, a chime will sound and the "SECURITY" light will begin to flash. Turn the ignition switch "OFF" and remove the second key.
- 4- Within 60 seconds of step 3, position the SCREW side of the PKU module close to and towards the ignition barrel.
- 5- Use a jumper wire to supply +12 volts to the primary ignition wire in the vehicle.
- 6- After 10 seconds, a chime will sound. The "SECURITY" light will stop flashing, then turn "ON" for 3 seconds, then turn "OFF". The transponder bypass portion of module is now programmed.
- 7- Place the antenna coil around the ignition switch antenna, mount the IB-UCH module under the dash.
- 8- Confirm proper operation by testing the remote start system.

IS_IB-UCH 11/10/04

IB-UCH Installation Instructions

CHRYSLER SENTRY KEY IMMOBILIZER BYPASS

See application chart for compatible vehicles

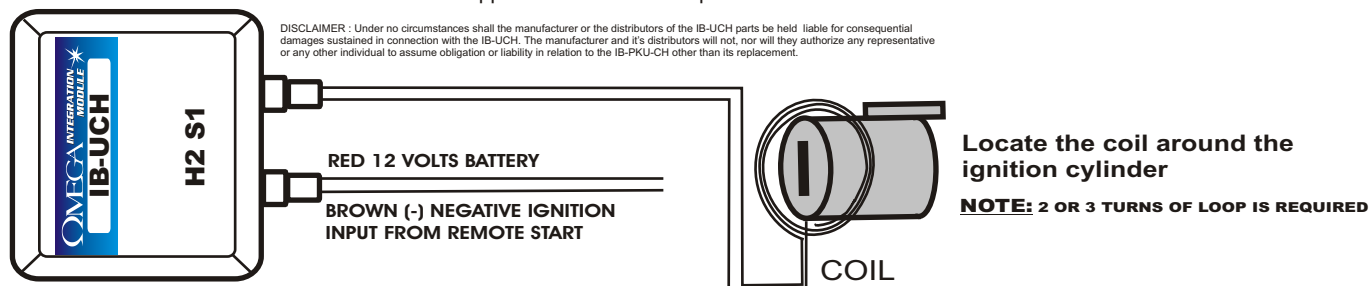

TRANSPONDER PROGRAMMING MODE:

After completing the remote start and IB-UCH installation, confirm that the vehicle will start by simply inserting one valid ignition key into the ignition switch and activating the remote start. Then, perform the following procedure to program the module.

NOTE: You will need 2 valid ignition keys to program the IB-UCH.

- 1- Insert the first valid key into the ignition switch and turn it "ON" for at least 3 seconds (no more than 15 seconds).
- 2- Turn the ignition switch "OFF" and remove the first key.
- 3- Insert the second valid key and turn the ignition switch "ON" within 15 seconds. After 10 seconds, a chime will sound and the "SECURITY" light will begin to flash. Turn the ignition switch "OFF" and remove the second key.
- 4- Within 60 seconds of step 3, position the SCREW side of the PKU module close to and towards the ignition barrel.
- 5- Use a jumper wire to supply +12 volts to the primary ignition wire in the vehicle.
- 6- After 10 seconds, a chime will sound. The "SECURITY" light will stop flashing, then turn "ON" for 3 seconds, then turn "OFF". The transponder bypass portion of module is now programmed.
- 7- Place the antenna coil around the ignition switch antenna, mount the IB-UCH module under the dash.
- 8- Confirm proper operation by testing the remote start system.

IS_IB-UCH 11/10/04