


## MITSUBISHI IMMOBILIZER BYPASS

### VEHICLE COMPATIBILITY:

Model	Years
Galant	1999-04
Eclipse	2000-01

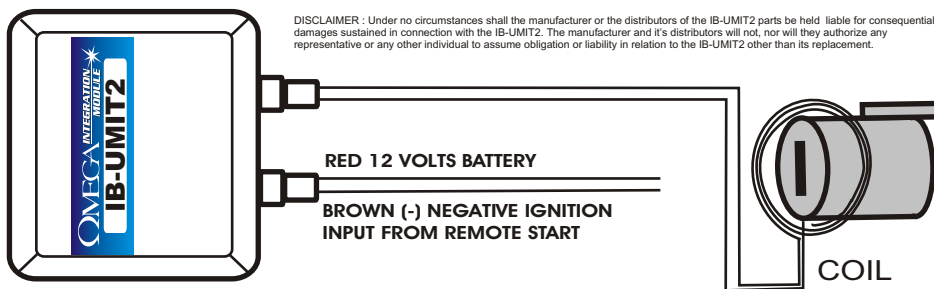

Locate the coil around the ignition cylinder

**NOTE: 2 OR 3 TURNS OF LOOP IS REQUIRED**

### TRANSPONDER PROGRAMMING MODE:

After completing the remote start and IB-UMIT2 installation, confirm that the vehicle will start by simply inserting one valid ignition key into the ignition switch and activating the remote start. Then, perform the following procedure to program the module.

NOTE: You will need 2 valid ignition keys to program the IB-UMIT2.


- 1- Insert the first valid key into the ignition switch and turn the ignition switch "ON" for at least 5 seconds.
- 2- Turn the ignition switch "OFF" and remove the first key.
- 3- Insert the second valid key and turn the ignition switch "ON" for 7 seconds.  
Turn the ignition switch "OFF" and remove the second key.
- 4- Position the screw of the IB-UMIT2 module close to and towards the ignition switch.
- 5- Use a jumper wire to supply +12 volts to the primary ignition wire in the vehicle.
- 6- After 7 seconds the "THEFT" light will come on solid, flash, then come on solid again.  
The transponder bypass portion of module is now programmed.
- 7- Place the antenna coil around the ignition switch antenna, mount the IB-UMIT2 module under the dash.
- 8- Confirm proper operation by testing the remote start system.

IS\_IB-UMIT2 11/10/04

## MITSUBISHI IMMOBILIZER BYPASS

### VEHICLE COMPATIBILITY:

Model	Years
Galant	1999-04
Eclipse	2000-01

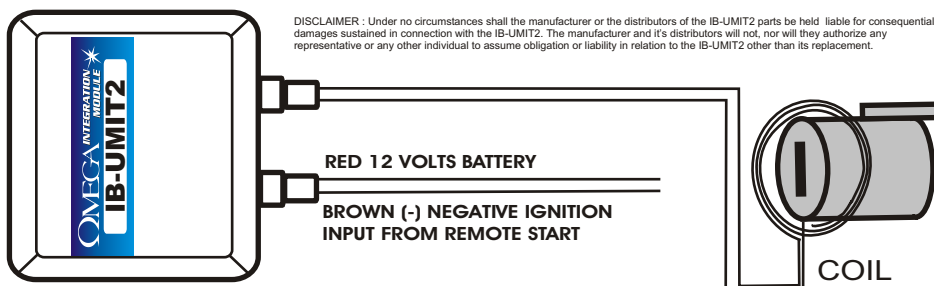

Locate the coil around the ignition cylinder

**NOTE: 2 OR 3 TURNS OF LOOP IS REQUIRED**

### TRANSPONDER PROGRAMMING MODE:

After completing the remote start and IB-UMIT2 installation, confirm that the vehicle will start by simply inserting one valid ignition key into the ignition switch and activating the remote start. Then, perform the following procedure to program the module.

NOTE: You will need 2 valid ignition keys to program the IB-UMIT2.

- 1- Insert the first valid key into the ignition switch and turn the ignition switch "ON" for at least 5 seconds.
- 2- Turn the ignition switch "OFF" and remove the first key.
- 3- Insert the second valid key and turn the ignition switch "ON" for 7 seconds.  
Turn the ignition switch "OFF" and remove the second key.
- 4- Position the screw of the IB-UMIT2 module close to and towards the ignition switch.
- 5- Use a jumper wire to supply +12 volts to the primary ignition wire in the vehicle.
- 6- After 7 seconds the "THEFT" light will come on solid, flash, then come on solid again.  
The transponder bypass portion of module is now programmed.
- 7- Place the antenna coil around the ignition switch antenna, mount the IB-UMIT2 module under the dash.
- 8- Confirm proper operation by testing the remote start system.

IS\_IB-UMIT2 11/10/04