


MITSUBISHI IMMOBILIZER BYPASS

| Model | 04 |
|-----------|----|
| Galant | ● |
| Outlander | ● |

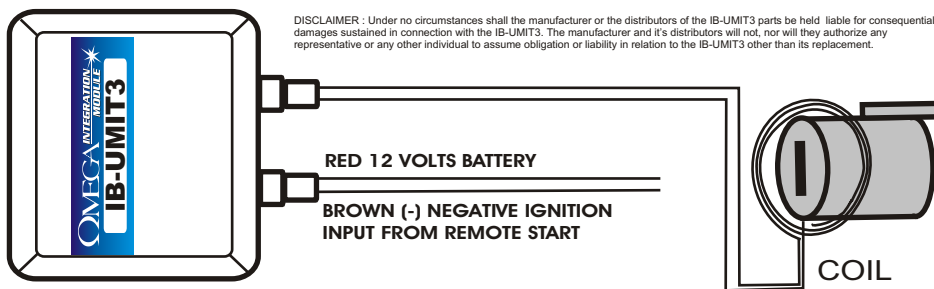

Locate the coil around the ignition cylinder

NOTE: 2 OR 3 TURNS OF LOOP IS REQUIRED

TRANSPONDER PROGRAMMING MODE:

After completing the remote start and IB-UMIT3 installation, confirm that the vehicle will start by simply inserting one valid ignition key into the ignition switch and activating the remote start. Then, perform the following procedure to program the module.


NOTE: You will need 2 valid ignition keys to program the IB-UMIT3.

- 1- Insert the first valid key into the ignition switch and turn the ignition switch "ON" for at least 5 seconds.
- 2- Turn the ignition switch "OFF" and remove the first key.
- 3- Insert the second valid key and turn the ignition switch "ON" for 10 seconds.
Turn the ignition switch "OFF" and remove the second key.
- 4- Position the screw of the IB-UMIT3 module close to and towards the ignition switch.
- 5- Use a jumper wire to supply +12 volts to the primary ignition wire in the vehicle.
- 6- After 7 seconds the "THEFT" light will come on solid, flash, then come on solid again.
The transponder bypass portion of module is now programmed.
- 7- Place the antenna coil around the ignition switch antenna, mount the IB-UMIT3 module under the dash.
- 8- Confirm proper operation by testing the remote start system.

IS_IB-UMIT3 11/10/04

MITSUBISHI IMMOBILIZER BYPASS

| Model | 04 |
|-----------|----|
| Galant | ● |
| Outlander | ● |

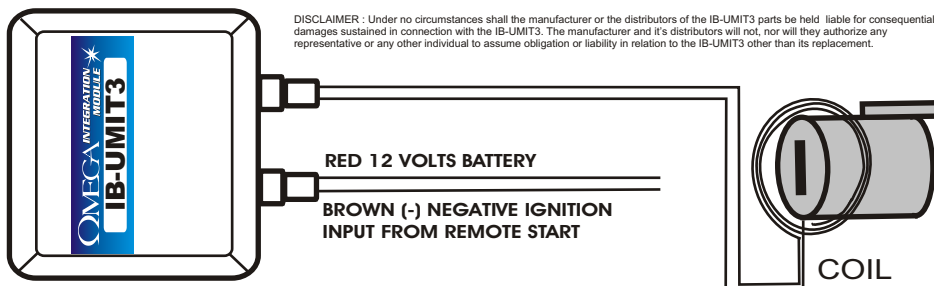

Locate the coil around the ignition cylinder

NOTE: 2 OR 3 TURNS OF LOOP IS REQUIRED

TRANSPONDER PROGRAMMING MODE:

After completing the remote start and IB-UMIT3 installation, confirm that the vehicle will start by simply inserting one valid ignition key into the ignition switch and activating the remote start. Then, perform the following procedure to program the module.

NOTE: You will need 2 valid ignition keys to program the IB-UMIT3.

- 1- Insert the first valid key into the ignition switch and turn the ignition switch "ON" for at least 5 seconds.
- 2- Turn the ignition switch "OFF" and remove the first key.
- 3- Insert the second valid key and turn the ignition switch "ON" for 10 seconds.
Turn the ignition switch "OFF" and remove the second key.
- 4- Position the screw of the IB-UMIT3 module close to and towards the ignition switch.
- 5- Use a jumper wire to supply +12 volts to the primary ignition wire in the vehicle.
- 6- After 7 seconds the "THEFT" light will come on solid, flash, then come on solid again.
The transponder bypass portion of module is now programmed.
- 7- Place the antenna coil around the ignition switch antenna, mount the IB-UMIT3 module under the dash.
- 8- Confirm proper operation by testing the remote start system.

IS_IB-UMIT3 11/10/04