


MITSUBISHI IMMOBILIZER BYPASS

Model	05	04	03	02	01	00
Diamante			●	●	●	●
Eclipse			●	●	●	●
Galant			●	●	●	●
Montero	●	●	●	●	●	
Montero Sport			●	●	●	●
Outlander			●			



DISCLAIMER: Under no circumstances shall the manufacturer or the distributors of the IB-UMIT parts be held liable for consequential damages sustained in connection with the IB-UMIT. The manufacturer and its distributors will not, nor will they authorize any representative or any other individual to assume obligation or liability in relation to the IB-UMIT other than its replacement.

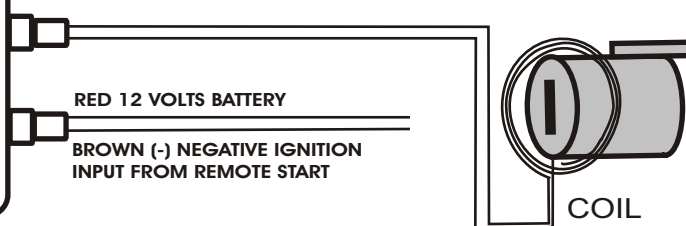

Locate the coil around the ignition cylinder

TRANSPONDER PROGRAMMING MODE:

NOTE: 2 OR 3 TURNS OF LOOP IS REQUIRED

After completing the remote start and IB-UMIT installation, confirm that the vehicle will start by simply inserting one valid ignition key into the ignition switch and activating the remote start. Then, perform the following procedure to program the module.

NOTE: You will need 2 valid ignition keys to program the IB-UMIT.

- 1- Insert the first valid key into the ignition switch and turn the ignition switch "ON" for at least 5 seconds.
- 2- Turn the ignition switch "OFF" and remove the first key.
- 3- Insert the second valid key and turn the ignition switch "ON" for 7 seconds.
Turn the ignition switch "OFF" and remove the second key.
- 4- Position the screw of the IB-UMIT module close to and towards the ignition switch.
- 5- Use a jumper wire to supply +12 volts to the primary ignition wire in the vehicle.
- 6- After 7 seconds the "SECURITY" light will come on for 3 seconds.
The transponder bypass portion of module is now programmed.
- 7- Place the antenna coil around the ignition switch antenna, mount the IB-UMIT module under the dash.
- 8- Confirm proper operation by testing the remote start system.


IS_IB-UMIT 11/10/04

MITSUBISHI IMMOBILIZER BYPASS

Model	05	04	03	02	01	00
Diamante			●	●	●	●
Eclipse			●	●	●	●
Galant			●	●	●	●
Montero	●	●	●	●	●	
Montero Sport			●	●	●	●
Outlander			●			



DISCLAIMER: Under no circumstances shall the manufacturer or the distributors of the IB-UMIT parts be held liable for consequential damages sustained in connection with the IB-UMIT. The manufacturer and its distributors will not, nor will they authorize any representative or any other individual to assume obligation or liability in relation to the IB-UMIT other than its replacement.

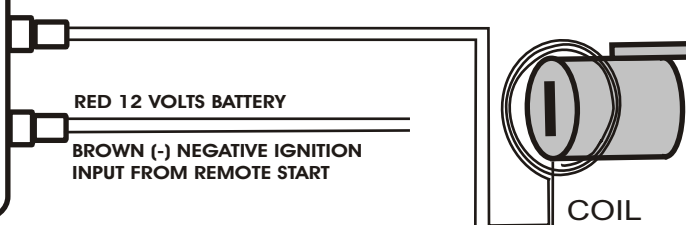

Locate the coil around the ignition cylinder

TRANSPONDER PROGRAMMING MODE:

NOTE: 2 OR 3 TURNS OF LOOP IS REQUIRED

After completing the remote start and IB-UMIT installation, confirm that the vehicle will start by simply inserting one valid ignition key into the ignition switch and activating the remote start. Then, perform the following procedure to program the module.

NOTE: You will need 2 valid ignition keys to program the IB-UMIT.

- 1- Insert the first valid key into the ignition switch and turn the ignition switch "ON" for at least 5 seconds.
- 2- Turn the ignition switch "OFF" and remove the first key.
- 3- Insert the second valid key and turn the ignition switch "ON" for 7 seconds.
Turn the ignition switch "OFF" and remove the second key.
- 4- Position the screw of the IB-UMIT module close to and towards the ignition switch.
- 5- Use a jumper wire to supply +12 volts to the primary ignition wire in the vehicle.
- 6- After 7 seconds the "SECURITY" light will come on for 3 seconds.
The transponder bypass portion of module is now programmed.
- 7- Place the antenna coil around the ignition switch antenna, mount the IB-UMIT module under the dash.
- 8- Confirm proper operation by testing the remote start system.

IS_IB-UMIT 11/10/04