Platform # 02

Firmware: NISSDL

Installation Manual (1\3 Pages)

Internet

STARTER/ ALARM

Description: Nissan & Infiniti Doorlock Alarm Interface (NO KEY REQUIRED)

Functions: Lock/Unlock, OEM Security Arm/Disarm

Downloadable Firmware for Platform #02: HODL, NISSDL, SUBDL

WARNING: Before beginning your install go to www.XPRESSKIT.com and be sure to print the LATEST corresponding installation manual for the firmware that is flashed to the platform you are using.

See Wire Connection Guide for detailed information regarding wire functionality Option A Firmware Upgrade D2D 4 PIN DATA TO DATA (D2D) CABLE (OPTIONAL ACCESSORY) Option B - Data 2 Data Connection to RCS Data Por



Ground When Running Brown (-) INPUT Green 5 (-) Unlock OUTPUT (-)Violet/White Trunk Output Data (See Wire Guide) Data (See Wire Guide) DATA INPUT Pink/White DATA OUTPUT Pink Data (See Wire Guide) ESS Orange Trunk Input (+)12 Volt Constant INPUT Red INPUT **Black Chassis Ground**

Section B

WIRE GUIDE: CONNECTIONS

Programming button

D2D = Optional use of 4 Pin Data to Data (D2D) cable will replace the analogue wire (w2w) connection **10 PIN HARNESS**

PIN#	WIRE COLOR	VEHICLE TYPE		I/O STATUS	(-) /(+)	Connect Location	SPECIFIC WIRE CONNECTION LOCATION	ACTIVATION and/or FUNCTIONALITY
1	Brown	N/A	D2D w2w	Input	(-)	RCS	Ground When Running output of remote starter	OEM Security Arm/Disarm
2	Green	N/A	D2D w2w	Input	(-)	RCS	Connect to (-) Lock Output wire of RCS	Lock All Doors
3	Blue	N/A	D2D w2w	Input	(-)	RCS	Connect to (-) Unlock Output wire of RCS	Unlocks All Doors
4	Violet/ White	N/A	w2w	Output	(-)	Vehicle	Connect to vehicle (-) Trunk Release at switch	Trunk Release
5	Violet	See Vehicle Wiring List		Data Output		Vehicle	See Vehicle Wiring List for connection	Data Commands from Module to Vehicle
6	Pink/ White	See Vehicle Wiring List	w2w	Data Input		Vehicle	See Vehicle Wiring List for connection	Data Commands from Module to Vehicle
7	Pink	See Vehicle Wiring List		Data Output		Vehicle	See Vehicle Wiring List for connection	Data Commands from Module to Vehicle
8	Orange	N/A	D2D w2w	Input	(-)	RCS	Connect to (-) Trunk Output wire of RCS	Trunk Release
9	Red	N/A	D2D w2w	Input	(+)	Vehicle	Constant (+) 12 Volt Source	Power Source
10	Black	N/A	D2D w2w	Input	(-)	Vehicle	Chassis Ground	Ground Source

RCS = Remote Control System Legend

N/C = No Connection

N/A = Not Applicable w2w= analogue wire to wire D2D= data 2 data

DATA to DATA PORT (D2D): Blue connector of D2D Cable plugs into the upgradeable vehicle interface module.

OPTION A: - D2D Port used to connect to USB Bootloader adaptor & computer to download & flash vehicle interface firmware.

OPTION B: - D2D Port used to connect to the data port of a remote control system equipped with ClearCode Vehicle Interface Protocol.

Remote control systems designed with ClearCode VIP can securely communicate via the D2D cable to transmit & receive data commands which initiate specific vehicle function such as doorlocks & immobilizer override and /or request information from the vehicle such as status of entry points (doors) or ambiant température, diesel glow plug etc... ClearCode VIP represents the doorway to vehicle integration..

Platform # 02

Firmware: NISSDL

Installation
Manual (2\3 Pages)

Description: Nissan & Infiniti Doorlock Alarm Interface (NO KEY REQUIRED)

Functions: Lock/Unlock, OEM Security Arm/Disarm

Section C

VEHICLE PROGRAMMING

1) Once the module has been properly connected, LED will flash one time. If LED stays ON, press lock or unlock in the vehicle to activate Data Line.

Section D

USER SETTINGS - OPTIONAL PROGRAMMING:

USER MODES ARE IDENTIFIED BY A SLOW LED FLASH PATTERN. 1 SLOW FLASH=MODE1, 2 SLOW FLASHES=MODE 2

- 1) Turn the ignition key to the OFF position.
- 2) To access USER MODES: Press & Hold the programming button until the LED flashes rapidly, then release.
- 3) To select a MODE: Press & Release the program button until the slow LED flash pattern matches the required MODE selection:

NOTE: ONLY MODE 8 IS AVAILABLE

4) To change the MODE OPTION: Press the LOCK or UNLOCK button on the aftermarket transmitter. LED will confirm selection of OPTION 1 with one fast flash or OPTION 2 with two fast flashes and so on.

* = Dofoult


MODE 8 = *OPTION 1: NO RESET


OPTION 2: Reset Mode With Unlock Button

Section E

VEHICLE WIRING LIST

Nissan Maxima	VIOLET	Connect to Yellow wire Pin #2 of 24 Pin connector of BCM located in driver's kick panel (See Fig.2)	
2003 - 2007	PINK / WHITE	N/C	
Nissan Murano	VIOLET	Connect to Brown/White Wire in from driver door (See Fig.2)	
2003 - 2007	PINK / WHITE	N/C	
Nissan Altima 2004 - 2007	VIOLET and PINK	Connect to Yellow / Green wire BCM Side (Wire in from driver door) (See Fig.1)	
With OEM Alarm Only	PINK / WHITE	Connect to Yellow / Green wire Door Side (Wire in from driver door)	
Nissan Quest	VIOLET and PINK	Connect to Yellow / Black Wire BCM Side (Wire in from driver door) (See Fig.1)	
2004 - 2007	PINK / WHITE	Connect to Yellow / Black wire Door Side (Wire in from driver door)	
Nissan Armada	VIOLET and PINK	Connect to White / Violet wire BCM Side (See Fig.1)	
2004 - 2006	PINK / WHITE	Connect to White / Violet wire Door Side (Wire in from driver door)	
Nissan 350Z 2003 - 2006	VIOLET	Connect to Yellow wire Pin #2 (with Grey dots) at BCM kick panel or Wire in from driver door (See Fig.2)	
*Do not cut Data	PINK / WHITE	N/C	
Nissan Titan 2004 - 2007	VIOLET and PINK	Connect to Green wire BCM side: wire found in Black shielded cable in from driver door (See Fig.1)	
2001 2001	PINK / WHITE	Connect to Green wire Door Side: wire found in Black shielded cable in from driver door	
Infiniti FX 45 2004 - 2007 Infiniti FX 35 2004 - 2007	VIOLET	Connect to Orange wire in large white connector: Left of steering or Wire in from driver door. (See Fig.2) NOTE: Disarm unlocks doors	
*Do not cut Data	PINK / WHITE	N/C NOTE: Disarming with Brown wire unlocks doors. You need to relock doors after ignition	
Infinity M35,	VIOLET and PINK	Connect to Orange wire BCM side (Wire in from driver door) (See Fig.1)	
M35X, M35S 2006	PINK / WHITE	Connect to Orange wire Door Side (Wire in from driver door)	

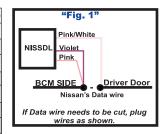

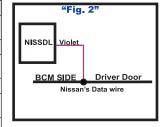

Platform # 02

Firmware: NISSDL

Installation
Manual (3\3 Pages)

Description: Nissan & Infiniti Doorlock Alarm Interface (NO KEY REQUIRED)

Functions: Lock/Unlock, OEM Security Arm/Disarm

IM-02 Compatibility Chart	Chart									
Infiniti	2007	2006	2002	2004	2003	2002	2001	2000	1999	1998
FX35										
FX45	0	0	0	0	0					
G35										
G35 Coupe	(
M35										
M35S		0								
M35X										
QX56				0						
Nissan	2007	2006	2002	2004	2003	2002	2001	2000	1999	1998
350Z										
Altima										
Armada	0									
Maxima	((0				
Murano	(
Pathfinder										
Quest										
Titan		0	()	0						

Number of keys required to program kit: 1
Number of keys required for kit operation: 0

