

Some newer vehicles and certain generations of Ford's PATS have a voltage spike issue that can lock up the IM04. This simple diagram will isolate the IM04's TX wire to prevent seeing the spike by connecting it only when the ignition is in the "ON" or "RUN" position. Make all other connections as described in the installation guide for the IM04.

