Platform # 05

Firmware: PKG3

Installation
Manual (1\1 Pages)


Description: GM Transponder Interface: PASSKEY 3 (NO KEY REQUIRED)

Functions: Override OEM Transponder Immobilizer Via Data (NO KEY REQUIRED)

Downloadable Firmware for Platform #05: PKG3,PKG8,PKH1, PKH2,PKH3,PKH4,PKHY1,PKM2,PKN2,PKT2
WARNING: Before beginning your install go to www.INTELLIKITS.com and be sure to print the LATEST corresponding installation manual for the firmware that is flashed to the platform you are using.

Section A

See Wire Connection Guide for detailed information regarding wire functionality

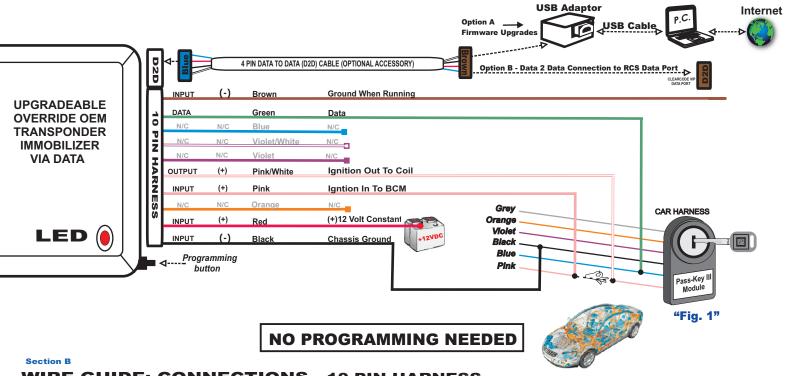

WIRE GUIDE: CONNECTIONS - 10 PIN HARNESS

D2D = Optional use of 4 Pin Data to Data (D2D) cable will replace the analogue wire (w2w) connection

						or it in bata to bata (blb) cable till ropi	· · · · · · · · · · · · · · · · · · ·
PIN#	WIRE COLOR		I/O STATUS		Connect Location		ACTIVATION and/or FUNCTIONALITY
1	Brown	D2D w2w	Input	(-)	RCS	Ground When Running Output of Remote Starter	Immobilizer Bypass Via Data
2	Green	w2w	Data			Connect to Blue data wire coming from PASSKEY 3 harness in steering column (See Fig.1)	Data Commands from Module to Vehicle
3	Blue	N/C	N/C	N/C	N/C	N/C	N/C
4	Violet/ White	N/C	N/C	N/C	N/C	N/C	N/C
5	Violet	N/C	N/C	N/C	N/C	N/C	N/C
6	Pink/ White	w2w	Output	(+)		Connect to Pink wire coming from PASSKEY 3 harness in steering column	Ignition Power Source Return
7	Pink	w2w	Input	(+)		Connect to Pink wire coming from PASSKEY 3 harness in steering column	Ignition Power Source Supply
8	Orange	N/C	N/C	N/C	N/C	N/C	N/C
9	Red	D2D w2w	Input	(+)	Vehicle	Constant (+) 12 Volt Source	Power Source
10	Black	D2D w2w	Input	(-)	Vehicle	Chassis Ground	Ground Source

Legend RCS = Remote Control System

N/C = No Connection

N/A = Not Applicable W2W= analogue wire to wire D2D= data 2 data

DATA to DATA PORT (D2D): Blue connector of D2D Cable plugs into the upgradeable vehicle interface module.

OPTION A: - D2D Port used to connect to USB Bootloader adaptor & computer to download & flash vehicle interface firmware.

OPTION B: - D2D Port used to connect to the data port of a remote control system equipped with ClearCode Vehicle Interface Protocol.

Remote control systems designed with ClearCode VIP can securely communicate via the D2D cable to transmit & receive data commands which initiate specific vehicle function such as doorlocks & immobilizer override and /or request information from the vehicle such as status of entry points (doors) or ambiant température, diesel glow plug etc... ClearCode VIP represents the doorway to vehicle integration...As an enhanced security feature, this upgradeable vehicle interface module automatically detects when the Vehicle Interface Protocol is present and deactivates the analogue override input wire (brown wire) ensuring that this module can only be activated by an authorized user.

MODULE RESET: Press and hold programming button while plugging in module, LED comes ON. When LED goes OFF, release button.