


Description: GM Transponder Interface: PASSKEY 3 (NO KEY REQUIRED)

Functions: Override OEM Transponder Immobilizer Via Data

Downloadable Firmware for Platform #06: PKG5, PKG7, PKG9, PLXR

WARNING: Before beginning your install go to [www.INTELLIKITS.com](http://www.INTELLIKITS.com) and be sure to print the LATEST corresponding installation manual for the firmware that is flashed to the platform you are using.

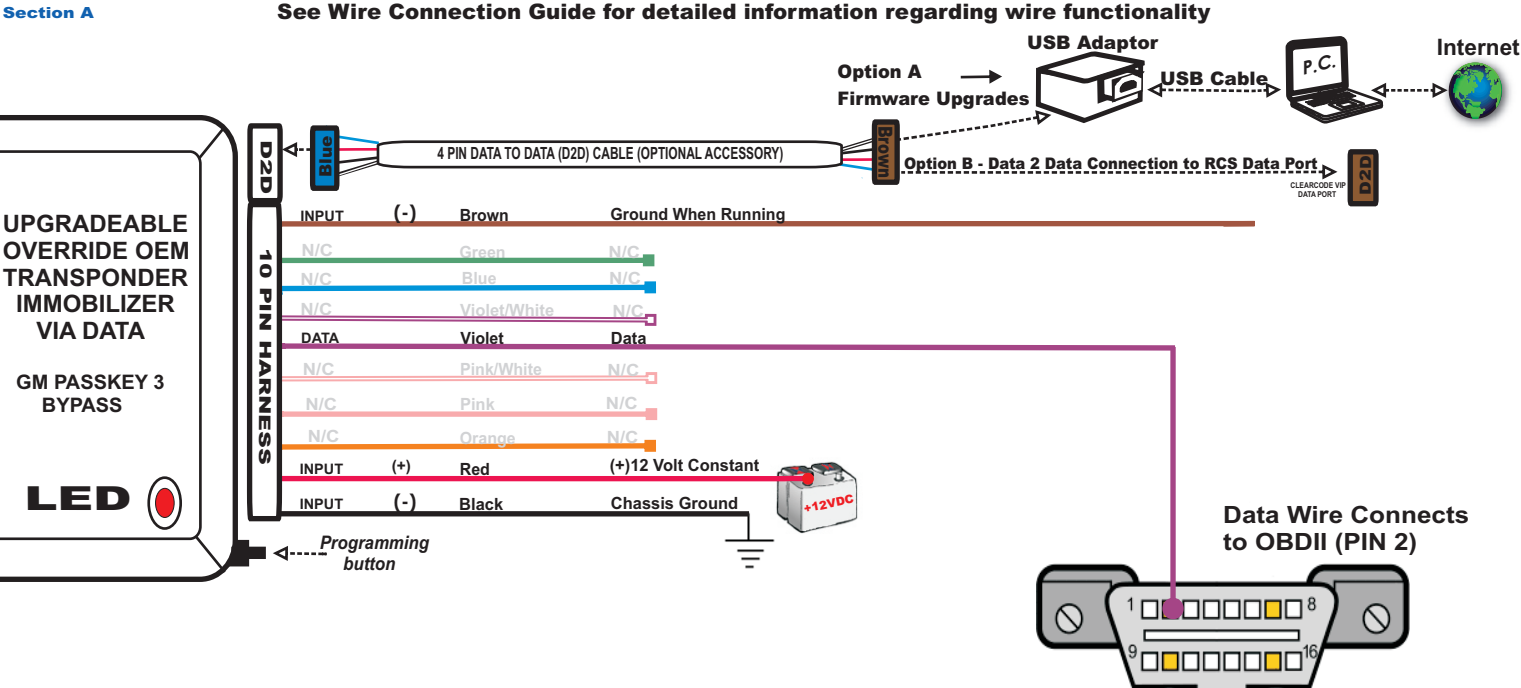

Section B

WIRE GUIDE: CONNECTIONS

10 PIN HARNESS → D2D = Optional use of 4 Pin Data to Data (D2D) cable will replace the analogue wire (w2w) connection

PIN#	WIRE COLOR	D2D w2w	I/O STATUS	(-) / (+)	Connect Location	SPECIFIC WIRE CONNECTION LOCATION	ACTIVATION and/or FUNCTIONALITY
1	Brown	D2D w2w	Input	(-)	RCS	Ground When Running output of remote starter	GM PASSKEY 3 Bypass
2	Green	N/C	N/C	N/C	N/C	N/C	N/C
3	Blue	N/C	N/C	N/C	N/C	N/C	N/C
4	Violet/ White	N/C	N/C	N/C	N/C	N/C	N/C
5	Violet	w2w	Data		Vehicle	Connects to On Board Diagnostic Connector (OBDII) PIN 2 located under dash on driver side	Data Commands from Module to Vehicle
6	Pink/ White	N/C	N/C	N/C	N/C	N/C	N/C
7	Pink	N/C	N/C	N/C	N/C	N/C	N/C
8	Orange	N/C	N/C	N/C	N/C	N/C	N/C
9	Red	D2D w2w	Input	(+)	Vehicle	Constant (+) 12 Volt Source	Power Source
10	Black	D2D w2w	Input	(-)	Vehicle	Chassis Ground	Ground Source

Legend RCS = Remote Control System N/C = No Connection N/A = Not Applicable W2W= analogue wire to wire D2D= data 2 data

**DATA to DATA PORT (D2D):** Blue connector of D2D Cable plugs into the upgradeable vehicle interface module.

OPTION A: - D2D Port used to connect to USB Bootloader adaptor & computer to download & flash vehicle interface firmware.

OPTION B: - D2D Port used to connect to the data port of a remote control system equipped with ClearCode Vehicle Interface Protocol.

Remote control systems designed with ClearCode VIP can securely communicate via the D2D cable to transmit & receive data commands which initiate specific vehicle function such as doorlocks & immobilizer override and /or request information from the vehicle such as status of entry points (doors) or ambient temperature, diesel glow plug etc... ClearCode VIP represents the doorway to vehicle integration...As an enhanced security feature, this upgradeable vehicle interface module automatically detects when the Vehicle Interface Protocol is present and deactivates the analogue override input wire (brown wire) ensuring that this module can only be activated by an authorized user.

**Description: GM Transponder Interface: PASSKEY 3 (NO KEY REQUIRED)**

**Functions: Override OEM Transponder Immobilizer Via Data**

---

## Section C

### **VEHICLE PROGRAMMING:**

- 1) Once the module has been properly connected, LED should turn ON.
- 2) Turn key to IGNITION position, LED will flash 4 times.
- 3) Turn key OFF, module is now programmed.

*\*To RESET, unplug kit. While plugging kit back into 10 PIN harness, press and hold programming button. LED comes on. When LED goes off, release button.*