




## Arming the System

The system may be "Armed" by one of two methods. The first method involves the use of a remote transmitter to "Actively" arm the system, provided the ignition switch is "off" and the system is not in Valet Mode. The second method is a programmable feature called "Last Door Arming" in which the alarm will "Passively" or "self" arm.

### To Actively Arm the System: Press & Release the "Arm/Lock" Transmitter Button.

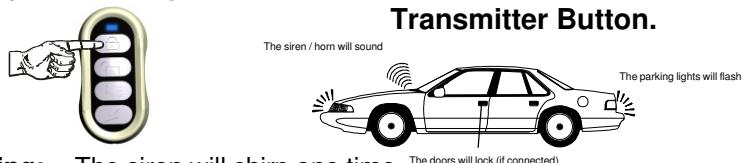



- Upon Arming:**
- The siren will chirp one time.
  - The parking lights will flash once.
  - The doors will lock. (If an optional interface is connected)
  - The starter interrupt will engage.
  - The LED Status Indicator will begin to flash slowly.

If a protected zone is open when actively arming using the transmitter, the system will still arm, but it will bypass the open zone until the zone is secured.

**SILENT ARM:** Press Button #3 twice (within 3 seconds)

1



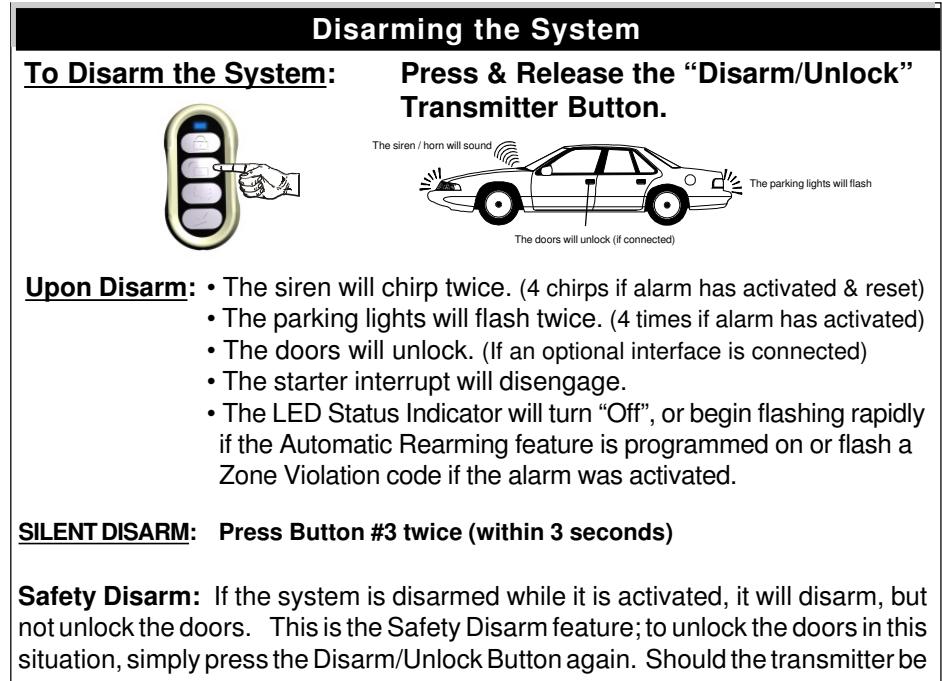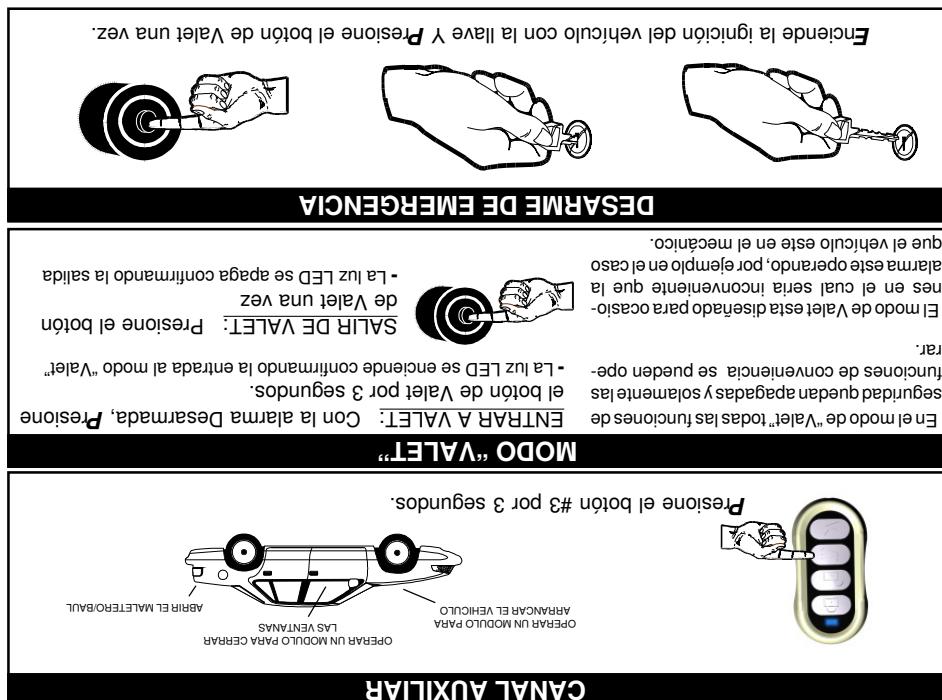



lost, damaged, or its batteries be exhausted, the Valet/Override Switch & your vehicle's ignition key may be used to disarm the system by performing an Emergency Override.

### Remote Panic Operation

Should it be needed in a threatening situation or you feel the need to attract attention, the system can be activated remotely by using the transmitter. Your system features "Enhanced Panic", which allows you to activate Remote Panic from either the "Arm/Lock" button or "Disarm/Unlock" button; the former locks the doors and the latter unlocks the doors when Remote Panic is activated.

**To Activate Remote Panic:**

**Press & Hold for 3 Seconds the "Arm/Lock" Button OR the "Disarm/Unlock" Button**




### Upon Activating Panic:

- The vehicle's doors will lock or unlock. (\*if an optional interface is connected)

3

3

El anti-atraco se activa cada vez que se abre y cierra una puerta cuando la ignición del vehículo está encendida.  
2) Anti-Atraco a través de la ignición y una puerta: (Función #15)

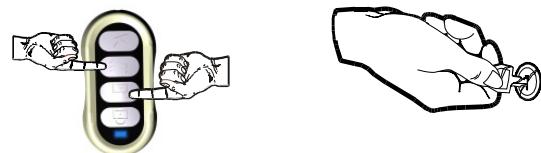

Presione el botón de «Apretura» y el botón '#3' juntos por 4 segundos con la ignición del vehículo encendida.  
1) Activación del Anti-Atraco usando el control remoto: (Función #14)  
La alarma viene equipada con un sistema de anti-atraco que se puede activar de tres maneras: Usando un control remoto o a través de la ignición y una puerta.

### ANTI-ATRACO





4

**Para desactivar el Anti-Atasco después de que fue disparado:**

Si el botón de "Valeo" no se presiona durante los 63 segundos, el anti-atasco se activa. Si se presiona una intermitencia, y a los 95 segundos el corto de arranque se dispara. La Sirena/Claxon comienza a sonar, las luces de estacionamiento comienzan a parpadear. La Sirena/Claxon comienza a sonar, las luces de estacionamiento se apagan la ignición del vehículo.

**DESENCIENDA EL BOTÓN DE "Valeo".** Para desactivar el anti-atasco presione el botón de "Valeo" durante 63 segundos desde el momento de la activación.

El anti-atasco se activa cada vez que se enciende la ignición del vehículo.

**3) Anti-Atasco a través de la ignición: (Función #16)**



- The siren will sound.

- The vehicle's exterior parking lights will flash.

Remote Panic can be activated anytime, whether the vehicle's ignition is turned on or off, and has a 60 second duration (regardless of the 30 or 60 second activation setting) unless a transmitter is used to stop it. At the end of the 60 second cycle, the system will reset and be in either the armed state (if activated by the "Arm/Lock" button) or in the disarmed state (if activated by "Disarm/Unlock").

**To Deactivate Panic:**

**Press & Release either the "Arm/Lock"  
OR the "Disarm/Unlock" Button**

Deactivating Remote Panic from the "Arm/Lock" button results in the system being in the Armed state with locked doors. If the "Disarm/Unlock" button is used to deactivate Remote Panic the system will be in the Disarmed state, with unlocked doors.



**The Auxiliary Channel**

The Auxiliary Channel may be used to operate an optional function. Possibilities include remote trunk release, remote car starting, or an on-demand remote window roll-up interface. Please see your Omega dealer for details on available options.

*continued next page*



## To Activate the Auxiliary Channel: Press & Hold the Transmitter's Button #3 for 3 Seconds

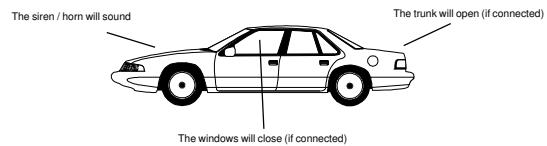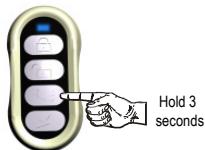

For safety, the Auxiliary Channel cannot be activated if the vehicle's ignition is "On". If the system is armed when the Auxiliary Channel is used, it will also disarm; or, there is also has a special programmable feature, Start Mode, which is designed to allow the addition of an optional remote starter module to start the vehicle while leaving the system armed. The Auxiliary Channel has output for as long as the Remote's Button #3 is held.

## Valet Mode & Emergency Override

The Valet/Override Switch can perform two distinct functions: accessing Valet Mode and performing an Emergency Override of an armed and activated system.

5



|  |   |
|--|---|
| <b>1) Muestra el "Estado" de la alarma:</b>                                | La luz LED tiene cuatro funciones principales:  |
| <b>2) Verifica cuantos controles estan programados: (Protección "ATV")</b> | Por 10 segundos despues de encender la ignición, el LED hace una serie de intermitencias, que corresponden al numero de controles que estan programado.   |
| <b>3) Advierte que hubo un disparo Y confirma cual zona fue violada:</b>   | Si durante el tiempo en que la alarma esta activa sucede un disparo, la luz LED indica exactamente cuál zona fue violada. La memoria del dispuesto mantiene las últimas cuatro violaciones hasta que se enciende la ignición del vehículo.        |
| <b>4) Prueba de Zonas:</b>   | Cuando la Alarma esta Desarmada, la luz LED indica cuál zona o zonas están violadas. Si durante el tiempo en que la alarma esta activa sucede un disparo, la luz LED indica cuáles son las zonas violadas en la secuencia en la cual se violaron. |
| <b>5) Intermitencias = Puertas.</b>  | 1 intermitencia = Puertas. 2 intermitencias = Capo o Maletero. 3 intermitencias = Consumo. 4 intermitencias = Sensor.   |





6

- EXPLICACION DE FUNCIONES PROGRAMABLES:**
- La alarma viene con 18 funciones programables que permiten modificar el sistema
    - 1) Alimentación (Disparo Por Consumo): (•A)
    - 2) Demora De Activación De La Alimentación: (3 Segundos / 3 minutos)
    - 3) Armado Automático: (•A)
    - 4) Cierre De Los Seguros Electricos Al Armar: (•D)
    - 5) Rearme Automático: (•A)
- Esta función demora la vigilancia de la alimentación. La alarma espera 3 segundos o 3 minutos despues de que se armara la alarma para cambiar en el consumo. Esta función dispersa la alarma si detecta cambios en el consumo de corriente.
- Esta función dispersa la alarma si detecta cambios en el consumo de corriente.
- Esta función demora la vigilancia de la alimentación. La alarma espera 3 segundos o 3 minutos despues de que se armara la alarma para cambiar en el consumo. La alarma automática cierra los seguros despues de haber pagado la ignición.
- Esta función permite que la alarma cierre los seguros al armar sola (Función #3).
- Esta función permite que la alarma se rearme automáticamente en caso de un Desarme accidental. Si esta activada, la alarma inicia un proceso de Rearme automáticamente cada vez que se Desarma usando un control. La alarma se Rearma a los 90 segundos a

Valet Mode prevents any active arming, from the transmitter, or passive arming, as in Last Door Arming. Valet Mode is designed for situations in which it is not convenient for the alarm portion of the system to be operational; for example during extended stopovers for vehicle servicing, loaning others your vehicle, maintenance, valet parking, washing, etc. The convenience features such as keyless entry, the auxiliary channel, and ignition-activated doorlocks can still be operated.

**To Enter Valet Mode:  
(System MUST be Disarmed)**

**Press & Hold the Valet Switch for 3 Seconds.**

- The LED Status Indicator will light solid Blue to confirm Valet Mode. Now the system cannot become armed.

The vehicle's ignition may be "On" or "Off" when entering Valet Mode.

**To Exit Valet Mode:**

**Simply Press & Release the Valet Switch.**

- The LED Status Indicator will turn off to confirm that the system has exited Valet Mode and returned to a "standby" mode. Normal arming operations may be resumed.

Again, the vehicle's ignition may be "On" or "Off" when exiting Valet Mode.

6



no ser due la ignición del vehículo se encienda.

6) Cierre De Seguros Eléctricos Automático Al Rearmar La Alarma: (•D)

Esta función permite que la alarma clíre los seguros eléctricos al rearmarse automáticamente (Función #5).

7) Señal Constante Para Sirena o Pulsada Para Claxon: (•Sirena / Claxon)

Esta función permite que la alarma emita una señal constante para operar una sirena o una señal pulsada para operar el claxon del vehículo.

8) Cierre De Seguros Al Encender La Ignición: (•A)

Esta función permite que la alarma clíre los seguros al encender la ignición.

9) Apretura De Seguros Al Apagar La Ignición: (•A)

Esta función permite que la alarma abra los seguros cuando se apaga la ignición.

10) Ciclo De Desparo: (•30 / 60 Segundos)

Esta función permite la opción que el Ciclo de Desparo dure 30 o 60 segundos.

11) Pulsos De Abrir Los Seguros Eléctricos: (Singular / Doble)

Esta función permite que la alarma emita un pulso singular o dos pulsos en serie para abrir los seguros eléctricos.



### To Disarm the Security System Without The Transmitter:

Valet Mode can only be achieved with a disarmed system. If the system is armed, and in the event that the transmitter is lost, damaged, or its batteries have become exhausted, the Valet/Override Switch & your vehicle's ignition key may be used to disarm the system by performing an Emergency Override:

- Step 1: With the system in the armed condition, enter the vehicle via the driver's door (be aware that the alarm will activate when the door is opened).
- Step 2: Using your key, turn the vehicle's ignition to the "On" position.
- Step 3: Within 5 seconds, Press the Valet/Override Switch.  
-The activated system will instantly disarm.



**Note:** When the Valet/Override Switch is pressed, when the system disarms releasing the switch will place the system in standby mode. Holding the switch for 3 seconds further after the activated system disarms will place the system into Valet Mode, preventing further arming. Once overridden, the disarmed system may still be placed into Valet Mode as described on the previous page.



## The LED Status Indicator

The Blue LED Status Indicator visually shows the status of the system and also provides a high level of visual deterrence. The Blue LED Status Indicator Light is normally mounted in a location where it can be easily seen by the driver, as well as from outside the vehicle.

**Security System Status:** The primary function of the Blue LED Status Indicator Light is to indicate the normal operating status of the security system:  
 Off = The system is disarmed and not performing any automatic functions.  
 On Constant = The system is in the Valet Mode.  
 Flashing Slow = The system is fully Armed.  
 Flashing Fast = The system is Last Door Arming or Automatic Rearming.

**Automatic Transmitter Verification:** For the first 10 seconds after the vehicle's ignition is turned "On", the LED Status Indicator will flash a number of times equal to the number of transmitters which are programmed in the system's memory and which can operate the security system. This indication can be from 1 Flash/pause up to 4 Flashes/pause, as the system can be operated by just one, or as many as four remote transmitters. A related feature, Unauthorized Transmitter Alert, warns you of recent transmitter programming, and protects your system from unauthorized transmitters being coded to operate it without your knowledge.



18) **Tipo De Control Remoto: (Control de 2-Botones / Control de 3-botones)**  
 Esta función permite la opción que la Alarma funcione con controles remotos de 2 o 3-botonas. La Alarma viene equipada con dos controles remotos de 3-botones, pero puede funcionar con controles remotos especiales de 2-botones que usan un botón para activar/desactivar la Alarma y el segundo botón para operar el canal auxiliar.

17) **Control Remoto De La Sirena/Clixon Al Armado/Desarmado: (A)**  
 Esta función permite activar/cancelar la confirmación de la Sirena/Clixon al Armado o Desarmar la Alarma.  
 16) **Anti-Atraco Activado A Traves De La Ignición: (D)**  
 Esta función permite la activación del Anti-Atraco a través de la ignición del vehículo.

15) **Anti-Atraco Activado A Traves De Las Puertas Y La Ignición: (D)**  
 Esta función permite la activación del Anti-Atraco a través de las puertas y la ignición del vehículo.  
 14) **Anti-Atraco Activado Usando El Control Remoto: (D)**  
 Esta función permite la activación del Anti-Atraco usando el control remoto.

13) **Canal Auxiliar Desarma La Alarma / Modo De Arranque: (Desarma)**  
 Esta función permite que el Canal Auxiliar Desarme la Alarma o inicie el modo de arranque.





**Zone Testing & Zone Violation:** Are related visual indicators, via the LED Status Indicator; the first shows currently violated zones while the system is disarmed, and the second, should the system be activated, shows which zone caused the activation after the fact. These are the codes for both operations:

- 1 Flash /Pause = is the current sensing zone circuit.
- 2 Flashes /Pause = is the hood or trunk zone circuit.
- 3 Flashes /Pause = is the door zone circuit.
- 4 Flashes /Pause = is the sensor zone circuit, including Prewarning Detection.

Zone Testing operates while the system is disarmed, and shows if a protected zone is in a violated state. In using Zone Testing, for example, while the system is disarmed, whenever a door is open the LED Status Indicator will flash 3 times between pauses. Should multiple protected zones be violated at the same time, all will be shown in sequence.

Zone Violation operates if the system has been armed, and then activated. During the activation, the LED Status Indicator will flash the Violation, and then revert to the normal slow flash when the system rests itself, then, upon disarming, the LED will change to flash the Violation Code, and will continue to do so until the ignition switch is turned "On". Should multiple activations occur during a single armed period, up to four Zone Violations will be shown upon disarming.

9



**Ejemplo:** Para cambiar la función #3, presiona el botón de "Alert" 3 veces y la función fue escogida.

Sirena/Claxon emite el mismo número de tonos para confirmar cual corresponde al número de la función por programar.

3) Antes que pasen 7 segundos desde el momento de la entrada al modo de programación, presiona el botón de "Alert" un número de veces que corresponda al número de la función que se apaga la programación:

1) Encienda Y Apague la ignición del vehículo.

2) Antes que pasen 10 segundos desde el momento que se apaga la ignición, presiona el botón de "Alert" 5 veces.

La sirena/claxon emite un tono largo y corto confirmando la entrada al modo.

La alarma tiene 18 funciones que son programables a través del modo de programación.

## PROGRAMACION DE FUNCIONES:





- 10
- 4) Despues de haber escogido la función por programar, presione el botón del control remoto que corresponde a la opción deseada:**
- Presione el botón de «Cierre» y La Sirena/Clixon emite 1 tono.
  - Presione el botón de «Apretura» y La Sirena/Clixon emite 2 tonos.
  - Es posible «Encender» y «Apagar» y volver a «Encender» y «Apagar» la función usando los botones del control remoto.
- NOTA:** Es posible «Encender» y «Apagar» y volver a «Encender» y «Apagar» la función usando los botones del control remoto.
- 5) Para programar otra función, repitan las líneas #3-4.**
- Ejemplo:** Para programar la función #1, presione el botón de «Valet» una vez y el numero de veces que corresponde a el numero de la función por programar.
- 6) Si pasan 7 segundos sin entrada de programación o si se enciende la ignición del vehículo, la alarma automáticamente sale del modo de programación.**
- La Sirena/Clixon confirma la salida del modo con un dos tonos.

## Programmable Anti-Carjacking Protection

The system is equipped with 3 levels of programmable Anti-Carjacking protection.

### First Level: Anti-Carjacking activated using the transmitter:

If feature #14 is “On”, Anti Car-Jacking may be activated by pressing & holding the transmitter’s Disarm & Button #3 together for 4 seconds while the ignition is “On”.

**Second Level: Anti-Carjacking activated by a door:** If feature #15 is “On”, Anti-Carjacking initiates when a door is opened & closed with the ignition “On”.

### Third Level: Anti-Carjacking activated by the ignition:

If feature #16 is “On”, Anti-Carjacking initiates every time the ignition is turned “On”.

Once the Anti-Carjacking process has begun, the user has 63 seconds to press the Valet/Override Switch in order to cancel. If not, at 55 seconds the siren will begin to chirp for 8 seconds to alert the user that the system is about to enter into an activated condition. If not cancelled before the 63 second countdown expires, the system will fully activate. In the activated condition the siren/horn will sound, the lights will flash, and at 95 seconds the starter interrupt will engage. Once the system is activated in the Anti-Carjack mode, the transmitters will NOT stop the operation, nor will the system reset. **Once it is fully activated, the Anti-Carjacking operation can only be deactivated by:**

**First Step:** Turning the vehicle’s ignition “Off”.

**Second Step:** Turning the vehicle’s ignition back “On”.

**Third Step:** Within 5 seconds Pressing the Valet/Override Switch.



11

- 1) Alimentación (Diseño Por Consumo): (A)**  
 Activada = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)  
 Desactivada = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon)  
 3 Minutos = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)  
 3 Segundos = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)  
**2) Demora De Activación De La Alimentación: (3 Segundos / 3 minutos)**  
 Activada = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)  
 Desactivada = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon)  
**3) Armado Automático: (A)**  
 Activado = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)  
 Desactivado = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon)  
**4) Cierre De Los Seguros Eléctricos Al Armarse La Alarma: (D)**  
 Cierre Activado = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)  
 Cierre Desactivado = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon)  
**5) Rearme Automático: (A)**  
 Rearme Activado = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)  
 Rearme Desactivado = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon)

## LISTA DE FUNCIONES PROGRAMABLES:

### Programmable Features

- The system has 18 programmable features. • = Default Factory Setting
- 1. Current Sensing: (•On / Off)** - Enables the system to be activated should the system detect a voltage spike in the vehicle's electrical system.
  - 2. Current Sensing Activation Delay: (3 Seconds / •3 Minutes)** - Allows option of a longer delay before current sensing can activate.
  - 3. Last Door Arming: (On / •Off)** - Configures the system to automatically arm itself 30 seconds after the last of the vehicle's doors is closed.
  - 4. Doors Lock With Last Door Arming: (On / •Off)**
    - Adds the automatic locking of the vehicle's doors to the previous feature.
  - 5. Automatic Rearming: (On / •Off)** - Configures the system to automatically rearm itself 90 seconds after it has been disarmed by the transmitter.
  - 6. Doors Lock With Automatic Rarming: (On / •Off)**
    - Adds the automatic locking of the vehicle's doors to the previous feature.
  - 7. Steady Siren Output Or Pulsed Horn Honk Output: (•Siren / Horn)** - Allows selection of a constant siren output or a pulsed horn output. If programming, press the Transmitter Arm/Lock Button for the Siren setting or the Disarm Button for the Horn setting.
  - 8. Ignition Controlled Door Lock: (•On / Off)** - Configures the system to lock the vehicle's doors when the ignition is turned on. Also works in Valet mode.





|   |  |
|---|--|
| 6) Cierre De Seguros Eléctricos Automático Al Rearmarse La Alarma: (•D) | Cierre Activado = Presione el botón de CIERRE: (1 tono de Sirena/Clixon)<br>Cierre Desactivado = Presione el botón de APERTURA: (2 tonos de Sirena/Clixon) |
| 7) Señal Constante Para Sirena o Puerta Para Claxon: (•Sirena / Clixon) | Sirena = Presione el botón de CIERRE: (1 tono de Sirena/Clixon)<br>Claxon = Presione el botón de APERTURA: (2 tonos de Sirena/Clixon)                      |
| 8) Cierre De Seguros Al Encender/Apagar La Ignición: (•A)               | Activado = Presione el botón de CIERRE: (1 tono de Sirena/Clixon)<br>Desactivado = Presione el botón de APERTURA: (2 tonos de Sirena/Clixon)               |
| 9) Apertura De Seguros Al Encender/Apagar La Ignición: (•A)             | Activado = Presione el botón de CIERRE: (1 tono de Sirena/Clixon)<br>Desactivado = Presione el botón de APERTURA: (2 tonos de Sirena/Clixon)               |
| 10) Ciclo De Dispaso: (•30 / 60 Segundos)                               | 30 segundos = Presione el botón de CIERRE: (1 tono de Sirena/Clixon)<br>60 segundos = Presione el botón de APERTURA: (2 tonos de Sirena/Clixon)            |
| 11) Pulseo De Abrir Los Seguros Eléctricos: (•Singular o Doble)         | Pulseo Singular = Presione el botón de CIERRE: (1 tono de Sirena/Clixon)<br>Pulseo Doble = Presione el botón de APERTURA: (2 tonos de Sirena/Clixon)       |
| 12) Confirmación Que Existe Una Puerta Abierta Al Armar La Alarma: (•D) | Activada = Presione el botón de CIERRE: (1 tono de Sirena/Clixon)<br>Desactivada = Presione el botón de APERTURA: (2 tonos de Sirena/Clixon)               |

9. **Ignition Controlled Door Unlock: (•On / Off)** - Configures the system to unlock the vehicle's doors when the ignition is turned off.

10. **System Activation Cycle Duration: (•30 / 60 Seconds)** - Configures the system's activation duration cycle to be either 30 seconds or 60 seconds. If programming, press the Transmitter Arm/Lock Button for the 30 Second setting or press the Disarm/Unlock Button for the 60 second setting.

11. **Double Unlock Pulse: (On / •Off)** - Configures system to change the single unlock output pulse into a double pulse. Some vehicles require a double pulse to unlock the doors; when needed this feature saves the expense of optional parts.

12. **Open Door Bypass Alert: (On / •Off)** - Configures the system to chirp the siren 3 times upon arming, instead of 1 time, to warn the user if a door is still open.

13. **Aux Channel Disarm Or Engages Start Mode: (•Disarms / Start Mode)** - This feature changes the Aux Channel's operation so that it is compatible with a remote starter unit. When set for the Start Mode, Aux does not disarm the alarm. Additionally, the current sensing & sensor zones will be bypassed. This allows a start module to start the vehicle without activating the system. If the door and trunk zones are violated the unit will turn the vehicle's engine off. If programming, press the Disarm/Unlock Button for Start Mode or the Lock/Arm Button for Disarm.

14. **Transmitter Activated Anti-Carjacking: (On / •Off)**

15. **Door Activated Anti-Carjacking: (On / •Off)**



|   |   |
|---|---|
| 13) Canal Auxiliar Desarma La Alarma / Modo De Arranque: (-Desarma)       | Auxiliar con Desarme = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)<br>Modo De Arranque = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon) |
| 14) Anti-Atraco Activado Usando El Control Remoto: (-D)                   | Activado = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)<br>Desactivado = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon)                  |
| 15) Anti-Atraco Activado A Traves De Las Puertas Y La Ignicion: (-D)      | Activado = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)<br>Desactivado = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon)                  |
| 16) Anti-Atraco Activado A Traves De La Ignicion: (-D)                    | Activado = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)<br>Desactivado = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon)                  |
| 17) Confirmation De Sirena/Claxon Al Armar o Desarmar La Alarma: (-A)     | Activada = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)<br>Desactivada = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon)                  |
| 18) Tipo De Control Remoto: (Control de 2-Botones / Control de 3-botones) | Activada = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)<br>Desactivada = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon)                  |

|   |   |
|---|---|
| 13) Canal Auxiliar Desarma La Alarma / Modo De Arranque: (-Desarma)       | Auxiliar con Desarme = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)<br>Modo De Arranque = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon) |
| 14) Anti-Atraco Activado Usando El Control Remoto: (-D)                   | Activado = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)<br>Desactivado = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon)                  |
| 15) Anti-Atraco Activado A Traves De Las Puertas Y La Ignicion: (-D)      | Activado = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)<br>Desactivado = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon)                  |
| 16) Anti-Atraco Activado A Traves De La Ignicion: (-D)                    | Activado = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)<br>Desactivado = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon)                  |
| 17) Confirmation De Sirena/Claxon Al Armar o Desarmar La Alarma: (-A)     | Activada = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)<br>Desactivada = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon)                  |
| 18) Tipo De Control Remoto: (Control de 2-Botones / Control de 3-botones) | Activada = Presione el botón de CIERRE: (1 tono de Sirena/Claxon)<br>Desactivada = Presione el botón de APERTURA: (2 tonos de Sirena/Claxon)                  |



## 16. Ignition Activated Anti-Carjacking: (On / -Off)

**17. Confirmation Chirp: (-On / Off)** - This feature turns off the arm & disarm confirmation chirps. The system will only chirp with Last Door Arming & Rarming.

## 18. 1 or 2 Button Arm/Disarm: (1 Button/-2 Button)

### How to Program Features

**Step 1:** Turn the vehicle's ignition "On" then "Off".

**Step 2:** Within 10 seconds of turning the ignition "Off", press the Valet/Override Switch 5 times. A siren burst, then a single chirp will confirm entry.

**Step 3:** Within 7 seconds of entering Features Programming Mode, press the Valet/Override Switch a number of times equal to the number of the feature to be programmed.  
- The system will repeat the feature number with same number of siren chirps.

**Step 4:** After the system acknowledges the feature to be programmed, press either the Transmitter Arm/Lock Button to turn the feature on (1 chirp confirmation), or the Disarm/Unlock Button to turn the feature off (2 chirps confirmation).

**NOTE:** To program more features, simply repeat Steps 3 and 4. If seven seconds expire without any programming activity or if the ignition is turned "On", the system will automatically exit Features Programming Mode. Two siren bursts confirm exit.





14

**PROGRAMACION DE LOS CONTROLES REMOTOS:**

La alarma esta equipada con PROTECCION ATV usa la luz LED para mostar cuantos controles que control operara la alarma. La Alerta De Programacion le avisa al usuario que un control remoto ha sido programado en las ultimas 48 horas.

**Nota:** Al programar un control nuevo, todos los controles en la memoria se volver a programarlo juntos con los nuevos.

Para programar controles remotos:

- 1) Encienda la ignicion del vehiculo.
- 2) Antes que pasen 10 segundos, presione el boton de "Valet" 5 veces
- 3) Antes que pasen 10 segundos, presione el boton «PEQUEÑO» de cada control remoto por programar:
- 4) La alarma automaticamente sale del modo de programacion al Apagar la ignicion o si pasan 17 segundos sin entrar de programacion.
- La Sirena/Claxon confirma la salida del modo con un tono largo.



## How to Program Transmitters to the System

Whenever a transmitter, new or existing, is programmed to the system, all existing codes are erased for security. So all of the transmitters which are to operate the system, which can be up to four, must be programmed at the same time.

**Step 1:** Turn "On" the vehicle's ignition.

**Step 2:** Within 10 seconds press the Valet/Override Switch 5 times. The system responds with 1 siren burst to confirm Transmitter Programming Mode.

**Step 3:** Within 10 seconds, press the Small Button on each transmitter to be programmed. The response to each is 1 and 1, 1 and 2, etc., chirps.

If 17 seconds expire without any programming activity the system will automatically exit Transmitter Programming Mode. Turning off the ignition switch will also exit the system from Transmitter Programming Mode; in either case the system signals the exit with 1 long siren chirp.

**Unauthorized Transmitter Alert:** For the next 48 hours after transmitter programming, every time the vehicle's ignition is turned "On", the system will emit a series of siren chirps, and the LED Status Indicator will show the number of programmed transmitters for 90 seconds instead of 10 seconds.

14

