

Omegalink

5-BUTTON 1-WAY QUICK START OPERATION GUIDE

Visit www.CarAlarm.com today

To Download the latest **operation guide** and learn more about system upgrades & other features!

PROGRAMMING REMOTES TO THE SYSTEM

Remote programming is dependant on the system being controlled. Please consult your dealer or the system guide for the proper programming instructions.

Problems? Questions? Contact Customer Service:

800-554-4053 (toll free) | +1-770-942-9876 (outside USA)



Scan to register & download the latest operation guide at [CarAlarm.com!](http://CarAlarm.com)

[f /omegard](https://www.facebook.com/omegard)

[y /c/omegard](https://www.youtube.com/c/omegard)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna., Increase the separation between the equipment and receiver., Connect the equipment into an outlet on a circuit different from that to which the receiver is connected., Consult the dealer or an experienced radio/TV technician for help., Warning! Changes or modifications made to this equipment not expressly approved by the part responsible for compliance could void the use's authority to operate the equipment

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Omegalink

5-BUTTON 1-WAY QUICK START OPERATION GUIDE



REPLACING YOUR REMOTE BATTERY

STEPS	REMOTE PART#	BATTERY (QTY)
1) Find the part # on the back of the remote to identify the battery. 2) Locate the relief in the case near the key chain and separate the case halves to access & replace the batteries.	551	CR2032 (1)

SECURITY, KEYLESS ENTRY, & CONVENIENCE FUNCTIONS

FUNCTION	BUTTON(S)	NOTE
Lock & Arm*		The doors will lock.
Unlock & Disarm*		The doors will unlock.
Silent Lock*	x1	The doors will lock with no audible confirmation.
Silent Unlock*	x 2	Perform within 1 second. The doors will unlock with no audible confirmation.
Trunk/Hatch Release	for 3 sec.	Some systems may also unlock the doors.
Panic*	or for 3 sec.	The system will sound the horn/siren for Panic Mode.

Register today at www.CarAlarm.com
For warranty info & Download the latest operation guide.


OmeGalink

5-BUTTON 1-WAY QUICK START OPERATION GUIDE

REMOTE START FUNCTIONS

FUNCTION	BUTTON(S)	NOTE
Engine Start/Stop	⌂ x 2	Take Over*: Enter the vehicle and turn ignition key 'ON' then press the brake pedal.
Run Time Extender*	⌂	This will restart the remote start run timer (only allowed once per remote start cycle).
Auto Start Mode*	🔒 & ⌂	Remote starts your vehicle every 2, 3, or 4 hours (programmable) or upon temperature threshold.

WINDOW-MOUNT ANTENNA/RECEIVER

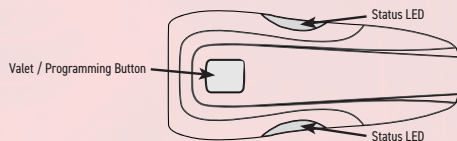

*All functions are dependent upon vehicle & system availability. Consult your installer to confirm feature availability.

OmeGalink

5-BUTTON 1-WAY QUICK START OPERATION GUIDE

AUXILIARY REMOTE FUNCTIONS

FUNCTION	BUTTON(S)	NOTE
Remote Valet*	Hold 🚗 & 🔒 for 3 sec.	Will put the system into valet mode. This disables remote start and any security functions.
Multi-Car	Hold 🔒 & ⌂ for 3 sec	The LED flash upon any button press will indicate current car setting. 1 flash = car 1 / 2 flash = car 2. Repeat to return to car 1.
Button Lock	Hold ⌂ & 🚗 for 3 sec	When button lock is on the remote will not transmit. When any button is pressed the LED will flash rapidly upon button press.
	📄, 🚗	AUX1 - Write function in "FUNCTION" column
	📄 x 2, 🚗	AUX2 - Write function in "FUNCTION" column
	📄 x 3, 🚗	AUX3 - Write function in "FUNCTION" column
	🚗 & 🔒	AUX4 - Write function in "FUNCTION" column

*All functions are dependent upon vehicle & system availability. Consult your installer to confirm feature availability.