

# Omegalink

## 5-BUTTON LCD 2-WAY

### QUICK START OPERATION GUIDE



#### REPLACING YOUR REMOTE BATTERY

STEPS	REMOTE PART#	BATTERY (QTY)
1) (551 only) Find the part # on the back of the remote to identify the battery.	553	Rechargeable
2) (551 only) Locate the relief in case near the key chain and separate the case halves to access & replace the batteries.	551	CR2032




#### SECURITY, KEYLESS ENTRY, & CONVENIENCE FUNCTIONS

FUNCTION	BUTTON(S)	REMOTE CONFIRMATION	NOTE
Lock & Arm*		"LOCK" or "ARM" Displays	The doors will lock.
Unlock & Disarm*		"UNLOCK" or "D_ARM" Displays	The doors will unlock.
Silent Lock*	x 1	Beep	The doors will lock with no audible confirmation.
Silent Unlock*	x 2	Beep	Perform within 1 second. The doors will unlock with no audible confirmation.
Trunk/Hatch Release	for 3 sec.	"TRUNK OPEN" Displays	By default, the system will also disarm/unlock.
Panic*	or  for 3 sec.	"PANIC" Displays	The system will sound the horn/siren for Panic Mode.


Register today at [www.CarAlarm.com](http://www.CarAlarm.com)

For warranty info & Download the latest operation guide.


### REMOTE START FUNCTIONS

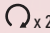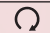FUNCTION	BUTTON(S)	LCD CONFIRMATION	NOTE
Engine Start/Stop	 x 2	"START" + Melody	Upon successful remote start the clock will display the remaining engine run time (M:SS). Take Over: Turn ignition key "ON", press brake pedal.
Run Time Extender*		Chirp + "START ON"	Clock will restart the run timer (only allowed once per remote start cycle).
Auto Start Mode*		"TEMP START ON" or "TEMP START OFF"	Remote starts your vehicle every 2, 3, or 4 hours (programmable) or upon temperature threshold (set in the remote start unit).

### WINDOW-MOUNT ANTENNA/RECEIVER

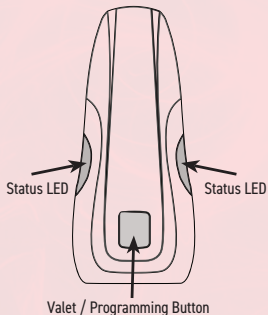



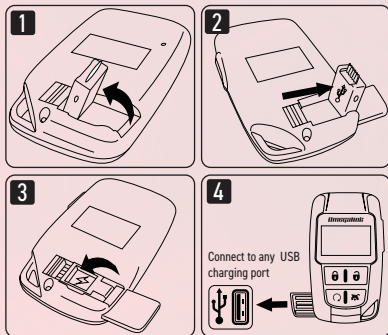









### CHARGING YOUR REMOTE

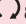

# OmeGalink







## 5-BUTTON LCD 2-WAY QUICK START OPERATION GUIDE

### OTHER CONTROLLER FUNCTIONS

FUNCTION	BUTTON(S)	LCD CONFIRMATION	NOTE
Remote Valet*	Hold  &  for 3 sec	Beep + Screen flashes	This disables remote start and the security system. The status LED will turn on. Repeat this process or press valet button once to exit valet mode.
Multi-Car	Hold  &  for 3 sec	Beep + "Shift" icon	The "Shift" icon appear when in car 2 operation. Repeat to return to car 1 operation.
Button Lock	Hold  &  for 3 sec	Beep + Screen flashes	When button lock is on the remote will not transmit. When any button is pressed the screen will flash 5x. Repeat to unlock.
Status Update*	Hold <b>P</b> &  for 3 sec	Beep + Icons change (if status has changed)	The screen icons will update to the current status of the system.
	<b>P</b> , 	"AUX 1"	AUX1 - Write function in "FUNCTION" column
	<b>P</b> x 2, 	"AUX 2"	AUX2 - Write function in "FUNCTION" column
	<b>P</b> x 3, 	"AUX 3"	AUX3 - Write function in "FUNCTION" column
	 & 	"AUX 4"	AUX4 - Write function in "FUNCTION" column
Power ON	Hold <b>P</b> for 3 sec.	The screen will turn on	The remote will resume all normal functions.
Power OFF	Hold <b>P</b> for 8 sec.	The screen will turn off	The remote will not function until powered on.

\*Function dependent upon vehicle & system availability. Consult installer to confirm feature availability.

### 2-WAY OPTIONS

OPTIONS	PROCEDURE	
Set Clock (H:M)	Hold <b>P</b> for 5 seconds. The controller will beep indicating it has entered option programming.	Tap <b>P</b> to scroll through each option.
Set Alarm Clock (H:M)		
Change Alarm Melody	Press  or  to scroll through each option setting.	Hold <b>P</b> for 3 seconds or no activity for 15 seconds to exit option programming
Alarm Clock On/Off		
Set Timer (H:M)	Hold <b>P</b> for 3 seconds or no activity for 15 seconds to exit option programming	
Set Timer Melody		
Timer On/Off		
Change Start/Stop Melody		
12/24 Hour Clock		
OTHER FEATURES	BUTTON(S)	LCD CONFIRMATION
Alarm Clock On/Off	<b>P</b> & 	Melody + "Clock" icon
Silent Mode On/Off	<b>P</b> & 	Beep OR "Vibrate" icon.
Parking Timer	Hold <b>P</b> & press 	Pressing  will scroll thru the timer length options.

# **Omegalink**

## **5-BUTTON LCD 2-WAY** **QUICK START OPERATION GUIDE**

**Visit [www.CarAlarm.com](http://www.CarAlarm.com) today**

To Download the latest **operation guide** and learn more about system upgrades & other features!

### **PROGRAMMING REMOTES TO THE SYSTEM**

Remote programming is dependant on the system being controlled. Please consult your dealer or the system guide for the proper programming instructions.

**Problems? Questions? Contact Customer Service:**

**800-554-4053 (toll free) | +1-770-942-9876 (outside USA)**



Scan to register  
& download the  
latest operation  
guide at  
CarAlarm.com!

 /omegard

 /c/omegard

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna., Increase the separation between the equipment and receiver., Connect the equipment into an outlet on a circuit different from that to which the receiver is connected., Consult the dealer or an experienced radio/TV technician for help.,

Warning! Changes or modifications made to this equipment not expressly approved by the part responsible for compliance could void the use's authority to operate the equipment

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.