

Manual Contents


New Account Creation.....	1
Adding a Vehicle.....	2
Login to Your Account.....	3
Password Recovery.....	3
Car Settings.....	4
Multiple Vehicle Access and Control.....	5
Vehicle Access and Control.....	5
Subscription & Service Plans.....	6

New Account Creation

After having CarLink installed, follow the steps below to create an account and begin using your system.

NOTE: If you have already created an account using one of the smartphone app's you will use the same login and password for the web based app.

1. Go to www.omegacarlink.com, click "user login" and select the "Not yet registered? Sign up" link to begin creating an account.
2. Enter an email address and password. This email and password will be your login credentials for using CarLink.

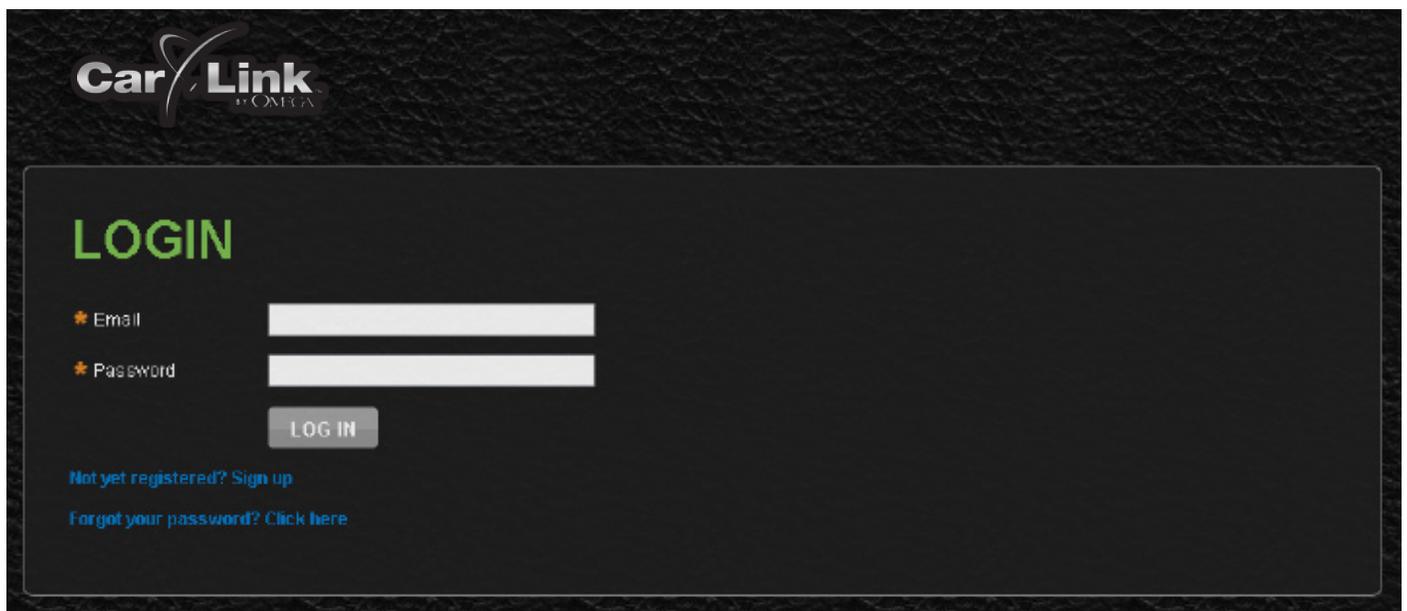

The screenshot shows the CarLink login interface. At the top left is the CarLink BY OMEGA logo. Below it, the word "LOGIN" is displayed in large green letters. There are two input fields: "Email" and "Password", each with a small star icon to its left. Below the password field is a grey "LOG IN" button. At the bottom left, there are two links: "Not yet registered? Sign up" and "Forgot your password? Click here", both in blue text.



Adding a Vehicle

Add your vehicle to the account by clicking the Add Vehicle button “” and enter the CarLink information below. Note you must be logged into your account.


1. Enter vehicle name.
2. Enter the 19 digit ICC ID/SIM number provided by the dealer.
3. Enter one time use, 4 digit code provided by the dealer.
4. Toggle alerts on or off.

NOTE: The alerts feature must be set up through one of the smartphone apps and is not available to website only users.

A screenshot of the CarLink website's 'ADD CAR' form. The page has a dark background with a subtle pattern. The main heading is 'ADD CAR' in large, bold, green letters. Below the heading, there are three input fields, each preceded by a red star icon: 'Name', 'SIM Number', and 'Passcode'. Below these fields are two checkboxes, each with a checked mark and a note in parentheses: 'Door Alert (receive alerts if the door alarm is triggered)' and 'Shock Alert (receive alerts if the shock alarm is triggered)'. At the bottom of the form is a button with the text 'SAVE'.

Login to Your Account

You must be logged into your account to control your vehicle with the CarLink website. Go to www.omegacarlink.com and enter your email and password.

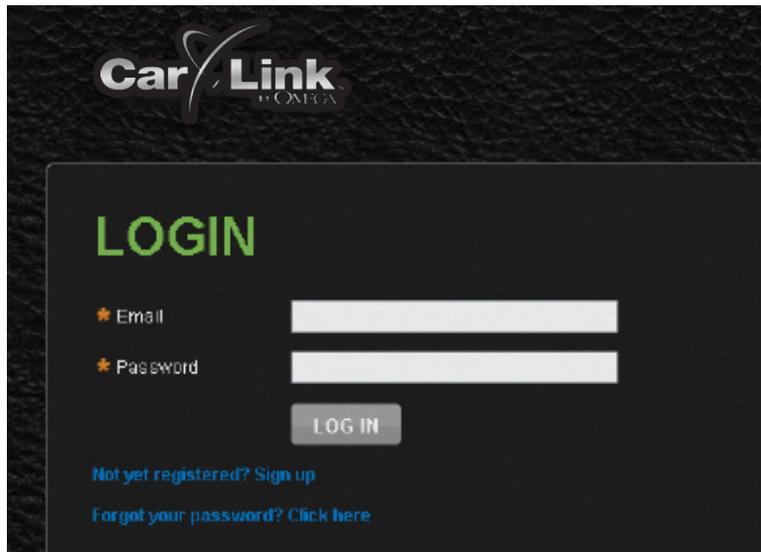


The image shows the CarLink login page. At the top, the CarLink logo is displayed. Below it, the word "LOGIN" is written in large green letters. There are two input fields: one for "Email" and one for "Password", both with a red asterisk icon to the left. Below the input fields is a grey "LOG IN" button. At the bottom of the form, there are two links: "Not yet registered? Sign up" and "Forgot your password? Click here", both in blue text.

Password Recovery

If for whatever reason you have forgotten your password, follow the steps below to recover it.

1. From the login screen, select the "Forgot your password?" link
2. Enter the login email address you used to create your account.
3. Click the Send button and your password will be emailed to you.

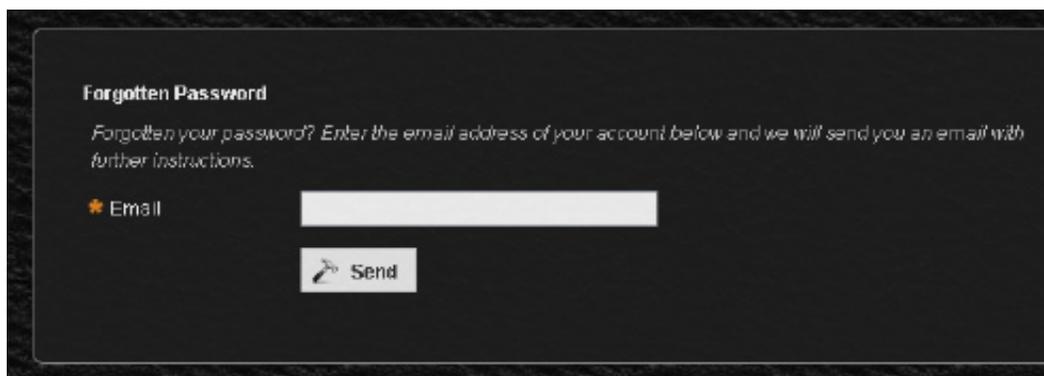

The image shows the "Forgotten Password" form. At the top, the text "Forgotten Password" is displayed. Below it, a message reads: "Forgotten your password? Enter the email address of your account below and we will send you an email with further instructions." There is an input field for "Email" with a red asterisk icon to the left. Below the input field is a grey "Send" button with a paper plane icon.


Car Settings

The Car Settings screen is where you will be able to edit the name of the vehicle.

This screen is also where you can select whether or not CarLink will notify you if your alarm system detects a door or shock sensor violation. This requires your system be installed with a compatible Code Alarm, Prestige or Pursuit brand alarm system. See your installation dealer for details.

NOTE: The alerts feature must be set up through one of the smartphone apps and is not available to website only users.

1. Select an existing vehicle from the Keypad/Home screen.
2. Edit the Vehicle Name or select one or both of the check boxes to toggle the alerts on or off.
3. Select SAVE to save your changes.

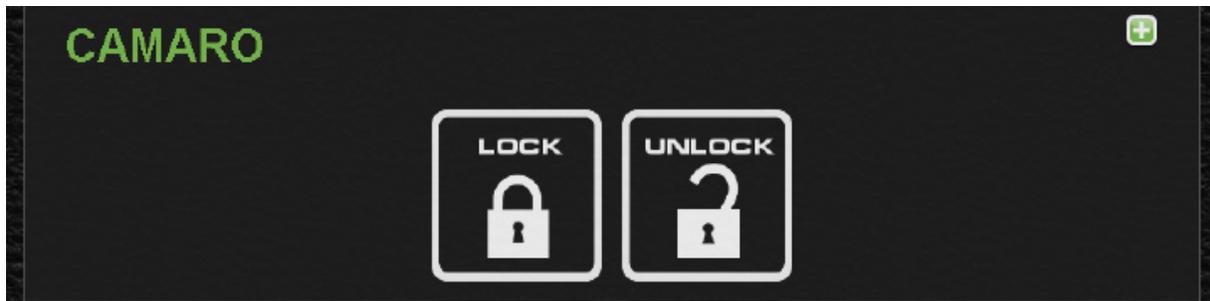

Multiple Vehicle Access and Control

If you have added more than one vehicle to your account they will be shown on the same web page, simply scroll to your vehicle to operate.



Vehicle Access and Control

Use the icons on the Keypad/Home Screen to operate the CarLink features for your vehicle. For more information and updates please visit www.omegacarlink.com.

Note: Once a feature is activated, the length of time your vehicle takes to respond will be affected by cellular data coverage or network congestion.



Buttons flash BLUE when activated, GREEN to confirm operation or RED to indicate the vehicle did not receive the command.

Button / Icon Functions



- Click this icon to lock your vehicle's doors



- Click this icon to unlock your vehicle's doors



- Click this icon to activate trunk release



- Click this icon to activate remote start. Click again to deactivate remote start.



- Click this icon to activate the AUX 1 output.




- Click this icon to activate the AUX 2 output.


Subscription & Service Plans

The Subscription screen is where you can view and modify your service plan for your CarLink system.

On the home page, you will see the vehicle interface on the right side of your screen. Click on “Subscription” to view your current service plan and edit it as needed.

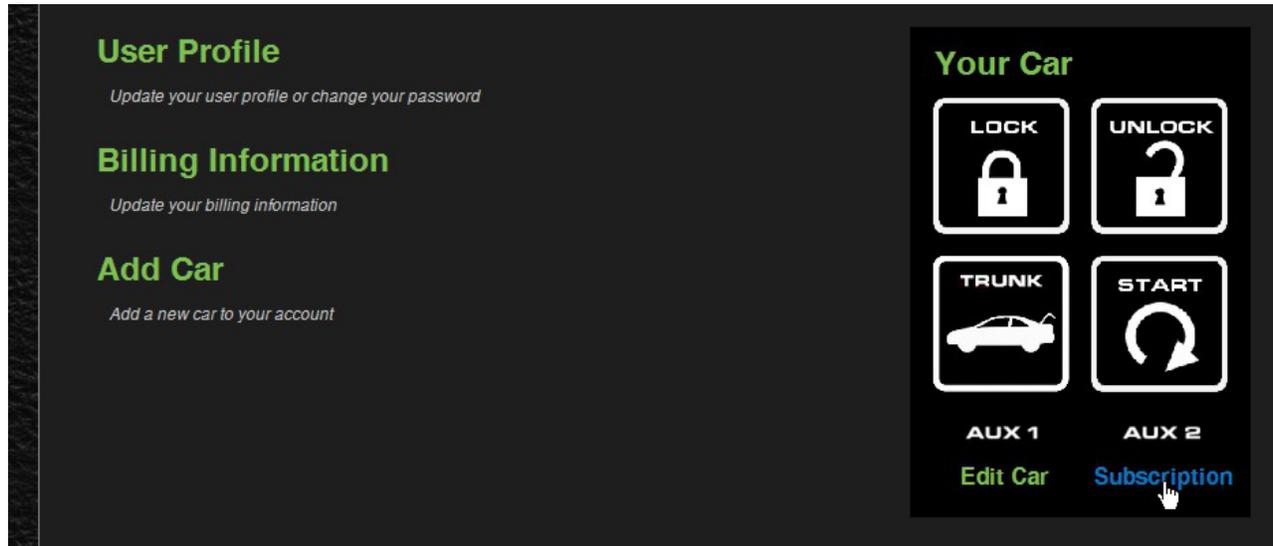


The Subscription screen below displays your current subscription term and your prior subscription term. Click on “Current Subscription” to edit or renew your current plan.

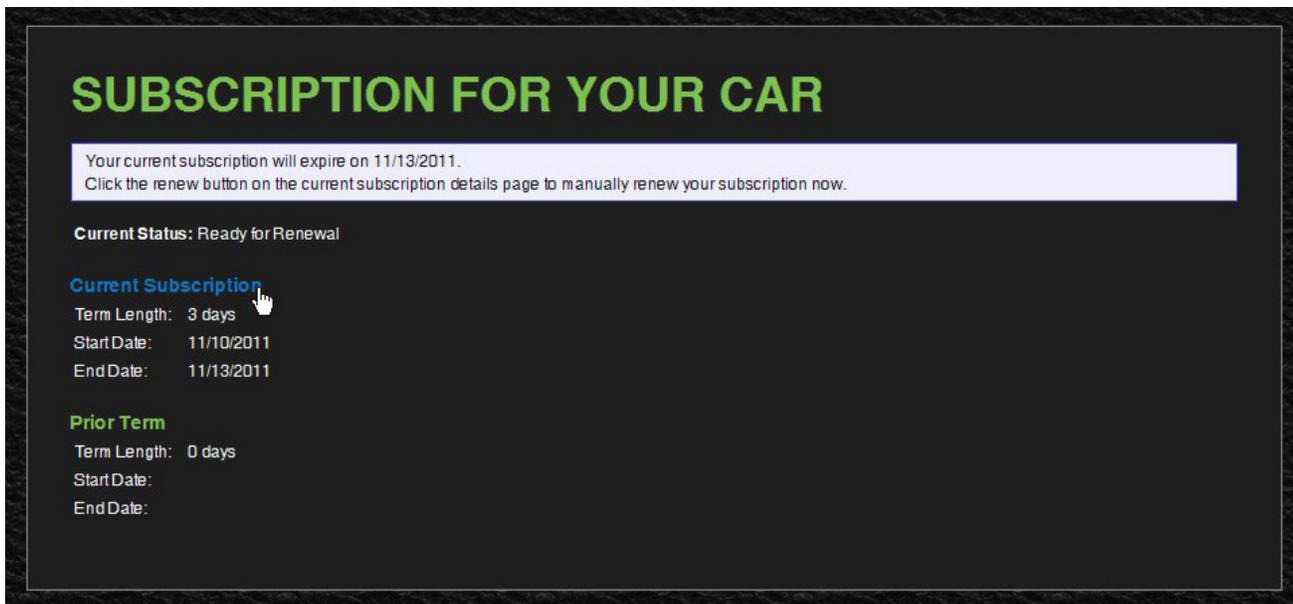

The Current Subscription screen shows your current term and your Auto-Renew status. You can click ON/OFF to enable/disable Auto-Renew. To manually renew or to activate your first subscription, click on "Renew".

NOTE: The screen below reflects the included 3 day trial period that's included when you first activate your system. Upon renewal, you can edit the auto-renew feature.

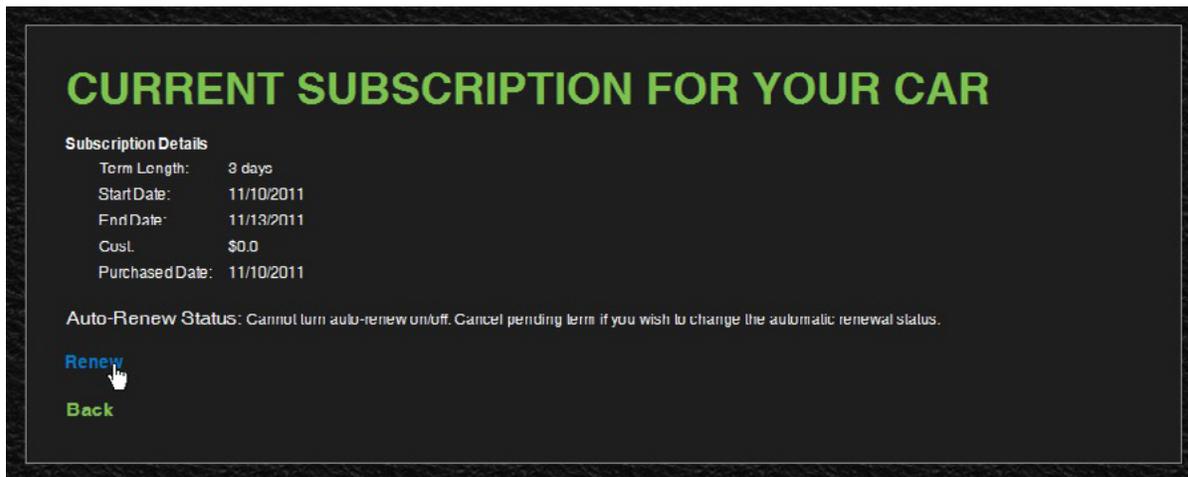

The Subscription renewal screen takes you through 5 easy steps to activate your first service term or to manually renew your service term. Just follow the screen prompts.

