

EXCALIBUR

RF-31-EDP

Deluxe OEM Upgrade & Range Extender



July 22, 2014
Operation Guide



Manuales En Español

Table Of Contents

Transmitter Overview	3
The Transmitter	3
Transmitter Functions	4
Other Remote Start Features	8
Low Battery/Low Temp Automatic Starting	8
Pit-Stop Feature	8
Security System Features	9
Last Door Locking/Arming	9
Automatic Re-locking	9
Using The Valet Switch	10
Emergency Override	10
The Status Light	10
Programming Transmitters	12
Programming Features	13
Programmable Features	13
Programmable Features Matrix	15

Transmitter part number:

1411-03

Call your dealer or visit
www.caralarm.com to order replacement
transmitters.

Battery replacement:

Remove the small screw from the lower back case, and separate the transmitter halves. Replace the **CR2032** battery (or with 2 CR2016 batteries) and reassemble the transmitter case.



This system is ECHO compatible, which means you can upgrade at anytime to have 2-way capability and greater range (up to 1-mile!). It's a simple upgrade that only takes minutes, so talk to your dealer about upgrading with ECHO TECHNOLOGY today!!

NOTE: This system will also respond to the lock, unlock, and trunk commands from your factory keyless entry remote on compatible vehicles.

Transmitter Functions

LOCK / ARM: Press and release the “LOCK” button.



- THE VEHICLE DOORS WILL LOCK AND THE STATUS LIGHTS WILL FLASH SLOW RED
- THE SYSTEM IS NOW MONITORING ENTRY POINTS

UNLOCK / DISARM: Press and release the “UNLOCK” button.



- THE VEHICLE DOORS WILL UNLOCK

TRUNK RELEASE: Press & hold the “TRUNK” button for 3 seconds.



- THE TRUNK WILL OPEN & THE DOORS WILL UNLOCK

REMOTE START: Press and release the “START” button twice within 5 seconds. (see programmable feature #5 for additional options)



- THE VEHICLE'S ENGINE WILL START AND THE STATUS LIGHTS WILL FLASH SLOW GREEN.
- Each time you park, set the climate controls to give you the desired interior temperature when you use the remote start.

Transmitter Functions (cont'd)

PANIC: Press & hold the “LOCK” or “UNLOCK” button for 3 seconds.



- THE HORN WILL SOUND AND THE DOORS WILL LOCK OR UNLOCK DEPENDING WHICH BUTTON IS PRESSED.

NOTE: PANIC MAY NOT BE AVAILABLE ON ALL VEHICLES

- PRESS LOCK OR UNLOCK AGAIN TO CANCEL PANIC MODE

LOW VOLTAGE/TEMP AUTO START: Press and release the “START” button within 5 seconds of locking/arming the system.



- THE ANTENNA WILL GIVE ONE BEEP TO INDICATE THE LOW VOLT/ LOW TEMP(15 DEGREE) AUTO-START IS ACTIVATED. SEE PAGE 8 FOR MORE INFO.

AUXILIARY FUNCTIONS 1-4:

The actual operation of these functions will vary from car to car. They are designed to operate extra vehicle functions like automatic sliding doors or motorized hatches. Aux 1-4 are virtual outputs only available on certain vehicles when this system is integrated with the vehicle's data network. Consult with your installer to find out if any of these functions are available for your vehicle. If so, confirm each operation with the controller and write each function in the blank spaces provided below.

- **Auxiliary 1 Function** (_____): To activate this function, press and release the “trunk” and “start” buttons simultaneously for 1 second).
- **Auxiliary 2 Function** (_____): To activate this function, press and release the “lock” and “trunk” buttons simultaneously for 1 second).
- **Auxiliary 3 Function** (_____): To activate this function, press and release the “unlock” and “start” buttons simultaneously for 1 second).
- **Auxiliary 4 Function** (_____): To activate this function, press and release the “unlock” and “trunk” buttons simultaneously for 1 second).

Other Remote Start Features

LOW BATTERY/LOW TEMP AUTOMATIC STARTING

This feature will automatically start the engine if the vehicle battery drops below 11 volts or the interior temperature drop to 15 (or 32) degrees fahrenheit. You must activate these features each time you park your car to use them. They can be activated one of two ways:

Method 1 - Valet Switch

- Turn the ignition switch “on”, then “off” (engine not running), and within 7 seconds press the valet switch twice. If there is a 2 second delay without additional valet button presses, the antenna will beep 2 times activating low voltage start mode.
- To activate low temp starting, enter low voltage start mode as described above but, after the antenna beeps twice, press the valet switch 1 time (15 degrees) or 2 times (32 degrees) within 5 seconds. The antenna will beep to confirm your selection.

Method 2 - With The Transmitter

- Within 5 seconds of pressing LOCK, press the START button. You will hear one beep from the antenna.

NOTE: When low temp start mode is activated, low voltage start is also activated. These features will operate once every two hours until the ignition key is turned “ON”.

PIT-STOP FEATURE

This feature allows you to leave your engine running for making quick errands. To use this feature, have the engine running normally from the ignition switch and your foot off the brake pedal. Press the Valet Switch twice; the antenna will beep 5 times. Turn the key off and the engine will remain running for the programmed run time. You can lock your vehicle with the transmitter to keep it secure while away.

LAST DOOR LOCKING/ARMING

This system can be configured to arm automatically when all the vehicle's doors are closed (see programmable feature #2). When all of the doors are closed after driving the vehicle, it will start a 30 second countdown (indicated by a fast flashing status light). After 30 seconds, the system will arm (and lock the doors if configured to do so). During the 30 second arming delay, if a point of entry is opened, the countdown will pause until all entry points are closed again. Turning ON the ignition key will cancel the last door arming sequence until the key is turned off and the doors are all closed once again.

AUTOMATIC RE-LOCKING

This automatically re-locks the doors if the system is disarmed from the remote. (see programmable feature #3). When unlocked by remote, the system will start a 90 second countdown (fast flashing red status light) to re-lock the system. This is useful if the controller accidentally disarms the system when it's kept in a purse or pocket where other items could potentially press the buttons. ENHANCED AUTO RE-LOCK allows you to cancel the countdown by pressing UNLOCK a second time within 5 seconds.

Using The Valet Switch

The valet switch is a push button built into the window mount antenna. It is used to perform emergency override and system programming (see inside of back cover for programming).

EMERGENCY OVERRIDE

If you were to lose or break your controller, you'd need to perform an emergency override to disarm the system. To do so, use the following steps:

STEP 1 - Enter the vehicle (the alarm may sound)

STEP 2 - Turn the ignition key to the "ON" position

STEP 3 - Press the valet switch (located in the window-mount antenna) once

STEP 4 - Turn the ignition "OFF".

The Status Light

The status lights, located in the window-mount antenna, provide a visual indication of the system's status via GREEN (remote start status) and RED (alarm status) lights.

SECURITY SYSTEM STATUS (RED LIGHT):

OFF: The system is unlocked and not performing any automatic functions.

FLASHING SLOW: The system is locked and monitoring all entry points.

FLASHING FAST: One of the automatic arming features is in progress.

AUTOMATIC TRANSMITTER VERIFICATION (RED LIGHT):

Every time you turn on the ignition key, the status light will flash a number of times equal to the number of controllers/transmitters programmed to the system. This unique security feature protects you from a potential thief (valet attendant, mechanic, installer, etc.) adding their own transmitter without and accessing your vehicle and it's contents at a later time (the perfect crime!).

ZONE VIOLATION RECALL (RED LIGHT):

If a zone is violated while the system is locked/armed, the RED status lights will flash a number of times to indicate exactly which zone(s), has been violated. It will store the last 2 violated circuits and continually repeat the flash pattern until the system is disarmed & the ignition key is turned ON.

2 FLASHES: Hood trigger

3 FLASHES: Door trigger

REMOTE START STATUS (GREEN LIGHT):

OFF: The remote start is off and in standby mode.

FLASHING SLOW: Remote start is activated.

COMBINATION INDICATIONS:

This indication reflect combinations of functions involving the security system AND remote start.

FAST ALTERNATES GREEN/RED: System locked w/ remote start activated.

Programming Transmitters

Standard Programming: Before you begin, have all transmitters which are to operate the system at hand and make sure the correct vehicle profile (see page 11) is selected on the controller(s).

Step 1 Then, turn the ignition “on”.

Step 2 Within 5 seconds of Step 1, press the Valet Switch 5 times. The antenna will beep, confirming that the system is ready to learn a transmitter code.

Step 3 Press the “**lock**” button on each transmitter one at a time. The antenna will beep once to confirm that each controller was learned. If a code is not received within 10 seconds of Step 2, the learning process will automatically exit.

Programming Features

Step 1 Turn the ignition key “ON”, then “OFF”

Step 2 Within 5 seconds of step 1, press the valet switch 5 times to access user features (10 times to access installer features).

~ The antenna will beep and the status light will turn on.

Step 3 Within 10 seconds of step 2, press the valet switch the number of times corresponding with the desired feature’s number.

~ The antenna will beep, equal to the selected feature.

Step 4 Change the feature by pressing the transmitter button that corresponds with the desired setting. The antenna will beep to correspond with the chosen setting.

Programmable Features

Feature #1 - Ignition Controlled Lock/Unlock

Lock And Unlock w/ Ignition (press “**lock**” button to program)

Lock w/ Ignition On (press “**unlock**” button to program)

Unlock w/ Ignition Off (press “**trunk**” button to program)

Off (press “**start**” button to program) - **DEFAULT**

This feature controls the lock/unlock operations when the ignition key is turned on/off,

Feature #2 - Last Door Locking

On (press “**lock**” button to program)

Off (press “**unlock**” button to program) - **DEFAULT**

“Last Door Locking” has the system automatically lock itself every time you exit the vehicle (the complete operation is described on page 9).

User Programmable Features (cont'd)

Feature #3 - Automatic Re-locking

On (press “**lock**” button to program)

Off (press “**unlock**” button to program) - **DEFAULT**

Enhanced (press “**trunk**” button to program)

“Automatic Re-locking”, described on page 9, re-locks the alarm if accidentally unlocked. Enhanced auto re-lock allows you to cancel the rearming sequence by pressing unlock a 2nd time within 5 seconds.

Feature #4 - Trunk Release Also Unlocks The Doors

On (press “**lock**” button to program) - **DEFAULT**

Off (press “**unlock**” button to program)

When turned on, configures the system to also unlock the doors when trunk release is used.

Feature #5 - Remote Start Activation

Press “start” button 1 time (press “**lock**” button to program)

Press “start” button 2 times (press “**unlock**” button to program) - **DEFAULT**

Press “start” button 3 times (press “**trunk**” button to program)

Press “start” button 4 times (press “**start**” button to program)

This feature changes how the remote start feature is activated using the transmitter.

Programmable Features Matrix

Feature Programming: Ignition on, off, press valet 5 times				
# Feature	Lock Button	Unlock button	Trunk button	"START" button
1 Ignition Lock/Unlock	On	Lock only	Unlock only	Off
2 Last Door Locking	On	Off		
3 Automatic Relocking	On	Off	Enhanced	
4 Unlock w/ Trunk Release	On	Off		
5 Remote Start Activation	1 press	2 presses	3 presses	4 presses

This device complies with FCC Rules part 15. Operation is subject to the following two conditions, (1) This device may not cause harmful interference and, (2) This device must accept any interference that may be received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.



www.caralarm.com | 800.554.4053



www.facebook.com/omegard