AU-NCT Installation Instructions

Normally Closed Trigger Module

RED Wire - Constant (+)12 Volts


BLACK Wire - Chassis Ground

GREEN Wire - Negative Alarm Trigger Output (-)

GREEN/BLACK Wires - Connect to normally closed trigger circuit in vehicle. These wires rest at ground with the doors closed and switch to nothing with the doors open.

Note: Unused Green/Black wires must be connected to ground.

Normally Closed OEM Door Triggers Diagram

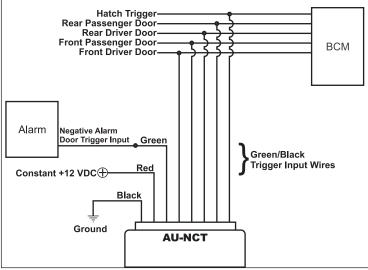

© 2013 Omega Research and Development

AU-NCT Installation Instructions

Normally Closed Trigger Module

RED Wire - Constant (+)12 Volts

BLACK Wire - Chassis Ground

GREEN Wire - Negative Alarm Trigger Output (-)

GREEN/BLACK Wires - Connect to normally closed trigger circuit in vehicle. These wires should rest at ground and switch away from ground when disconnected/triggered.

Note: Unused Green/Black wires must be connected to ground.

Open Circuit Alarm Trigger Diagram

Example: Trailer Disconnect, Content Theft, etc.

