


CHRYSLER DOORLOCK & IMMOBILIZER INTEGRATION MODULE

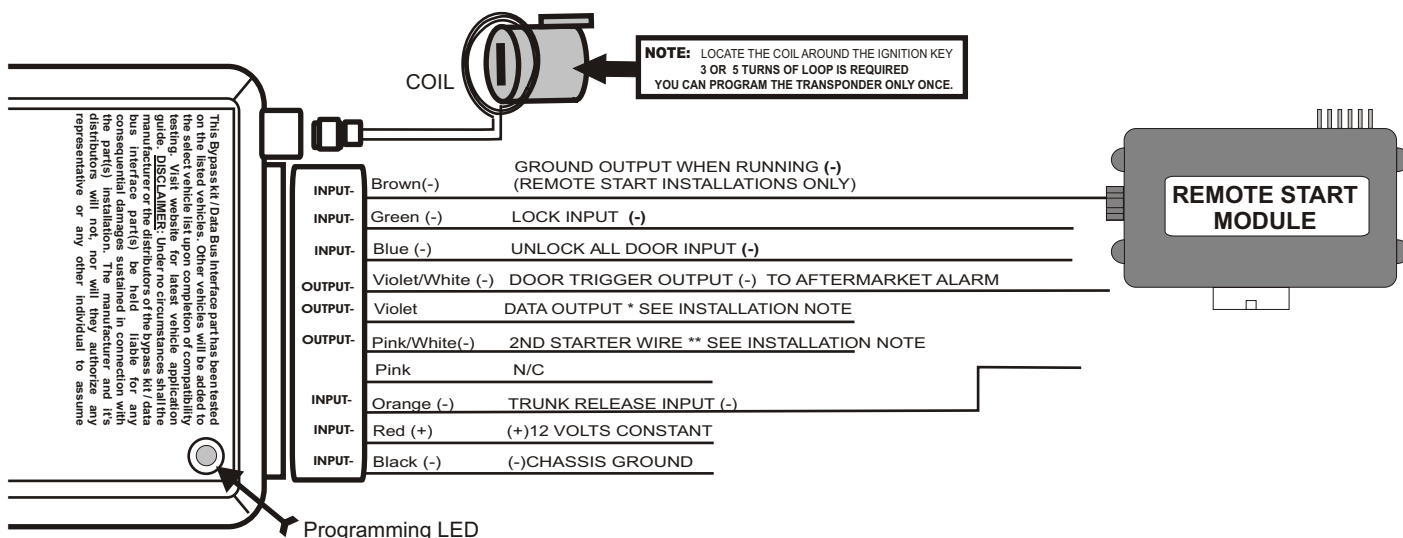

STEP #1 TRANSPONDER PROGRAMMING MODE

You will need 2 valid ignition keys. Proceed as follows:

- 1) Insert the first valid key into the ignition switch and turn the ignition switch "ON" for at least 5 seconds, but no longer than 15 seconds.
- 2) Turn the ignition switch "OFF" and remove the first key.
- 3) Insert the second valid key and turn the ignition switch "ON" within. After 10 secs. a chime will sound and the "SECURITY" light will begin to flash. Turn the ignition switch "OFF" and remove the second key.

YOU NOW HAVE 60 SECONDS TO PROCEED WITH THE NEXT STEP.

- 4) For the next 2 steps Position & Hold the module (screw side) close and towards the front of the ignition barrel (key cylinder). (Coil Loop is **not used** during programming)
- 5) With the help of a jumper wire, power up vehicle ignition.
- 6) After 10 seconds, a chime will sound. The "SECURITY" light will stop flashing, then turn "ON" for 3 seconds, then turn "OFF". The transponder portion of module is now programmed.

IMPORTANT NOTE:

Once the transponder Bypass portion has been programmed to a vehicle, it cannot be used on any other vehicle.

STEP # 2 DOORLOCK PROGRAMMING

Once all wire connections have been correctly made:

- 1 - Connect module to the 10-pin harness: the LED will illuminate to confirm correct connection.
- 2 - Insert key into ignition cylinder: LED will go "OFF".
- 3 - THE DATA BUS DOORLOCK INTERFACE MODULE IS NOW PROGRAMMED..

INSTALLATION NOTES:

- * Connect to WHITE/ORANGE Data Wire located in the steering column coming from SKIM module.
- ** Connect to VIOLET/BROWN 2ND Start Wire located in steering column coming from SKIM module.

TECH NOTE:

- No harness should be connected while programming Transponder Bypass.
- Do not install bypass module on a metal surface

Model \ Year	'05	'04
300/300c	✓	
Dakota	✓	
Durango	1	1
Magnum	✓	
Grand Cherokee	✓	
Grand Cherokee Limited	✓	

1 PLEASE, CHECK TECH NOTE: