


## 2002-05 NISSAN DOORLOCK INTEGRATION MODULE

Provides Lock, Unlock, OEM Alarm Arm, OEM Alarm Disarm, Panic

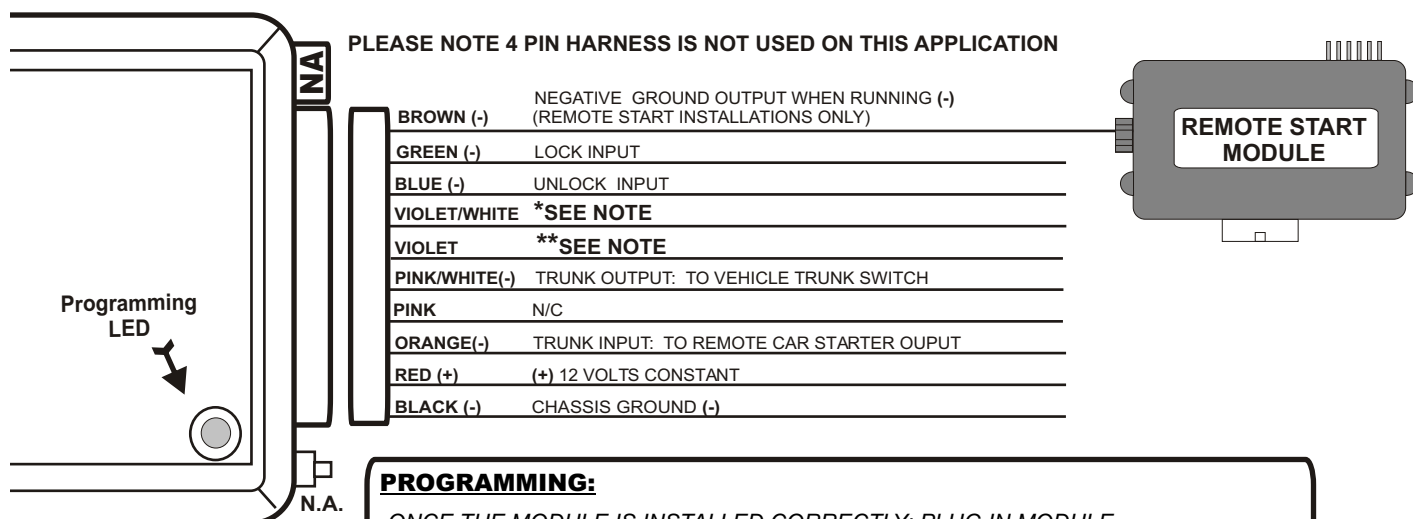

### PROGRAMMING:

-ONCE THE MODULE IS INSTALLED CORRECTLY: PLUG IN MODULE

-THE LED WILL FLASH 1 TIME.

If the LED stays ON, press the lock or unlock switch in the vehicle to activate the data line.

### TECH NOTES:

\* Cut Data wire from vehicle (See List)

\*\* Connect Violet wire only (See List)

<b>Nissan Maxima</b> <b>2005 - 2002</b> <i>Do not cut Data Wire</i>	Violet	Large Yellow wire from driver door
	Violet / White	N.C.
<b>Nissan Murano</b> <b>2005 - 2003</b> <i>Do not cut Data Wire</i>	Violet	Brown/White Wire from driver door
	Violet / White	N.C.
<b>Nissan Altima</b> <b>2005 - 2004</b>	Violet	Yellow / Green wire BCM Side (Wire from driver door)
	Violet / White	Yellow / Green wire Door Side (Wire from driver door)
<b>Nissan Quest 2005</b>	Violet	Yellow / Black Wire BCM Side (Wire from driver door)
	Violet / White	Yellow / Black wire Door Side (Wire from driver door)
<b>Nissan Armada</b> <b>2005 - 2004</b>	Violet	White / Violet wire BCM Side
	Violet / White	White / Violet wire Door Side (Wire from driver door)
<b>Nissan 350Z 2005</b> <i>Module does not control trunk</i> <i>Do not cut Data Wire</i>	Violet	Grey wire (with yellow dots) at BCM kick panel or Wire from driver door
	Violet / White	N.C.
<b>Nissan Titan 2005</b>	Violet	Green wire BCM side (Wire from driver door)
	Violet / White	Green wire Door Side (Wire from driver door)
<b>Infiniti FX 45 2004</b> <b>Infiniti Fx 35 2004</b> <i>Do not cut Data Wire</i>	Violet	Orange wire in large white connector: Left of steering or Wire from driver door.
	Violet / White	N.C.
<b>NOTE:</b>		Disarm unlock doors