

Immobilizer Bypass For Select GM Vehicles

See Chart On Back For Which Diagram & Switch Setting To Use

DIAGRAM #1: Installation Overview For Compatible Vehicles Equipped W/ Passlock II & Pass Key III



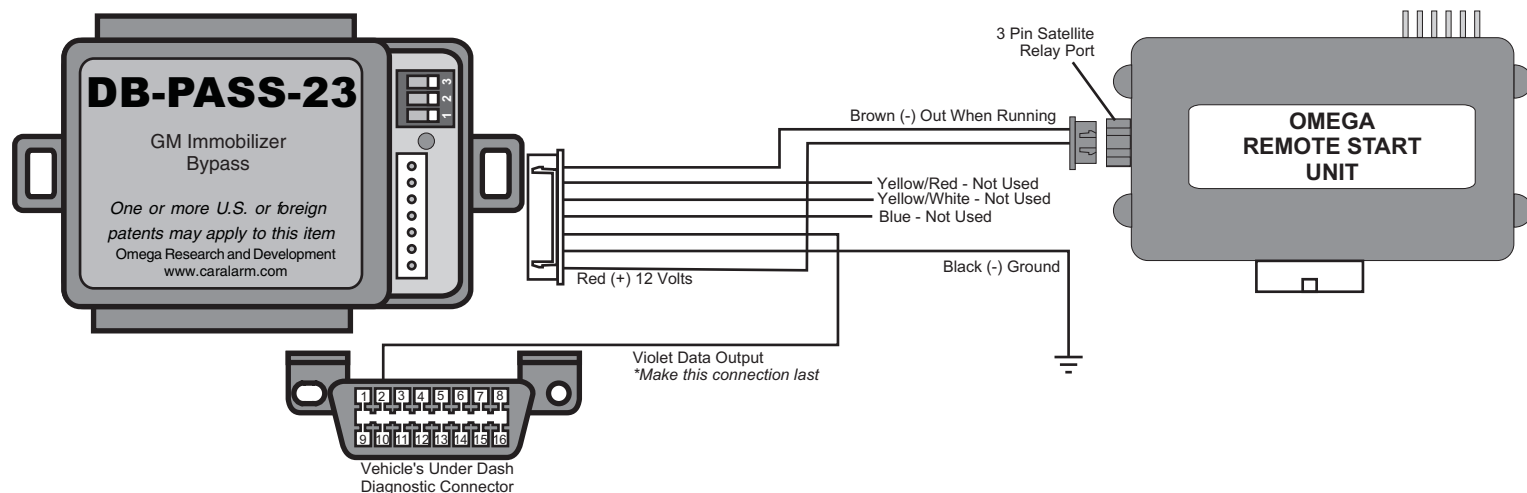


DIAGRAM #2: Installation Overview For Vehicles Equipped W/ Pass Key III

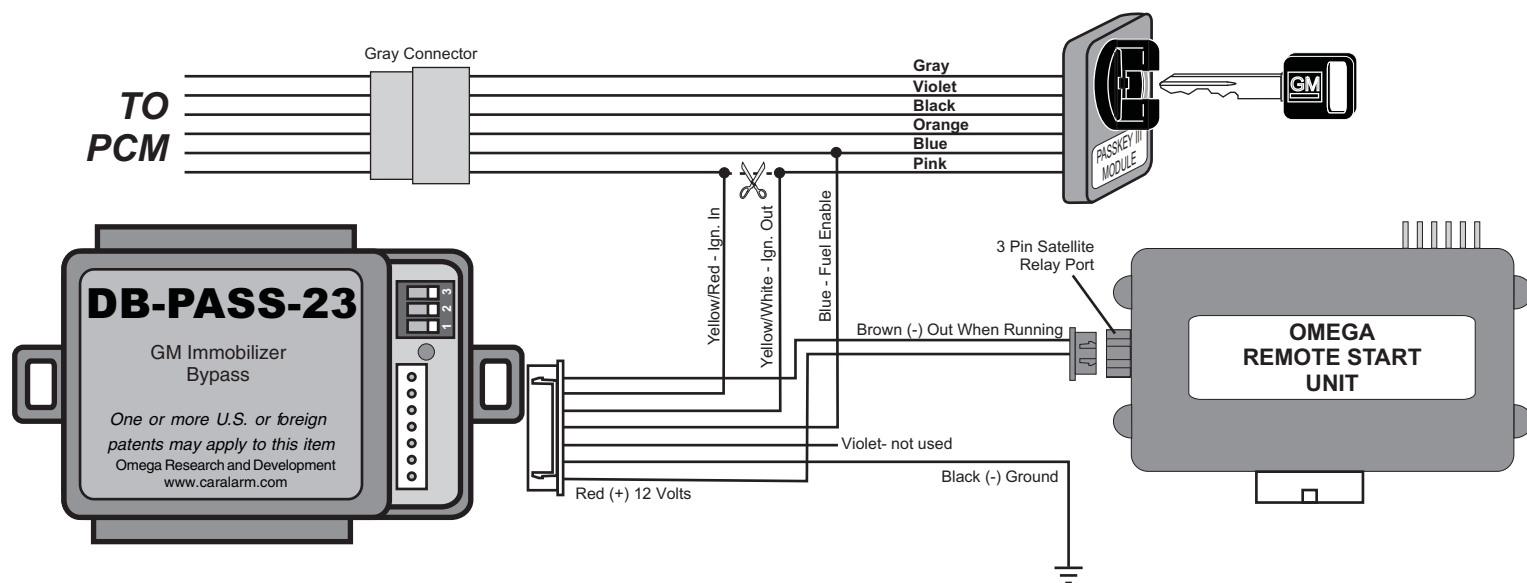

Switch Settings

(see chart on back for selecting a setting)

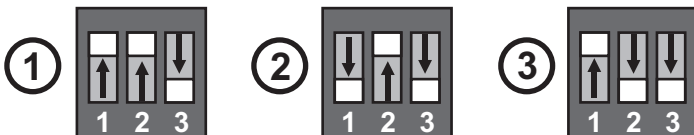

Programming Procedure For Switch Diagram #1:

1. After the installation is complete, select the proper switch setting (see chart on back of this sheet).
2. Place switch #3 in the up (programming) position.
3. Using a valid key, start the vehicle. The LED on the DB-PASS-23 will flash 4 times when it is programmed.
4. Turn the ignition off.
5. Place switch #3 in the down position. Test the remote car starter.

Programming Procedure For Diagram #2:

NO PROGRAMMING NECESSARY

Vehicle	Switch Setting	Use Diagram #
*All Compatible Passlock II Vehicles except Cavalier & Sunfire(trucks, SUV's, etc.)	1	1
<u>Buick</u>		
LeSabre 2000-'03	1	1
Park Avenue 1997-'03	1	1
Rendezvous	1	1
Ultra 1997-'03	1	1
<u>Cadillac</u>		
Deville 2000-'03	1	1
Seville SLS 1998-'03	1	1
Seville STS 1998-'02	1	1
<u>Chevrolet</u>		
Cavalier 2000-'03	2	1
Venture 1999	3	2
Venture 2000-'03	1	1
<u>Oldsmobile</u>		
Aurora 2001-'03	1	1
Silhouette 1999	3	2
Silhouette 2000-'03	1	1
<u>Pontiac</u>		
Aztec 2001-'03	1	1
Bonneville 2000-'03	1	1
Grand Prix 2004	1	1
Montana 1999	3	2
Montana 2000-'03	1	1
Transport 1999	3	2
Sunfire 2000-'03	2	1