


# IB-F1 Installation Instructions

### **FORD PATS Bypass Kit**

Provides Temporary Bypass Of The Immobilizer System For Remote Starting

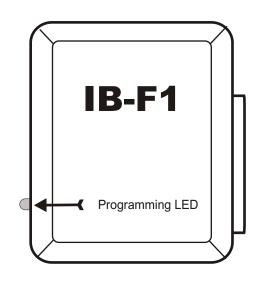


556444	NEG 1711/2 OF GUINE 14/1/21 FURNISH
BROWN	NEGATIVE GROUND WHEN RUNNING
GREEN	ECM - TX
BLUE	ECM - RX
VIOLET	N/C
RED	IGNITION
BLACK	CHASSIS GROUND

NOTE:

ONLY ONE (1) VALID KEY IS NECESSARY TO PROGRAM PKF-1

#### **BYPASSKIT PROGRAMMING**

- 1- Once the BYPASSKIT unit is properly connected, Turn key to "ON" position.
- 2- Simultaneously, the LED on the module and vehicle "THEFT" light indicator will illuminate & then turn off.
- 3- The BYPASSKIT is now programmed.



PIN	CIRCUIT FUNCTION
1	Ground
2	Ignition
3	RX
4	TX






PIN CIRCUIT FUNCTION			
1	Ignition		
2	Ground		
3	TX		
4	RX		

## TYPE C



PIN	CIRCUIT FUNCTION
1	Ground
2	Ignition
3	RX
4	TX

#### TYPE D



PIN	CIRCUIT FUNCTION
1	RX
2	TX
3	Ground
4	Ignition

Model \ Year	'05	'04	'03	'02	'01	'00	'99
Contour						~	~
Crown Victoria				~	~	~	-
Excursion	~	~	~	~	~	~	
Expedition					~	~	~
Explorer					1	~	~
F150			~	•	-	~	~
F250			~	~	-		
F350			-	~	~		
Heavy Truck (CF)					4	~	
Mustang		<b>V</b>	~	~	~	~	1
Ranger					1	~	~
Taurus							1
Windstar					~	~	~
Blackwood				~			
Continental					~	~	~
Navigator					~	-	-
Town Car				~	~	~	1
B3000					-	~	-
B4000					~	~	~
Cougar				~	~	~	~
Grand Marquis				~	~	4	~
Mountaineer					1	~	<b>*</b>
Mystique						4	~
Sable							1

1 Manufactured before July 24, 2000

# Keys required to program bypasskit: 1