


DOORLOCK INTEGRATION MODULE FOR MULTIPLE VEHICLE PLATFORMS

Provides Lock, Unlock, Trunk Release, OEM Alarm Arm, OEM Alarm Disarm, Door Trigger, Horn Honk

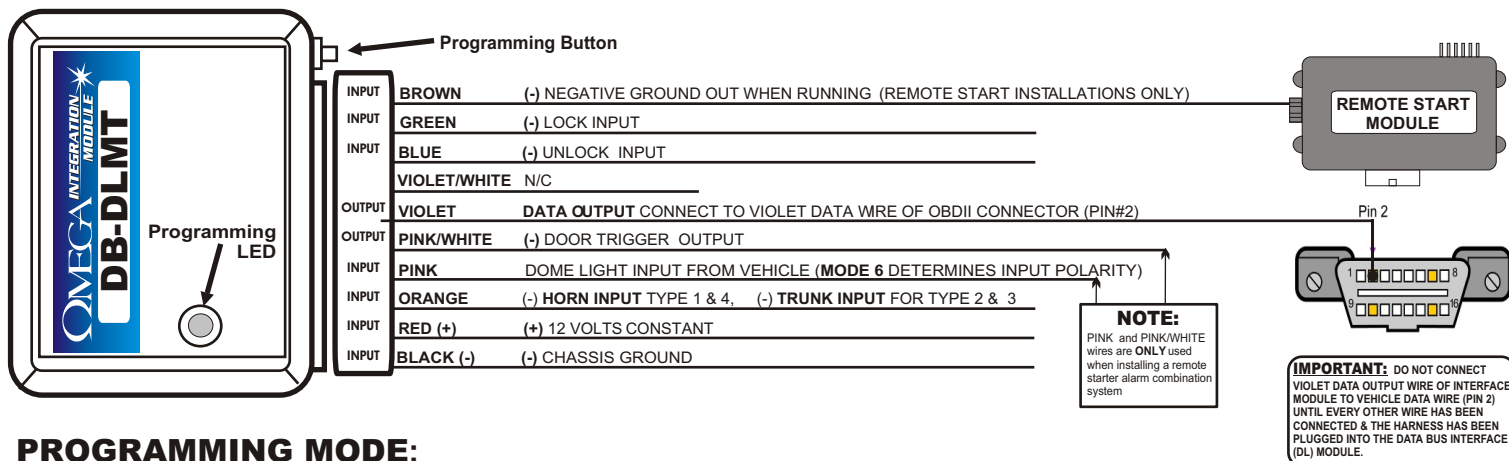

PROGRAMMING MODE:

- 1- Once kit has been installed correctly, press and release the programming button until vehicle type is chosen. The LED will flash to indicate which vehicle type is chosen.
- 2- Once vehicle type is chosen, press and hold program button until led blinks once.
- 3- Release programming button, the LED will come "ON" solid.
- 4- Start the vehicle by key: the LED turns "OFF".

***THE MODULE IS NOW PROGRAMMED FOR OPERATION.**

VEHICLE COMPATIBILITY:

TYPE 1:		
ENVOY	2002-2004	
TRAILBLAZER	2002-2004	
BRAVADA	2002-2004	
RAINIER	2004	
TYPE 2:		
GRAND AM	2001-2002	(W/ OEM REMOTE ONLY)
ALERO	2000-2003	(W/ OEM REMOTE ONLY)
DEVILLE	1998-2004	
AURORA	2001-2002	
BONNEVILLE	2002-2003	
LE SABRE	2002-2004	
CADILLAC CTS	2003-2004	
CADILLAC SRX	2004	
IMPALA LS	2003	
TYPE 3:		
PARK AVENUE	1997-2004	
CADILLAC STS	1998-2003	
CADILLAC SLS	1998-2004	
TYPE 4:		
GMC/CHEVROLET PICKUP		
1500, 2500, 3500	2003-2004	
YUKON	2003-2004	
AVALANCHE	2003-2004	
SUBURBAN	2003-2004	
TAHOE	2003-2004	
ESCALADE	2003-2004	
H2 HUMMER	2003-2004	

PROGRAMMING FEATURES:

Depending on the type of vehicle and/or aftermarket system being used in conjunction with this module: Some options such as driver's door priority may have to be modified to correctly emulate the OEM features. See Feature Programming Chart below.

FEATURE PROGRAMMING:

- 1-Start with the key in "OFF" position. Press and hold the program button for 2 seconds. LED will flash for approximately 3 seconds. PAUSE, then flash once more to indicate entry into FEATURE1 (DOORLOCK SELECTION)
- 2-To advance to next feature, press the program button again. A flash of LED will confirm what feature you are in.
Ex: 1 flash = FEATURE 1, 2 flashes = FEATURE2, and so on...
- 3-Once you have entered the desired feature: you may then change your settings. Select the setting by pressing the LOCK or UNLOCK button from your aftermarket transmitter. LOCK is option 1, UNLOCK is option 2.
- 4-The vehicle horn will chirp once (1X) or twice (2X) to indicate option level.
- 5-To exit the FEATURE PROGRAMMING: Press and hold the program button until the LED flashes once (1X).
- 6-To return or change another feature, go to step 1.

PROGRAMMABLE FEATURES

FEATURE	LOCK	UNLOCK
1. Driver's Door Priority	ON	OFF
6. Dome Light Polarity	(+)	(-)
7. Reset All Features	Reset	N/A

ONLY FEATURES 1, 6 AND 7 ARE AVAILABLE