


# IB-UCH2 Installation Instructions

## CHRYSLER SENTRY KEY IMMOBILIZER BYPASS

Make	Model	2004	2005
CHRYSLER	300C	●	
	Pacifica		●
	Town & Country	●	●
DODGE	Caravan	●	●
	Durango		●
	Magnum	●	
JEEP	Grand Cherokee	●	
	Liberty	●	



DISCLAIMER : Under no circumstances shall the manufacturer or the distributors of the IB-UCH2 parts be held liable for consequential damages sustained in connection with the IB-UCH2. The manufacturer and it's distributors will not, nor will they authorize any representative or any other individual to assume obligation or liability in relation to the IB-PKU-CH other than its replacement.

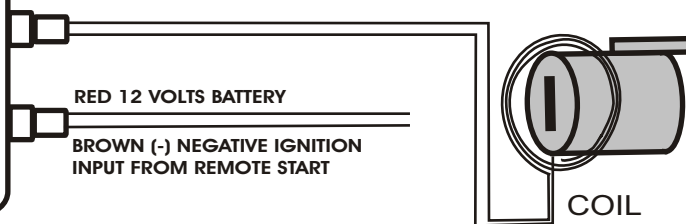

Locate the coil around the ignition cylinder

**NOTE: 2 OR 3 TURNS OF LOOP IS REQUIRED**

### TRANSPONDER PROGRAMMING MODE:

After completing the remote start and IB-UCH2 installation, confirm that the vehicle will start by simply inserting one valid ignition key into the ignition switch and activating the remote start. Then, perform the following procedure to program the module.

NOTE: You will need 2 valid ignition keys to program the IB-UCH2.

- 1- Insert the first valid key into the ignition switch and turn it "ON" for at least 3 seconds (no more than 15 seconds).
- 2- Turn the ignition switch "OFF" and remove the first key.
- 3- Insert the second valid key and turn the ignition switch "ON" within 15 seconds. After 10 seconds, a chime will sound and the "SECURITY" light will begin to flash. Turn the ignition switch "OFF" and remove the second key.
- 4- Within 60 seconds of step 3, position the SCREW side of the PKU module close to and towards the ignition barrel.
- 5- Use a jumper wire to supply +12 volts to the primary ignition wire in the vehicle.
- 6- After 10 seconds, a chime will sound. The "SECURITY" light will stop flashing, then turn "ON" for 3 seconds, then turn "OFF". The transponder bypass portion of module is now programmed.
- 7- Place the antenna coil around the ignition switch antenna, mount the IB-UCH2 module under the dash.
- 8- Confirm proper operation by testing the remote start system.

IS\_IB-UCH2 11/10/04


# IB-UCH2 Installation Instructions

## CHRYSLER SENTRY KEY IMMOBILIZER BYPASS

Make	Model	2004	2005
CHRYSLER	300C	●	
	Pacifica		●
	Town & Country	●	●
DODGE	Caravan	●	●
	Durango		●
	Magnum	●	
JEEP	Grand Cherokee	●	
	Liberty	●	



DISCLAIMER : Under no circumstances shall the manufacturer or the distributors of the IB-UCH2 parts be held liable for consequential damages sustained in connection with the IB-UCH2. The manufacturer and it's distributors will not, nor will they authorize any representative or any other individual to assume obligation or liability in relation to the IB-PKU-CH other than its replacement.

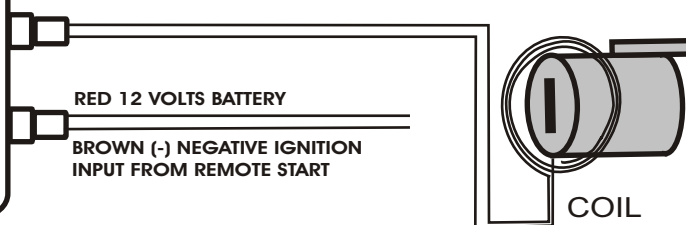

Locate the coil around the ignition cylinder

**NOTE: 2 OR 3 TURNS OF LOOP IS REQUIRED**

### TRANSPONDER PROGRAMMING MODE:

After completing the remote start and IB-UCH2 installation, confirm that the vehicle will start by simply inserting one valid ignition key into the ignition switch and activating the remote start. Then, perform the following procedure to program the module.

NOTE: You will need 2 valid ignition keys to program the IB-UCH2.

- 1- Insert the first valid key into the ignition switch and turn it "ON" for at least 3 seconds (no more than 15 seconds).
- 2- Turn the ignition switch "OFF" and remove the first key.
- 3- Insert the second valid key and turn the ignition switch "ON" within 15 seconds. After 10 seconds, a chime will sound and the "SECURITY" light will begin to flash. Turn the ignition switch "OFF" and remove the second key.
- 4- Within 60 seconds of step 3, position the SCREW side of the PKU module close to and towards the ignition barrel.
- 5- Use a jumper wire to supply +12 volts to the primary ignition wire in the vehicle.
- 6- After 10 seconds, a chime will sound. The "SECURITY" light will stop flashing, then turn "ON" for 3 seconds, then turn "OFF". The transponder bypass portion of module is now programmed.
- 7- Place the antenna coil around the ignition switch antenna, mount the IB-UCH2 module under the dash.
- 8- Confirm proper operation by testing the remote start system.

IS\_IB-UCH2 11/10/04